

# **Technical data sheet** Safety laser scanner

Part no.: 53800322

RSL450P-L/CU400P-AIDA-OF



### Contents

- Technical data
- Dimensioned drawings
- Electrical connection
- Operation and display
- Notes
- Accessories











### **Technical data**



#### Basic data

Series	RSL 400
Application	Mobile danger zone guarding
	Mobile side guarding
	Stationary access guarding
	Stationary danger zone guarding

### **Functions**

Functions	Data output, configurable
	Four-field mode
	PROFIsafe
	Resolution, selectable

### **Characteristic parameters**

Туре	3, IEC/EN 61496
SIL	2, IEC 61508
SILCL	2, IEC/EN 62061
Performance Level (PL)	d, EN ISO 13849-1
PFH <sub>D</sub>	9E-08 per hour
Mission time T <sub>M</sub>	20 years, EN ISO 13849-1
Category	3, EN ISO 13849

#### Protective field data

Scanning angle	270 °
Minimum adjustable range	50 mm
Number of field pairs, reversible	Up to 100
Number of quads, reversible	50
Number of protective functions	2 Piece(s)
Number of independent sensor configurations	Up to 10
Diffuse reflection, min.	1.8 %
Operating range	0 6.25 m

### Warning field data

Up to 100
0 20 m
150 mm x 150 mm
1.8 %

### **Optical data**

Light source	Laser, Infrared
Laser light wavelength	905 nm
Laser class	1, IEC/EN 60825-1:2007
Transmitted-signal shape	Pulsed
Repetition frequency	90 kHz

#### Measurement data

Distance resolution	1 mm
Detection range	0 50 m
Diffuse reflection	20 %
Angular resolution	0.1 °

### **Electrical data**

Protective circuit	Overvoltage protection

Perf	forr	nan	се	data
------	------	-----	----	------

Supply voltage U <sub>B</sub>	24 V, DC, -30 20 %
Current consumption (without load),	1,000 mA, (use power supply unit with 3
max.	A)
Power consumption may	24 W. For 24 V. plus output load

PROFINET

### Interface

Type

.,,,,	
Profinet	
Function	Process
PROFINET device	Device acc. to Spec V2.3.4
GSDML	GSDML acc. to Spec V2.3.2
Profile	PROFINET/PROFIsafe
Conformance class	C
Network load class	III
Security level	1
Switch functionality	IRT-ready 2-port switch acc. to IEEE 802, integrated in connection unit
Port properties	Auto-Crossover
	Auto-Negotiation
	Auto-Polarity
I&M	0 - 4
Supported topologies	MRP client
	SNMP
Safety-related switching signals	4 Piece(s)

### Service interface

Туре	Bluetooth, USB
Bluetooth	
Function	Configuration/parametering
Frequency band	2,400 2,483.5 MHz
Radiated transmitting power	Max. 4.5 dBm (2.82 mW), class 2

### **USB**

Function	Configuration/parametering
Connection	USB 2.0 mini-B, socket
Transmission speed, max.	12 Mbit/s
Cable length	≤ 5m Longer cable lengths are possible using active cables.

### Connection

Number of connections	4 Piece(s)
Connection 1	
Function	Voltage supply
Type of connection	PROFINET push-pull 24V
Connection 2	
Function	PROFINET/PROFIsafe communication, input

PROFINET SCRJ push-pull ISO/

IEC 61754-24-2

### Connection 3

Type of connection

Connection 3		
	Function	PROFINET/PROFIsafe communication, output
	Type of connection	PROFINET SCRJ push-pull ISO/ IEC 61754-24-2

## **Technical data**



Connection 4	
Function	Voltage supply
Type of connection	PROFINET push-pull 24V
Mechanical data	
Dimension (W x H x L)	140.2 mm x 200 mm x 142 mm
Housing material	Metal
	Plastic
Metal housing	Diecast zinc
Lens cover material	Plastic/PC
Net weight	4,500 g
Housing color	Yellow, RAL 1021
Type of fastening	Mounting plate
	Through-hole mounting
	Via optional mounting device
Operation and display	
Type of display	Alphanumerical display
	LED indicator
Number of LEDs	11 Piece(s)
Type of configuration	Software Sensor Studio
Operational controls	Software Sensor Studio
Environmental data	
Ambient temperature, operation	0 50 °C
Ambient temperature, storage	-20 60 °C
Relative humidity (non-condensing)	15 95 %

### Certifications

IP 65
III, EN 61140
TÜV Süd
DIN 40839-1/3
EN 61496-1
EN 60068-2-6
IEC 60068-2-29
US 10,304,307B
US 7,656,917 B
US 7,696,468 B
US 8,520,221 B

### Classification


Customs tariff number	85365019
eCl@ss 5.1.4	27272705
eCI@ss 8.0	27272705
eCl@ss 9.0	27272705
eCl@ss 10.0	27272705
eCl@ss 11.0	27272705
ETIM 5.0	EC002550
ETIM 6.0	EC002550
ETIM 7.0	EC002550

## **Dimensioned drawings**



All dimensions in millimeters

## Dimensions safety laser scanner with connection unit

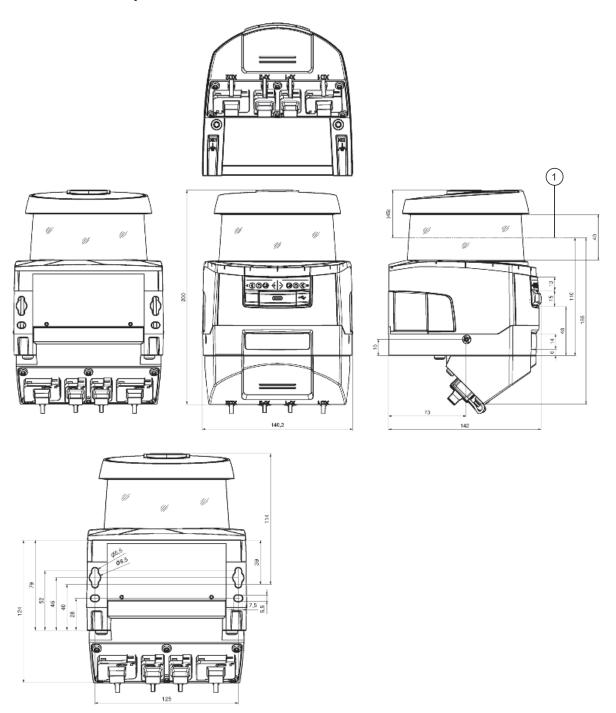



1 Scan level

## **Dimensioned drawings**



Mounting dimensions safety laser scanner with connection unit

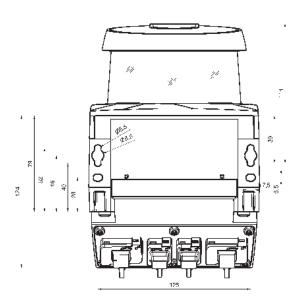

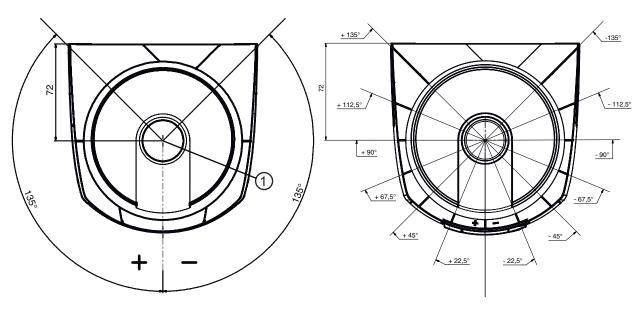

1 Reference point for distance measurement and protective field radius

## **Electrical connection**

Connection 1	XD1
Function	Voltage supply
Type of connection	PROFINET push-pull 24V
No. of pins	5 -pin

## **Electrical connection**



Pin	Pin assignment
1	+24V
2	0 V
3	+24V
4	0 V
5	GND



Connection 2	XF1
Function	PROFINET/PROFIsafe communication, input
Type of connection	PROFINET SCRJ push-pull ISO/IEC 61754-24-2
Connection 3	XF2
Function	PROFINET/PROFIsafe communication, output
Type of connection	PROFINET SCRJ push-pull ISO/IEC 61754-24-2
Connection 4	XD2
Function	Voltage supply
Type of connection	PROFINET push-pull 24V
No. of pins	5 -pin

1	(5)

Pin	Pin assignment
1	+24V
2	0 V
3	+24V
4	0 V
5	GND

## **Operation and display**

LED	Display	Meaning
1 -	Off	Device switched off
	Red, continuous light	OSSD off
	Red, flashing	Error
	Green, continuous light	OSSD on
2 -	Off	RES deactivated or RES activated and released
	Yellow, flashing	Protective field occupied
	Yellow, continuous light	RES activated and blocked but ready to be unlocked - protective field free and linked sensor is enabled if applicable
3 -	Off	Free warning field
	Blue, continuous light	Warning field interrupted
4 -	Off	Four field mode: warning field 3 free
	Blue, continuous light	Four field mode: warning field 3 interrupted
5 -	Yellow, flashing	Four field mode: warning field 2 interrupted
6 -	Off	No function
7 PWR	Off	Device switched off
	Red, continuous light	Error during self test or internal communication problems
	Green, flashing	PROFINET wave function active
	Green, continuous light	Device switched on, supply voltage applied, no internal error
8 PS	Off	PROFIsafe communication not initialized or switched off
	Green, flashing	Device in passive state or PROFINET wave function active
	Green, continuous light	Device on PROFIsafe active
	Red, flashing	PROFIsafe configuration failed
	Red, continuous light	PROFIsafe communication error
9 NET	Off	PROFINET communication not initialized or inactive
	Green, flashing	PROFINET bus initialization or PROFINET wave function active

## Operation and display



LE	D	Display	Meaning
9	NET	Green, continuous light	PROFINET active, data exchange with IO controller active
		Orange, flashing	Ethernet topology error
		Red, flashing	Ethernet configuration failed, no data exchange or exchange of invalid data
		Red, continuous light	Bus error, no communication
10	LNK/ACT1	Off	No Ethernet link present
		Green, continuous light	Ethernet link active, no current data transmission
		Green/orange, flashing	Ethernet link active, current data transmission
11	LNK/ACT2	Off	No Ethernet link present
		Green, continuous light	Ethernet link active, no current data transmission
		Green/orange, flashing	Ethernet link active, current data transmission

### **Notes**



### Observe intended use!



- \$ The product may only be put into operation by competent persons.
- \$ Only use the product in accordance with its intended use.



### WARNING! INVISIBLE LASER RADIATION - CLASS 1 LASER PRODUCT



The device satisfies the requirements of IEC 60825-1:2014 (EN 60825-1:2014) safety regulations for a product of laser class 1 as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 56" from May 8, 2019.

- ♥ Observe the applicable statutory and local laser protection regulations.
- The device must not be tampered with and must not be changed in any way. There are no user-serviceable parts inside the device. Repairs must only be performed by Leuze electronic GmbH + Co. KG.

### **Accessories**

## Mounting technology - Mounting brackets

	Part no.	Designation	Article	Description
	53800134	BT840M	Mounting bracket	Application: Mounting on chamfered 90° corner Dimensions: 84.9 mm x 72 mm x 205.2 mm Color: Yellow, RAL 1021 Type of fastening, at system: Through-hole mounting Type of fastening, at device: Screw type Material: Metal
2	53800132	BTF815M	Mounting bracket	Application: Mounting bracket for floor mounting Dimensions: 186 mm x 120 mm x 288 mm Scan level height: 150 mm Color: Yellow, RAL 1021 Type of fastening, at system: Through-hole mounting Type of fastening, at device: Screw type Material: Metal
A	53800133	BTF830M	Mounting bracket	Application: Mounting bracket for floor mounting Dimensions: 186 mm x 275 mm x 288 mm Scan level height: 300 mm Color: Yellow, RAL 1021 Type of fastening, at system: Through-hole mounting Type of fastening, at device: Screw type Material: Metal

## **Accessories**



## Mounting

	Part no.	Designation	Article	Description
P	53800131	BTP800M	Loop guard	Dimensions: 160 mm x 169 mm Color: Black Material: Metal

### General

Part no.	Designation	Article	Description
430400	RS4-clean-Set1	Cleaning set	Number of cleaning cloths: 40 Piece(s) Content of cleaning fluid: 150 ml

## Services

Part no.	Designation	Article	Description
S981051	CS40-I-141	Safety inspection "Safety laser scanners"	Details: Checking of a safety laser scanner application in accordance with current standards and guidelines. Inclusion of the device and machine data in a database, production of a test log per application. Conditions: It must be possible to stop the machine, support provided by customer's employees and access to the machine for Leuze employees must be ensured.  Restrictions: Travel costs and accommodation expenses charged separately and according to expenditure.
S981047	CS40-S-141	Start-up support	Details: For safety devices including stopping time measurement and initial inspection.  Conditions: Devices and connection cables are already mounted, price not including travel costs and, if applicable, accommodation expenses.  Restrictions: Max. 3 h., no mechanical (mounting) and electrical (wiring) work performed, no changes (attachments, wiring, programming) to third-party components in the nearby environment.

### Note



🖔 A list with all available accessories can be found on the Leuze website in the Download tab of the article detailed page.