Optical laser distance sensors







150 ... 2300mm









- Reflection-independent distance information
- Analog voltage output 1 ... 10V (can be inverted, teachable)
- 2 teachable switching outputs (push-pull)
- Device variant without teach-in available
- Easy alignment through visible red light



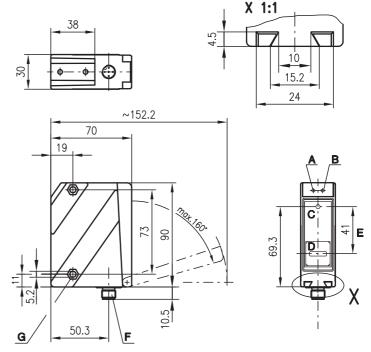

 - Α Green indicator diode
- Indicator diode yellow В
- Transmitter С
- D Receiver
- Ε Optical axis
- Device plug M12x1
- Countersinking for SK nut M5, 4.2mm deep G
- Teach button (only ODSL 96K/V 66-2300-S12)
















Accessories:

(available separately)

- Mounting systems
- Cable with M12 connector (KD ...)

Electrical connection

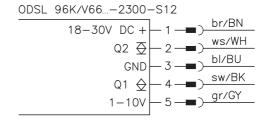

Specifications

Optical data

Measurement range 1) Resolution 2) 150 ... 2300mm 1 ... 5mm laser Light source

Laser class 2 acc. to IEC 60825-1:2007 650nm (visible red light) <1.2 mW Wavelength

Max. output power 4ms Pulse duration

divergent, 3x8mm² at 2300mm Light spot

Error limits (relative to measurement distance)

Absolute measurement accuracy ±3% Repeatability ³⁾ B/W detection thresh. (6 ... 90% rem.) ±2% ≤1% ≤ 0.1 %/°C Temperature drift

Timing

2 ... 7ms ≤ 20ms Measurement time Response time
Delay before start-up ≤ 300 ms

Electrical data

18 ... 30VDC (incl. residual ripple) \leq 15 % of $U_B \leq$ 150mA Operating voltage U_B

Residual ripple Open-circuit current

Switching output/function 4) 2 push-pull switching outputs

pin 2: Q2, PNP light switching, NPN dark switching pin 4: Q1, PNP light switching, NPN dark switching

Signal voltage high/low . ≥ (U_B-2 V)/≤ 2V

voltage 1 ... 10V, $R_L \ge 2k\Omega$ Analog output

Indicators

Green LED continuous light

flashing (no teach) fault, teach values were not applied

no voltage

object within teach-in measurement distance (output Q1 ⁵⁾) Yellow LED continuous light

flashing (no teach) teach values were not applied

object outside teach-in measurement distance (output Q1 4)

Mechanical data

plastic Housing Optics cover plastic 140g Weight

Connection type M12 connector

Environmental data

Ambient temp. (operation/storage) -20°C ... +40°C/-30°C ... +70 C

Protective circuit 1, 2, 3 VDE safety class 7) II, all-insulated Protection class IP 67 IEC 60947-5-2 Standards applied

1) Luminosity coefficient 6% ... 90%, at 20°C, measurement object ≥ 50x50mm²

Minimum and maximum value depend on measurement distance and configuration of the analog output

Same object, identical environmental conditions, measurement object ≥ 50x50mm²

The push-pull switching outputs must not be connected in parallel

No display for output Q2

1=transient protection, 2=polarity reversal protection, 3=short circuit protection for all outputs

Rating voltage 250VAC


Order quide

•	Designation	Part no.
With M12 connector and analog output		
Teach-in with teach button	ODSL 96K/V 66-2300-S12	50101881
No Teach-In (without teach button)	ODSL 96K/V 66.1-2300-S12	50104614

Tables

Diagrams

Characteristic curve of switching outputs:

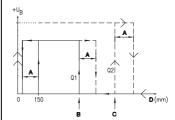

- A Hysteresis
- Switching point Q1 (teach point)
- Switching point Q2 (teach point)
- Measurement distance

Remarks

Intended use:

The ODSL 96 distance sensors are optoelectronic sensors for the optical, contactless measurement of distance to objects.

Operate in accordance with intended use!

- ♥ This product is not a safety sensor and is not intended as personnel protection.
- The product may only be put into operation by competent persons.

 Only use the product in accor-
- dance with the intended use.
- Measurement time depends on the reflectivity of the measurement object and on the measurement mode.

Optical laser distance sensors

Laser safety notices



ATTENTION. LASER RADIATION - LASER CLASS 2

Never look directly into the beam!

The device satisfies the requirements of IEC 60825-1:2007 (EN 60825-1:2007) safety regulations for a product in **laser class 2** as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 50" from June 24th, 2007.

- Never look directly into the laser beam or in the direction of reflecting laser beams!
 If you look into the beam path over a longer time period, there is a risk of injury to the retina.
- ♥ Do not point the laser beam of the device at persons!
- 🔖 Intercept the laser beam with an opaque, non-reflective object if the laser beam is accidentally directed towards a person.
- \$\text{\text{When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!}
- CAUTION! Use of controls or adjustments or performance of procedures other than specified herein may result in hazardous light exposure.
- 🔖 Adhere to the applicable legal and local regulations regarding protection from laser beams.
- \$ The device must not be tampered with and must not be changed in any way.

There are no user-serviceable parts inside the device.

Repairs must only be performed by Leuze electronic GmbH + Co. KG.


NOTICE

Affix laser information and warning signs!

Laser information and warning signs are affixed to the device(see \bigcirc). In addition, self-adhesive laser information and warning signs (stick-on labels) are supplied in several languages (see \bigcirc).


- \$\\$\$ Affix the laser information sheet with the language appropriate for the place of use to the device. When using the device in the US, use the stick-on label with the "Complies with 21 CFR 1040.10" notice.
- Affix the laser information and warning signs near the device if no signs are attached to the device (e.g. because the device is too small) or if the attached laser information and warning signs are concealed due to the installation position.

Affix the laser information and warning signs so that they are legible without exposing the reader to the laser radiation of the device or other optical radiation.

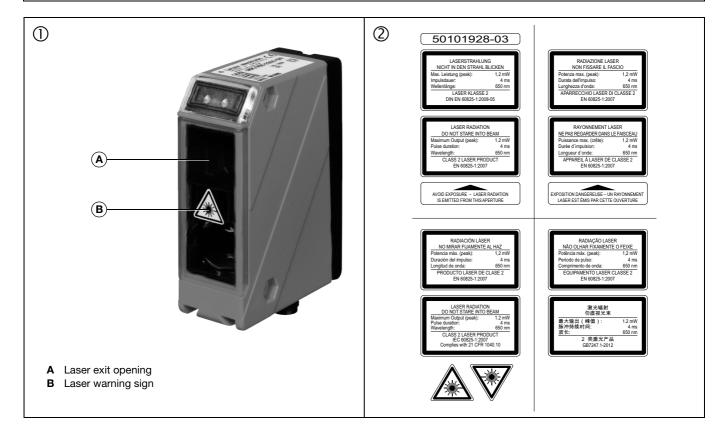


Characteristic curve of analog output

ODSL 96K/V 66-2300-S12

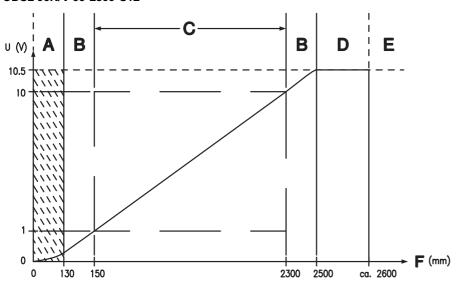

- A Area not defined
- **B** Linearity not defined
- C Measurement range
- D Object present
- E No object detected
- F Measurement distance

ODSL 96K/V 66.1-2300-S12

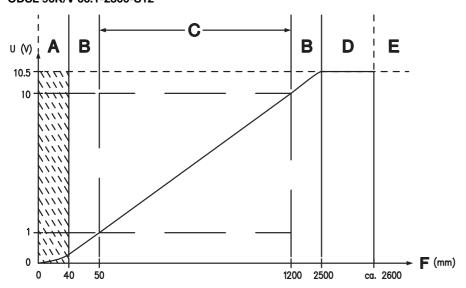


- A Area not defined
- B Linearity not defined
- C Measurement range (with target)
- **D** Object present
- E No object detected
- F Measurement distance


Optical laser distance sensors

T_I teach-in with teach button (only ODSL 96K/V 66-2300-S12)

- 1. Position measurement object at the desired measurement distance (①).
- 2. The respective teach function is activated by operating the teach button (2) for different amounts of time. The activated teach function is signaled by a flashing of the LEDs.

Teach function	Duration of teach button operation	Green LED	Yellow LED	
Switching output Q1	2 4s	Flash synchronously		
Switching output Q2	4 6s	Flash alterna	Flash alternatingly	
1 V analog output	6 8s	On	Flashes	
10V analog output	8 10s	Flashes	On	

 

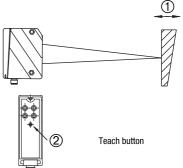

Reset of the analog output to factory settings (only ODSL 96K/V 66-2300-S12)

Reset 1V analog output at 150mm:

- 1. Position measurement object just below start of measurement range (150 mm).
- 2. Press teach button for 6 ... 8s (green LED on, yellow LED flashes).
- 3. Release teach button and wait for optical confirmation by end of flashing signal (green LED on).

Reset 10V analog output at 2300mm:

- 1. Position measurement object just beyond end of measurement range (2300 mm).
- 2. Press teach button for 8 ... 10s (green LED flashes, yellow LED on).
- 3. Release teach button and wait for optical confirmation by end of flashing signal (green LED on).

Error messages (only ODSL 96K/V 66-2300-S12)

Continuously flashing LEDs signal an unsuccessful teach event (sensor not ready):

Green LED	Yellow LED	Error
Flash synchronous	sly	Teach switching output Q1 unsuccessful
Flash alternatingly	У	Teach switching output Q1 unsuccessful
On	Flashes	Teach 1V analog output unsuccessful
Flashes	On	Teach 10V analog output unsuccessful

Remedy:

- Repeat teach event or
- Press teach button for more than 10s or
- Disconnect sensor from voltage to restore the old values.

Typical areas of application of optical distance sensors

Continuous distance measurement

Positioning tasks

Filling level control

ODSL 96

New stack


ODSL 96

Positioning

Installation instructions


Mounting systems are available which have to be ordered separately at Leuze electronic. Apart from this, the drilled-through holes and threaded holes are suitable for the individual mounting of the ODSL 96, depending on the area in which it is used. When mounting, avoid application of excessive force on the housing.

Preferred movement of the objects

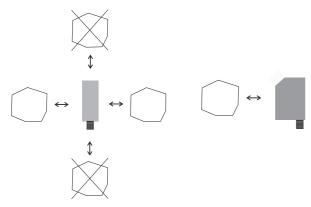


View through a chase

If the ODSL 96 has to be installed behind a cover, the chase has to have at least the size of the optical glass cover. Otherwise, a correct measurement is not possible or can not be guaranteed.

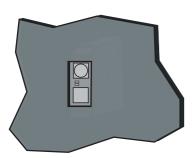

Preferred mounting in connection to objects with structured surface

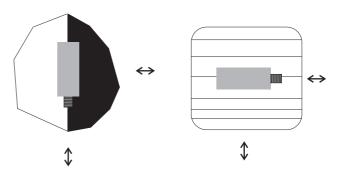

Alignment to measurement objects with reflecting surfaces

If the measurement object to be detected has a reflecting surface, a measurement may not be possible depending on the angle in which the light is reflected by the measurement object's surface. Adjust the angle between the sensor and the measurement object such that the sensor can reliably detect the measurement object.

