

Original operating instructions

IPS 448i

Camera-based positioning sensor



© 2020

Leuze electronic GmbH + Co. KG

In der Braike 1

73277 Owen / Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

www.leuze.com

info@leuze.com

1	About this document	6
1.1	Used symbols and signal words	6
2	Safety	8
2.1	Intended use	8
2.2	Foreseeable misuse	8
2.3	Competent persons	9
2.4	Disclaimer	9
3	Device description	10
3.1	Device overview	10
3.1.1	IPS 400i positioning sensor	10
3.1.2	Performance characteristics	11
3.1.3	Accessories	11
3.1.4	Device model with heating	11
3.1.5	Combination with external illumination	11
3.2	Device construction	12
3.3	Connection technology	13
3.4	Indicators and operational controls	14
3.4.1	LED indicators	15
3.4.2	Function selection and program selection	17
3.4.3	Control buttons	17
4	Functions	19
4.1	Programs	20
4.2	Camera operating modes	20
4.2.1	Single trigger mode	20
4.2.2	Reading gate control	20
4.3	Quality score	20
4.4	Offset	20
4.5	Teach position	21
4.6	Detection status	21
4.7	Leuze webConfig tool	21
5	Applications	22
5.1	Compartment fine positioning of high-bay storage device	22
5.2	Combination with external illumination	22
5.2.1	Mounting sensor and external illumination	22
5.2.2	Electrical connection	22
5.2.3	Commissioning	24
6	Mounting	25
6.1	Determining the mounting position of the positioning sensor	25
6.1.1	Selecting a mounting location	25
6.1.2	Mounting bracket	26
6.1.3	Determining the working distance	26
6.2	Mounting the positioning sensor	29
6.2.1	Mounting with M4 fastening screws	29
6.2.2	Mounting with the BTU 320M-D12 mounting system	29
6.2.3	Mounting with the BT 320M mounting bracket	30
6.3	Replace housing hood	30
7	Electrical connection	31
7.1	Overview	32

7.2	PWR/SWI/SWO – voltage supply and switching inputs/outputs	33
7.3	HOST - Host input / Ethernet / PROFINET	35
7.4	Ethernet star topology	36
7.5	Cable lengths and shielding	37
7.6	Connecting positioning sensor to Ethernet switch	38
8	Starting up the device – Basic configuration	39
8.1	Measures to be performed prior to the initial commissioning	39
8.2	Starting the device	39
8.3	Configuring and aligning the device via control buttons	40
8.4	Setting the communication parameters	40
8.4.1	Manually setting the IP address	41
8.4.2	Automatically setting the IP address	41
8.4.3	Address Link Label	42
8.4.4	Ethernet host communication	42
8.4.5	FTP client	43
8.5	Configuration via configuration codes	43
8.6	Activating device functions	44
9	Starting up the device – Leuze webConfig tool	45
9.1	System requirements	45
9.2	Start webConfig tool	45
9.3	Short description of the webConfig tool	47
9.3.1	Change operating mode	47
9.3.2	Menu options of the webConfig tool	48
9.3.3	CONFIGURATION menu	48
9.3.4	Configuring applications with the wizard	49
9.4	Configuring compartment fine positioning	50
9.4.1	Selecting the program	50
9.4.2	Configuring image acquisition	51
9.4.3	Configuring markers	51
9.4.4	Assigning measurement values to digital switching outputs	52
9.4.5	Outputting measurement values via Ethernet	53
10	PROFINET	54
10.1	Overview	54
10.2	GSDML file	55
10.3	Configuring for the Siemens SIMATIC-S7 control	56
10.4	PROFINET project modules	59
10.4.1	Overview of the modules	59
10.4.2	Module 10 – Activation	61
10.4.3	Module 13 – Fragmented result	63
10.4.4	Module 16 – Fragmented entry	64
10.4.5	Module 21 – Result data 1	65
10.4.6	Module 22 – Result data 2	66
10.4.7	Module 23 – Result data 3	67
10.4.8	Module 24 – Result data 4	68
10.4.9	Module 25 – Result data 5	69
10.4.10	Module 26 – Result data 6	70
10.4.11	Module 27 – Result data 7	71
10.4.12	Module 28 – Result data 8	72
10.4.13	Module 101 – Entry data 1	73
10.4.14	Module 102 – Entry data 2	74
10.4.15	Module 103 – Entry data 3	76
10.4.16	Module 104 – Entry data 4	77
10.4.17	Module 105 – Entry data 5	79

10.4.18	Module 106 – Entry data 6	80
10.4.19	Module 107 – Entry data 7	82
10.4.20	Module 108 – Entry data 8	83
10.4.21	Module 30 - Position deviation	85
10.4.22	Module 60 - Device status and control	85
10.4.23	Module 61 - Device application status and control	86
10.4.24	Module 74 – I/O status and control	88
10.4.25	Module 75 – I/O status and control	89
10.5	PROFINET diagnosis alarms.....	92
11	Interfaces – Communication.....	93
11.1	Online commands.....	93
11.1.1	Overview of commands and parameters.....	93
11.1.2	General online commands	93
11.1.3	Online commands for system control.....	96
11.2	XML-based communication	96
12	Care, maintenance and disposal.....	97
13	Diagnostics and troubleshooting.....	98
14	Service and support	99
15	Technical data.....	100
15.1	General specifications	100
15.2	Optical data.....	101
15.3	Reading performance	101
15.4	Device with heating.....	102
15.5	Dimensioned drawings	102
15.6	Dimensioned drawings - Accessories.....	103
16	Order guide and accessories.....	104
16.1	Nomenclature	104
16.2	Type overview.....	104
16.3	Cables accessories.....	105
16.4	Other accessories.....	106
17	EC Declaration of Conformity.....	107
18	Appendix.....	108
18.1	ASCII character set.....	108
18.2	Configuration via configuration codes.....	111
18.3	License terms.....	111

1 About this document

1.1 Used symbols and signal words

Tab. 1.1: Warning symbols and signal words

	Symbol indicating dangers to persons
NOTE	Signal word for property damage Indicates dangers that may result in property damage if the measures for danger avoidance are not followed.
CAUTION	Signal word for minor injuries Indicates dangers that may result in minor injury if the measures for danger avoidance are not followed.

Tab. 1.2: Other symbols

	Symbol for tips Text passages with this symbol provide you with further information.
	Symbol for action steps Text passages with this symbol instruct you to perform actions.

Tab. 1.3: Terms and abbreviations

Big endian	Specifies the byte sequence. Here, the highest-value byte is stored first, i.e., at the smallest memory address.
CMOS	Semiconductor process for implementing integrated circuits (C omplementary M etal- O xide- S emiconductor)
EMC	Electromagnetic compatibility
EN	European standard
FE	Functional earth
FOV	Field of view of the sensor (F ield of V iew)
GSDML	G eneric S tation D escription M arkup L anguage
IO or I/O	I nput/ O utput
IO controller	Control that initiates the IO data communication
IO device	Decentral PROFINET fieldbus device
IP address	Network address, which is based on the Internet Protocol (IP)
IPS	Camera-based positioning sensor (I maging P ositioning S ensor)
Actual position	Actual position of the marker (center point)
LED	LED (L ight E mitting D iode)
MAC address	Hardware address of a device in the network (M edia A ccess C ontrol address)
Offset	Shift of the nominal position in the X/Y direction

Marker	Marking on which the sensor determines the position (hole or reflector)
PELV	Protective extra low voltage with reliable disconnection (Protective Extra Low Voltage)
HBS	High-bay storage device
Bar	Material on which the marker is located, e.g., steel beam
ROI	Region of interest of the sensor in which a marker is detected (Region of Interest)
Nominal position	Position of the region of interest (coordinate center)
PLC	Programmable Logic Control (corresponds to Programmable Logic Controller (PLC))
SWI	Switching Input
SWO	Switching Output
TCP/IP	Internet protocol family (Transmission Control Protocol/Internet Protocol)
Tolerance range	Symmetrical area in X/Y direction around the nominal position in which the four switching outputs (+X/-X/+Y/-Y) switch.
UDP	Network transmission protocol (User Datagram Protocol)
UL	Underwriters Laboratories

2 Safety

This sensor was developed, manufactured and tested in line with the applicable safety standards. It corresponds to the state of the art.

2.1 Intended use

The camera-based positioning sensors of the IPS 400i series are designed for optical, contactless fine positioning relative to a marker for use in steel construction, e.g. on high-bay storage devices in conveyor and storage systems.

Areas of application

The camera-based positioning sensors of the IPS 400i series are especially designed for the following areas of application:

- Compartment fine positioning in single-depth and double-depth pallet high-bay warehouses

 CAUTION	
	<p>Observe intended use!</p> <p>The protection of personnel and the device cannot be guaranteed if the device is operated in a manner not complying with its intended use.</p> <ul style="list-style-type: none"> ↪ Only operate the device in accordance with its intended use. ↪ Leuze electronic GmbH + Co. KG is not liable for damages caused by improper use. ↪ Read these operating instructions before commissioning the device. Knowledge of the operating instructions is an element of proper use.
NOTICE	
	<p>Integrated illumination!</p> <p>The camera-based positioning sensors of the IPS 400i series correspond to the following classification with respect to the integrated lighting:</p> <ul style="list-style-type: none"> ↪ Infrared illumination: Exempt group in acc. with EN 62471
NOTICE	
	<p>Comply with conditions and regulations!</p> <ul style="list-style-type: none"> ↪ Observe the locally applicable legal regulations and the rules of the employer's liability insurance association.

2.2 Foreseeable misuse

Any use other than that defined under "Intended use" or which goes beyond that use is considered improper use.

In particular, use of the device is not permitted in the following cases:

- in rooms with explosive atmospheres
- in circuits which are relevant to safety
- In food processing
- for medical purposes

NOTICE	
	<p>Do not modify or otherwise interfere with the device!</p> <ul style="list-style-type: none"> ↪ Do not carry out modifications or otherwise interfere with the device. The device must not be tampered with and must not be changed in any way. ↪ The device may only be opened for exchanging the housing hood. ↪ There are no user-serviceable parts inside the device. ↪ Repairs must only be performed by Leuze electronic GmbH + Co. KG.

2.3 Competent persons

Connection, mounting, commissioning and adjustment of the device must only be carried out by competent persons.

Prerequisites for competent persons:

- They have a suitable technical education.
- They are familiar with the rules and regulations for occupational safety and safety at work.
- They are familiar with the operating instructions for the device.
- They have been instructed by the responsible person on the mounting and operation of the device.

Certified electricians

Electrical work must be carried out by a certified electrician.

Due to their technical training, knowledge and experience as well as their familiarity with relevant standards and regulations, certified electricians are able to perform work on electrical systems and independently detect possible dangers.

In Germany, certified electricians must fulfill the requirements of accident-prevention regulations DGUV (German Social Accident Insurance) provision 3 (e.g. electrician foreman). In other countries, there are respective regulations that must be observed.

2.4 Disclaimer

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- The device is not being used properly.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Changes (e.g., constructional) are made to the device.

3 Device description

3.1 Device overview

3.1.1 IPS 400i positioning sensor

The camera-based positioning sensors of the IPS 400i series enable fast and simple positioning of high-bay storage devices in conveyor and storage systems.

- Positioning is designed for single-depth or double-depth pallet high-bay warehouses.
- Positioning in various compartment positions, e.g., *rack near* or *rack far*, is implemented with the help of programs in the positioning sensor.
- The positioning sensor detects holes or reflectors in bars in the rack construction and determines the position deviation in the X and Y direction relative to the nominal position.
- The position deviation is output to the control via four digital outputs or via the interface.
- Operation and configuration of the positioning sensor:
 - Via the Ethernet service interface by means of the integrated webConfig tool.
 - Via printed configuration codes.

The positioning sensor consists of the following components:

- Camera
- Control panel
- Lighting unit: Infrared
- Evaluation unit with the following interfaces:
 - Digital I/Os
 - Ethernet/PROFINET

The positioning sensors of the IPS 400i series are operated as a "stand-alone" single device with individual IP address in an Ethernet topology.

The positioning sensor is optionally available with integrated heating.

Information on technical data and characteristics: see chapter 15 "Technical data".

Markings

The positioning sensor detects the following markers:

- Hole: Dark, round marking on light background
- Reflector: Light, round marking on dark background

3.1.2 Performance characteristics

The most important performance characteristics of the camera-based positioning sensor:

- Working distances 250 mm to 2400 mm (dependent on type/marker)
- Marker diameter 13 mm to 15 mm
- Typical reproducibility: 0.5 mm at a working distance of up to 1900 mm
- Integrated IR illumination (infrared LED, 850 nm) offers high interference rejection against ambient light.
- Intuitive alignment via four feedback LEDs and webConfig tool
- Two control buttons for intuitive operation without PC
- webConfig, a web-based configuration tool for configuration of all device parameters. No additional configuration software necessary
- Installation wizard for simple configuration in just a few steps
- Integrated teach functions:
 - Automatic adjustment of the exposure time and hole geometry
 - Electronic position teach for fine adjustment
- Reading in of configuration codes
- Multiple programs
- Measurement value output: Four digital switching outputs, Ethernet or PROFINET
- Diagnostics in process mode through image transfer via FTP
- Diagnostics using the output of quality scores and detection status
- Optional model with heating for use to -30 °C
- Variously coded M12 connections for unique assignment of the connections:
 - Voltage supply, switching inputs/outputs
 - Ethernet/PROFINET connection

3.1.3 Accessories

Special accessories are available for the positioning sensor (see chapter 16 "Order guide and accessories"):

- Mounting systems for mounting
- Connection and interconnection cables for M12 connectors
- Reflectors
- Connection to Ethernet switch (see chapter 7.6 "Connecting positioning sensor to Ethernet switch")
- External illumination

3.1.4 Device model with heating

The positioning sensor is optionally available as a model with integrated heating. In this case, heating is permanently installed ex works.


Features of the integrated heating:

- Extension of the application range -30 °C ... +45 °C
- Supply voltage: 18 V ... 30 V DC
- Average power consumption: 12 W

3.1.5 Combination with external illumination

For reflective surfaces behind the hole in the bar, we recommend using external illumination (see chapter 5.2 "Combination with external illumination"). As an alternative to external illumination, reflectors can also be used.

3.2 Device construction

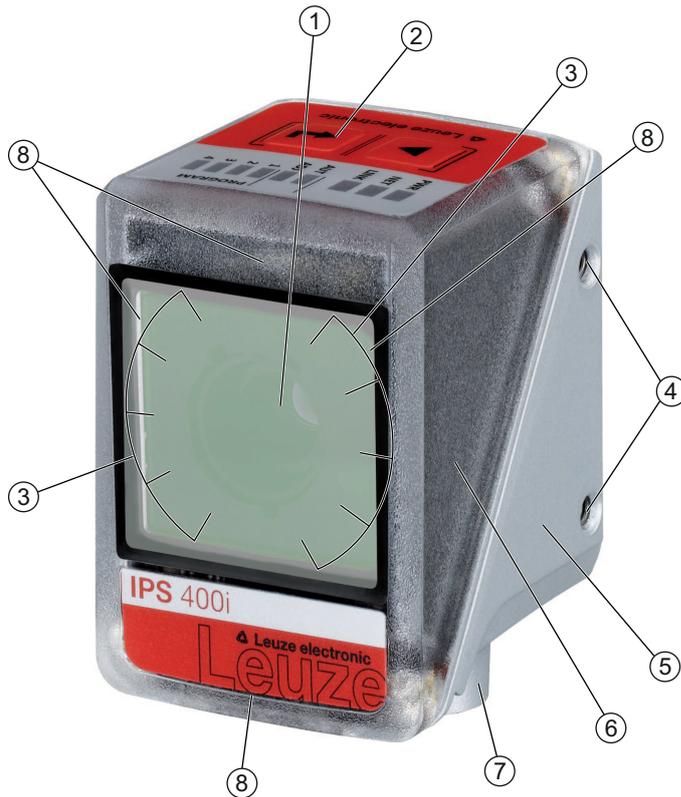


- 1 Lens
- 2 Control panel with indicator LEDs, control buttons and function/program selection display
- 3 LEDs for illumination (infrared light)
- 4 M4 mounting thread
- 5 Device housing
- 6 Housing hood
- 7 M12 connection technology
- 8 Feedback LEDs (4x green, +X -X +Y -Y)

Fig. 3.1: Device construction

3.3 Connection technology

The device is connected using variously coded M12 connectors:

- A-coded, 12-pin, M12 connection for operating voltage, switching inputs/outputs
- D-coded, 4-pin, M12 connection for the Ethernet/PROFINET connection

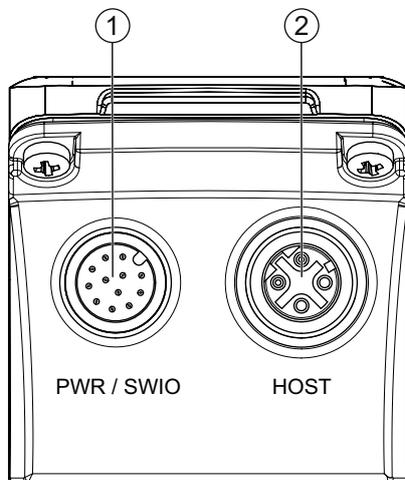

- 1 PWR / SWIO, M12 plug, 12-pin, A-coded
- 2 HOST, M12 socket, 4-pin, D-coded

Fig. 3.2: Electrical connections

NOTICE



Ready-made cables are available for all connections (see chapter 16.3 "Cables accessories").

NOTICE



Shielding connection!


↪ The shielding is connected via the M12 connector housing.

3.4 Indicators and operational controls

The device is equipped with the following indicators and operational controls:

- Three indicator LEDs (PWR, NET, LINK)
- Two control buttons
- Six indicator LEDs for function selection (AUTO, ADJ) and program selection (PROGRAM 1 ... 4)
- Four green feedback LEDs for aligning the positioning sensor

The positioning sensor depicts the deviations in the directions -X, +Y, +X, -Y using four green feedback LEDs. These LEDs are activated upon shipment of the device from the factory and can be deactivated via the webConfig tool.

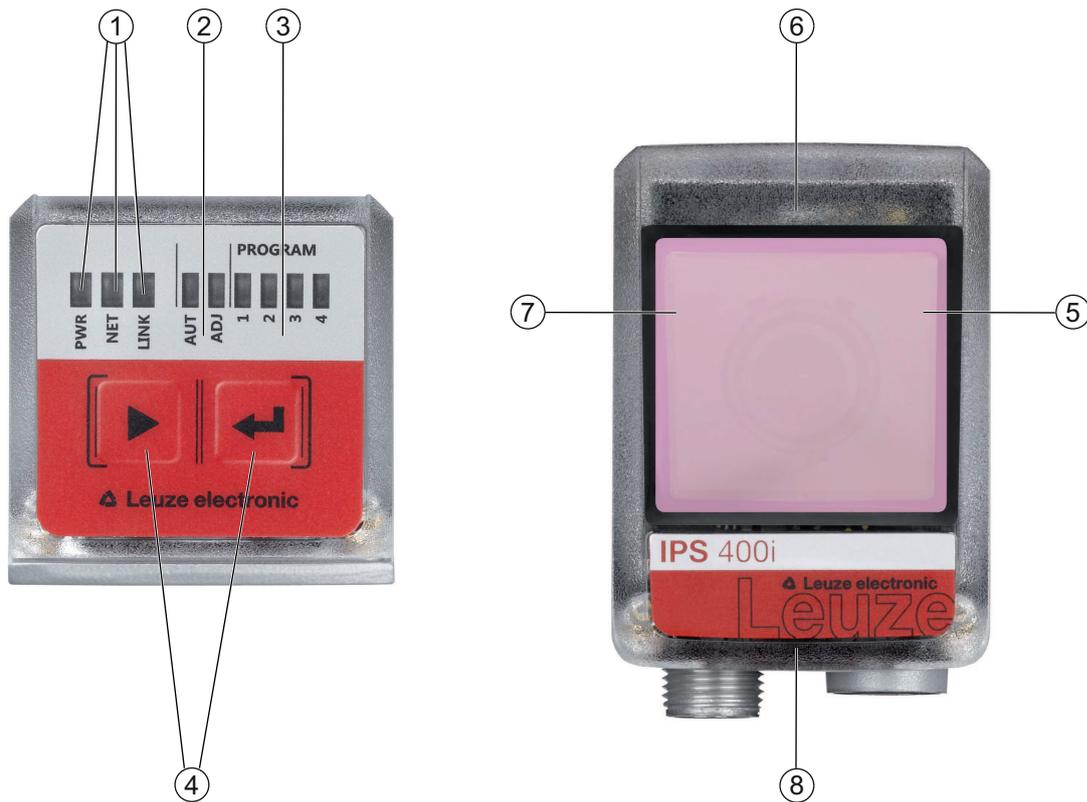

- 1 LED indicators: PWR, NET, LINK
- 2 Function selection
- 3 Program selection
- 4 Control buttons
- 5 -X position; signals whether the positioning sensor is located in the tolerance range
- 6 +Y position; signals whether the positioning sensor is located in the tolerance range
- 7 +X position; signals whether the positioning sensor is located in the tolerance range
- 8 -Y position; signals whether the positioning sensor is located in the tolerance range

Fig. 3.3: Indicators and operational controls

3.4.1 LED indicators

PWR LED

Tab. 3.1: PWR indicators

Color	State	Description
---	OFF	Device off No operating voltage
Green	Flashing	Device ok <ul style="list-style-type: none"> • Initialization phase • Positioning not possible • Operating voltage applied • Self test running
	ON (continuous light)	Device ok <ul style="list-style-type: none"> • Positioning possible • Self test successfully finished • Device monitoring active
Orange	ON (continuous light)	Service mode <ul style="list-style-type: none"> • Positioning possible • No data on the host interface
	Flashing	Wave function (synchronous with NET LED) <ul style="list-style-type: none"> • Positioning possible
Red	Flashing	Device ok, warning set <ul style="list-style-type: none"> • Positioning possible • Temporary operating fault
	ON (continuous light)	Device error/parameter enable No positioning possible

NET LED

Tab. 3.2: NET indicators

Color	State	Description
---	OFF	No operating voltage <ul style="list-style-type: none"> • No communication possible • Ethernet protocols not released • PROFINET-IO communication not initialized or inactive
Green	Flashing	Initialization of the device Establishing communication
	ON (continuous light)	Operation ok <ul style="list-style-type: none"> • Network mode ok • Connection and communication to Host established
Orange	Flashing	Topology error detected <ul style="list-style-type: none"> • Deviating target/actual topology
Red	Flashing	Communication error <ul style="list-style-type: none"> • Temporary connection error • If DHCP active: No IP address could be obtained
	ON (continuous light)	Network error <ul style="list-style-type: none"> • No connection established • No communication possible

LINK LED

Tab. 3.3: LINK indicators

Color	State	Description
Green	ON (continuous light)	Ethernet connected (LINK)
Yellow	Flashing	Data communication (ACT)

Feedback LEDs

Tab. 3.4: Feedback LED indicators

Color	State	Description
---	OFF	Device off No operating voltage No positioning operation active No marker found or marker not in the corresponding quadrant
Green	Flashing	Flashing frequency signals the marker distance to the nominal position: <ul style="list-style-type: none"> • Low frequency: Large distance • High frequency: Short distance
	ON (continuous light)	Marker is in nominal position (coordinate origin). The positioning sensor is optimally positioned if all four feedback LEDs illuminate.

3.4.2 Function selection and program selection

Function selection

The following functions are selected and displayed via the bar graph display (see chapter 8.6 "Activating device functions"):

- *AUTO*: Auto setup function for determining the optimum exposure and marker settings. Additional teaching of printed configuration codes.
- *ADJ*: Adjustment function for aligning the device and for teaching-in the position in the current program

The individual functions are selected and activated with the control buttons.

- Select function with the navigation button : The function LED flashes.
- Activate function with the enter button : The function LED illuminates continuously.

NOTICE



If you activate the *AUTO* or *ADJ* function via the control buttons, the device accepts no commands via the process interface. Process mode is thereby interrupted.

Program selection

The control buttons and PROGRAM display can be used to select, activate and display the first four programs that are stored in the device.

3.4.3 Control buttons

Function selection and program selection are controlled via the control buttons.

NOTICE



In the *Service* operating mode (which is set using the webConfig tool), the positioning sensor cannot be operated using the control buttons.

-  – navigation button: Scroll through the functions in the function and program selection display from left to right.
-  – enter button: Scroll through the functions in the function and program selection display.

NOTICE



A preselected function (flashing LED) does not yet have any influence on the functionality. If no button is pressed for a longer period of time, flashing of the LED is ended automatically by the device.

NOTICE



The *AUTO* and *ADJ* functions always apply to the currently valid program. Both functions must be deactivated again by pressing the enter button .

Exiting a function mode

When exiting a function mode (AUTO/ADJ), observe the following notes:

- Short press of the enter button ↵: The function mode is exited, the parameters are not accepted.
- Long press (3 seconds) of the enter button ↵ and teach not possible: The function mode is exited, the parameters are not accepted.
- Long press (3 seconds) of the enter button ↵ and teach possible: The function mode is exited, the parameters are stored permanently.

Upon exiting a function mode, the four feedback LEDs signal whether teaching was successful:

- Single, brief flash: Teaching successful
- Flashing fast (3 seconds): Teaching not successful


4 Functions

This chapter describes the functions of the positioning sensor:

- Programs (see chapter 4.1 "Programs")
- Camera operating modes (see chapter 4.2 "Camera operating modes")
- Quality score (see chapter 4.3 "Quality score")
- Offset (see chapter 4.4 "Offset")
- Teach position (see chapter 4.5 "Teach position")
- Detection status (see chapter 4.6 "Detection status")

The sensor operates in two dimensions, X and Y:

- X corresponds to the horizontal axis (default).
- Y corresponds to the vertical axis (default).

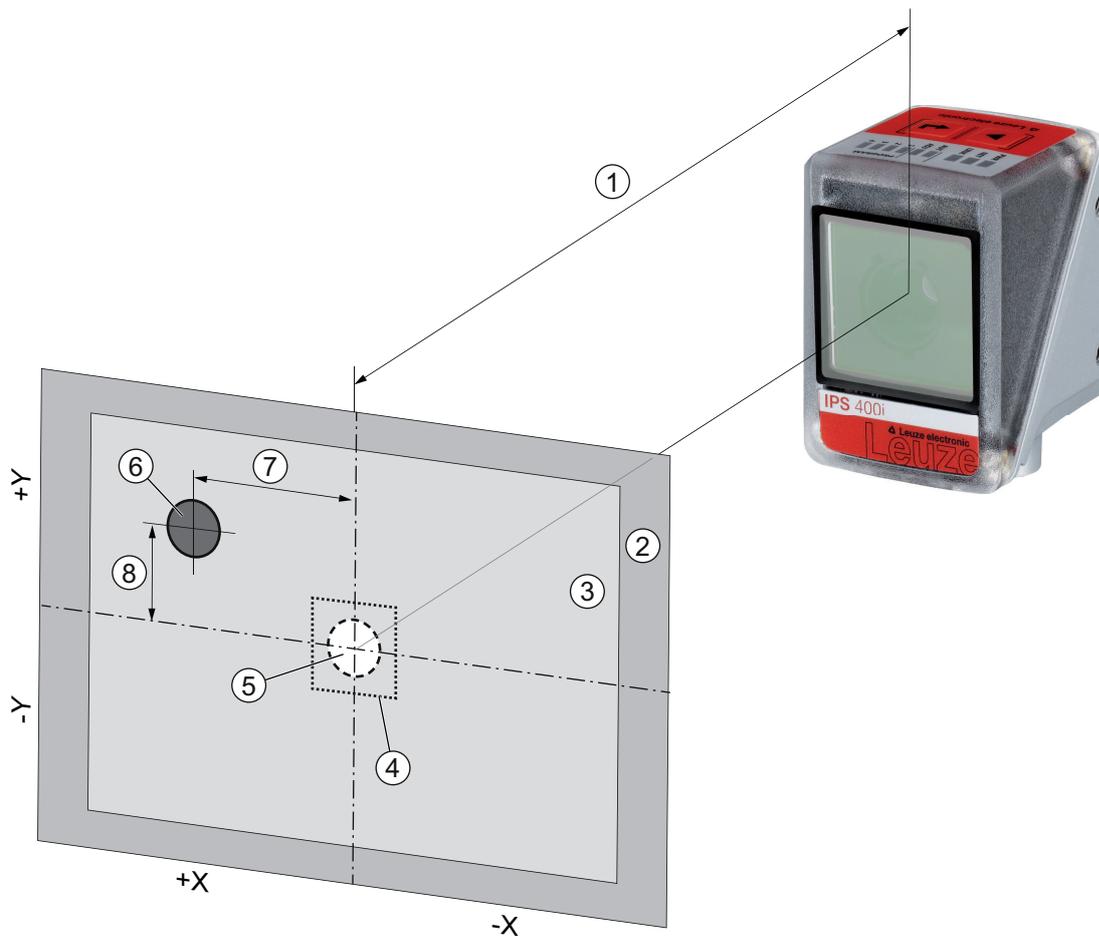

- 1 Working distance
- 2 Field of view (FOV)
- 3 Region of interest (ROI)
- 4 Tolerance range
- 5 Nominal position (marker)
- 6 Actual position (marker)
- 7 X deviation
- 8 Y deviation

Fig. 4.1: Mode of operation of the positioning sensor

4.1 Programs

There are eight programs stored in the positioning sensor. The programs can be used for the following functions:

- Positioning at short and distant range
- Loading and unloading positions with different offset values
- Compartments with different markers (hole or reflector)

Switch between or activate programs in the device as follows:

- Via the webConfig tool (see chapter 4.7 "Leuze webConfig tool")
- Via switching inputs SWI3 and SWI4 (only the first 4 programs – default setting)
- Via control buttons on the device (only the first four programs)
- Via an Ethernet online command

NOTICE



Changing the check program

The selection ID can be used to trigger an automatic change of check program:

- ↳ Via the SWI3 and SWI4 digital switching inputs
- ↳ Via an Ethernet online command

4.2 Camera operating modes

The camera operating mode defines how the positioning sensor starts and ends a positioning operation.

4.2.1 Single trigger mode

In the "Single trigger mode" camera operating mode, the positioning sensor captures one image and attempts to determine the actual position of the marker relative to the nominal position.

4.2.2 Reading gate control

Upon activation, the reading gate control opens a time window in the device for the positioning operation. In this time window, the positioning sensor continuously determines the relative position and outputs the position. The reading gate control must be deactivated again via the trigger signal.

The "Reading gate control" camera operating mode is activated upon shipment from the factory.

4.3 Quality score

The quality score is a measure of the quality of the found marker and refers to the shape factor, the scaling factor and the contrast of the taught marker. The quality score is output in percent [%].

Limit values can be defined in the positioning sensor via the quality score:

- Limit value at which a switching output is set as a warning if the value is less than or exceeds the limit.
- Limit value at which images are transferred via Ethernet / interface (FTP).
- In addition, the determined quality score can be output via the interface.

4.4 Offset

Offset in the X/Y direction that is taken into account for the positioning, e.g., when moving goods in and out of storage. Here, the offset shifts the nominal position relative to the center point of the region of interest. The offset can be in the positive or negative direction.

NOTICE



You can set one offset value per program.

4.5 Teach position

For fine adjustment and as an alternative to precise mechanical alignment, you can teach-in the position of the device. When teaching-in the position, the coordinate system of the region of interest is placed in the center point of the detected marker.

You can activate the function in the device as follows:

- Via the webConfig tool (see chapter 4.7 "Leuze webConfig tool")
- Via control buttons on the device (via *ADJ* mode)
- Via an Ethernet online command

If the teaching-in of the position fails, it may be due to the following reasons:

- The marker is not located in the device's region of interest.
- The limits of the new region of interest determined by teaching-in are not completely in the field of view.

4.6 Detection status

The detection status signals the status of the current detection:

- 0: Detection successful – one marker detected in region of interest
- 1: Detection not successful – several markers detected in region of interest
- 2: Detection not successful – no markers detected in region of interest

4.7 Leuze webConfig tool

The webConfig configuration tool offers a graphical user interface for the configuration of the positioning sensor via a PC (see chapter 9 "Starting up the device – Leuze webConfig tool").

The wizard of the webConfig tool can be used to easily configure the positioning sensor in just a few steps.

5 Applications

5.1 Compartment fine positioning of high-bay storage device

After performing rough positioning, the positioning sensor is used for the optical, contactless fine positioning of a high-bay storage device in the X and Y direction.

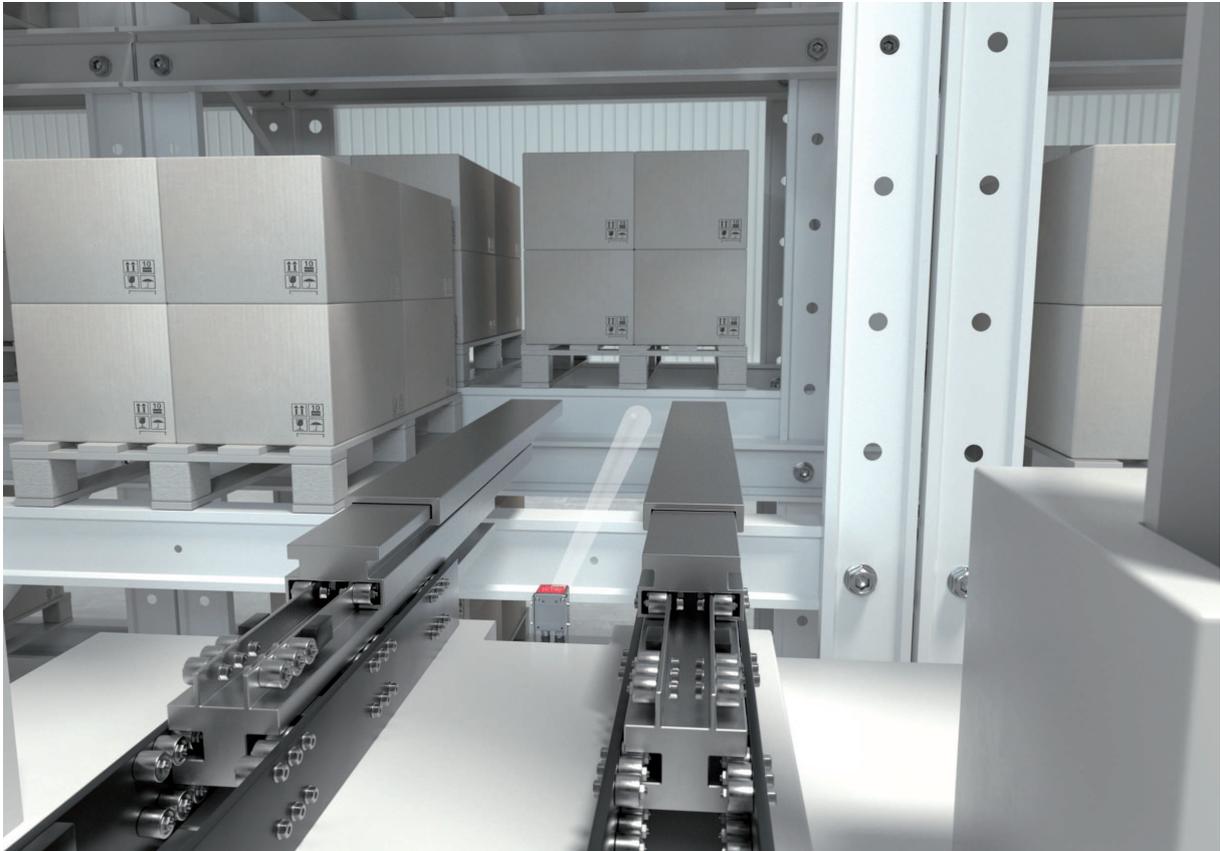


Fig. 5.1: Compartment fine positioning of a high-bay storage device in a double-deep pallet high-bay warehouse

5.2 Combination with external illumination

For reflective surfaces behind the hole in the bar, we recommend using external illumination.

NOTICE



↪ Observe the package insert of the external illumination.

5.2.1 Mounting sensor and external illumination

NOTICE



- ↪ Maintain the mounting distance between sensor and illumination.
- ↪ Mount the illumination to a metal mounting bracket on the rear side of the housing only (heat dissipation).
- ↪ Ensure that behind the hole there are no reflective materials within 500 mm.

5.2.2 Electrical connection



The sensor and the external illumination can be directly connected to one another. In this case, all signals (PWR/SWIO) are looped through the external illumination.

NOTICE

Alternatively, the external illumination can also be actuated directly.
 ↳ Ensure a synchronous actuation of illumination and sensor here.

NOTICE

The integrated heating of the external illumination is activated at an ambient temperature of $\leq 10\text{ }^{\circ}\text{C}$.

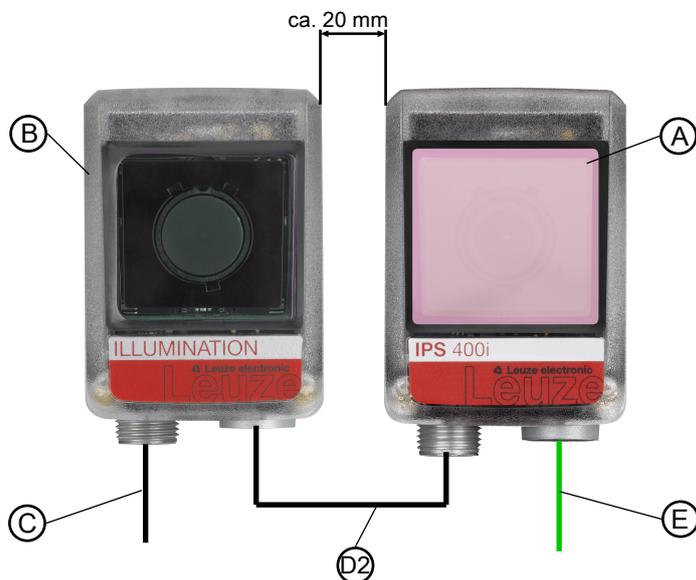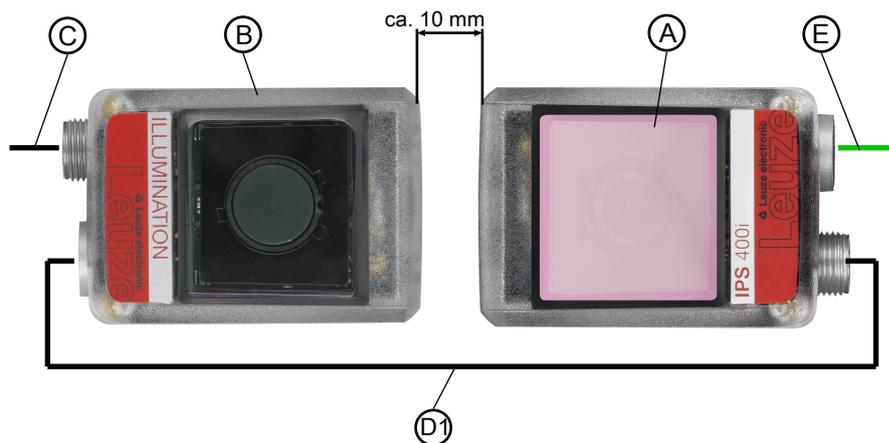

- A Sensor, e.g. IPS 4xxi
- B External illumination, e.g., 50144030
- C Connection cable, e.g. 2 m – 50130281
- D1 Interconnection cable, e.g. 2 m – 50130284
- D2 Interconnection cable, e.g. 0.3 m – 50143811
- E Ethernet interconnection cable, e.g. 2 m – 50135080

Fig. 5.2: Electrical connection of sensor and external illumination – arrangement possibilities and mounting distances

5.2.3 Commissioning

The following parameters are to be set in the sensor via the webConfig tool if the external illumination is directly connected to the sensor (see see chapter 9 "Starting up the device – Leuze webConfig tool").

The screenshot shows the webConfig interface for the IPS 408i FIX-F4-102-I3-G sensor. The 'CONFIGURATION' menu is active, and the 'SWITCHING INPUTS/OUTPUTS' table is displayed. The table has the following data:

Port	I/O mode	Function	Signal delay	Pulse duration	Switch-on delay	Switch-off delay	Debounce time	Inverted
1	Input	Reading start/stop	-	0	0	0	5	0
2	Output	External flash	-	2	0	-	-	0
3	Input	Program selection 1	-	0	0	0	5	0
4	Input	Program selection 2	-	0	0	0	5	0
5	Output	Programmable 1	-	0	0	-	-	0
6	Output	Programmable 2	-	0	0	-	-	0

The 'PORT 2' configuration is shown with the following settings:

- I/O mode: Output
- Function: External flash
- Pulse duration: 2 ms
- Switch-on delay: 0 ms
- Switch-off delay: -
- Debounce time: -
- Inverted:

The 'Time behavior' graph shows a pulse signal for the 'Input signal' and a corresponding pulse for the 'SWO P04' output.

Fig. 5.7: Settings for operation with external illumination in the **CONFIGURATION** menu

- ↪ Configure switching output SWO2 as "external flash" and as pulse.
- ↪ The pulse duration of switching output SWO2 must be \geq the exposure time of the sensor.
- ↪ Set the flash time to no longer than necessary.
The maximum flash time of the external illumination is 4 ms.
- ↪ Only flash during the positioning process.
- ↪ The internal illumination of the sensor must be switched off.

6 Mounting

The positioning sensor can be mounted in the following ways:

- Mounting using four M4 mounting threads on the rear of the device
- Mounting using two M4 mounting threads on each of the side surfaces of the device
- Mounting on a 12 mm rod using the BTU 320M-D12 mounting system
- Mounting on the BT 320M mounting bracket

NOTICE



↳ Mount the device on a metal mounting bracket.

6.1 Determining the mounting position of the positioning sensor

6.1.1 Selecting a mounting location

NOTICE



The size of the marker influences the maximum working distance. Therefore, when selecting a mounting location and/or the suitable marker, be certain to take into account the different positioning characteristics of the sensor with various markers.

NOTICE



Observe when choosing the mounting location!

- ↳ Make certain that the required environmental conditions (humidity, temperature) are maintained.
- ↳ Avoid possible soiling of the reading window due to liquids, abrasion by boxes, or packaging material residues.
- ↳ Ensure the lowest possible chance of damage to the sensor through mechanical collision or jammed parts.
- ↳ Avoid possible ambient light influence (no direct sunlight).

Take the following factors into account when selecting the correct mounting location:

- Size, orientation, and position tolerance of the markers on the objects to be scanned.
- Reading distance that results from the marker size (Determining the working distance).
- Time of data output.
- The permissible line lengths between sensor and host system depending on which interface is used.
- Visibility of the control panel and access to the control buttons.

6.1.2 Mounting bracket

If the illumination light of the sensor is directly incident on the surface of the bar at an angle of 90°, total reflection occurs. The illumination light directly reflected may overload the sensor and thereby adversely affect positioning.

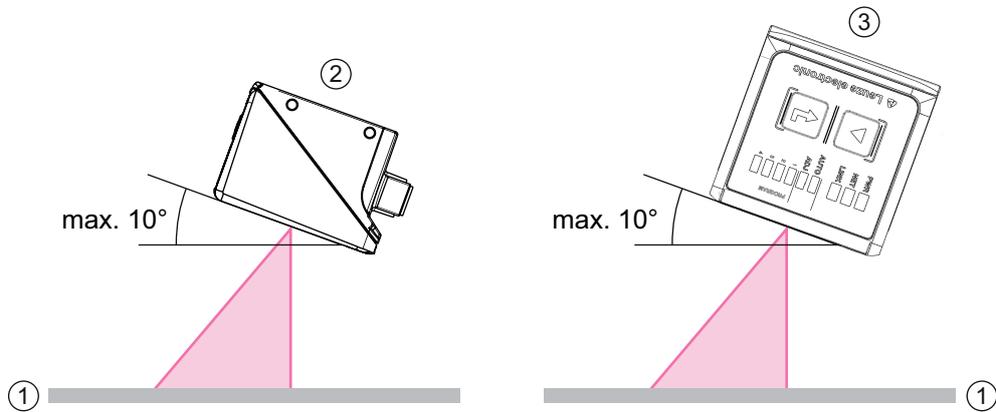


Fig. 6.1: Mounting with tilt angle or angle of inclination

Recommended tilt angle or angle of inclination: maximum 10°

- 1 Bar
- 2 Mounting with tilt angle
- 3 Mounting with angle of inclination

NOTICE	
	<p>The optimum tilt angle or angle of inclination is dependent on the surface of the bar and the working distance.</p> <p>Normally, a tilt angle of 5° and an angle of inclination of 0° is recommended.</p>

6.1.3 Determining the working distance

In general, the sensor's field of view increases as the working distance becomes larger. This also results in a decrease in the resolution, however.

Working distances for the sensor with F2 or F4 optics

- F2 optics. 250 mm ... 1900 mm
 - F4 optics. 350 mm ... 2400 mm
- A reflector is necessary for working distances greater than 1.9 m.

NOTICE	
	<p>Note that the actual working distance is also influenced by factors such as marker geometry, mounting bracket, reflection properties of the bar, etc., and may therefore differ from the distances listed here.</p>

Relationship between working distance and field of view size

The following images show the relationship between the working distance and the resulting field of view for the optics models of the sensor. The working distance is the path from the front edge of the sensor to the marker.


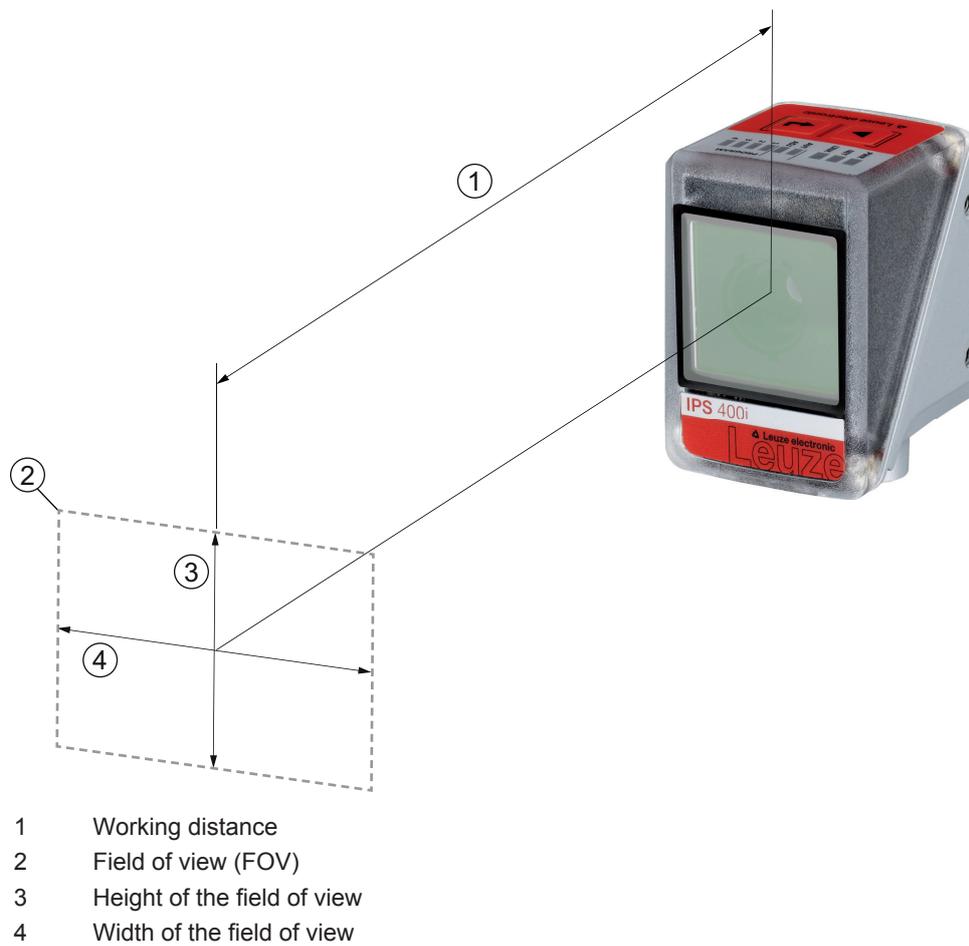


Fig. 6.2: Working distance and field of view

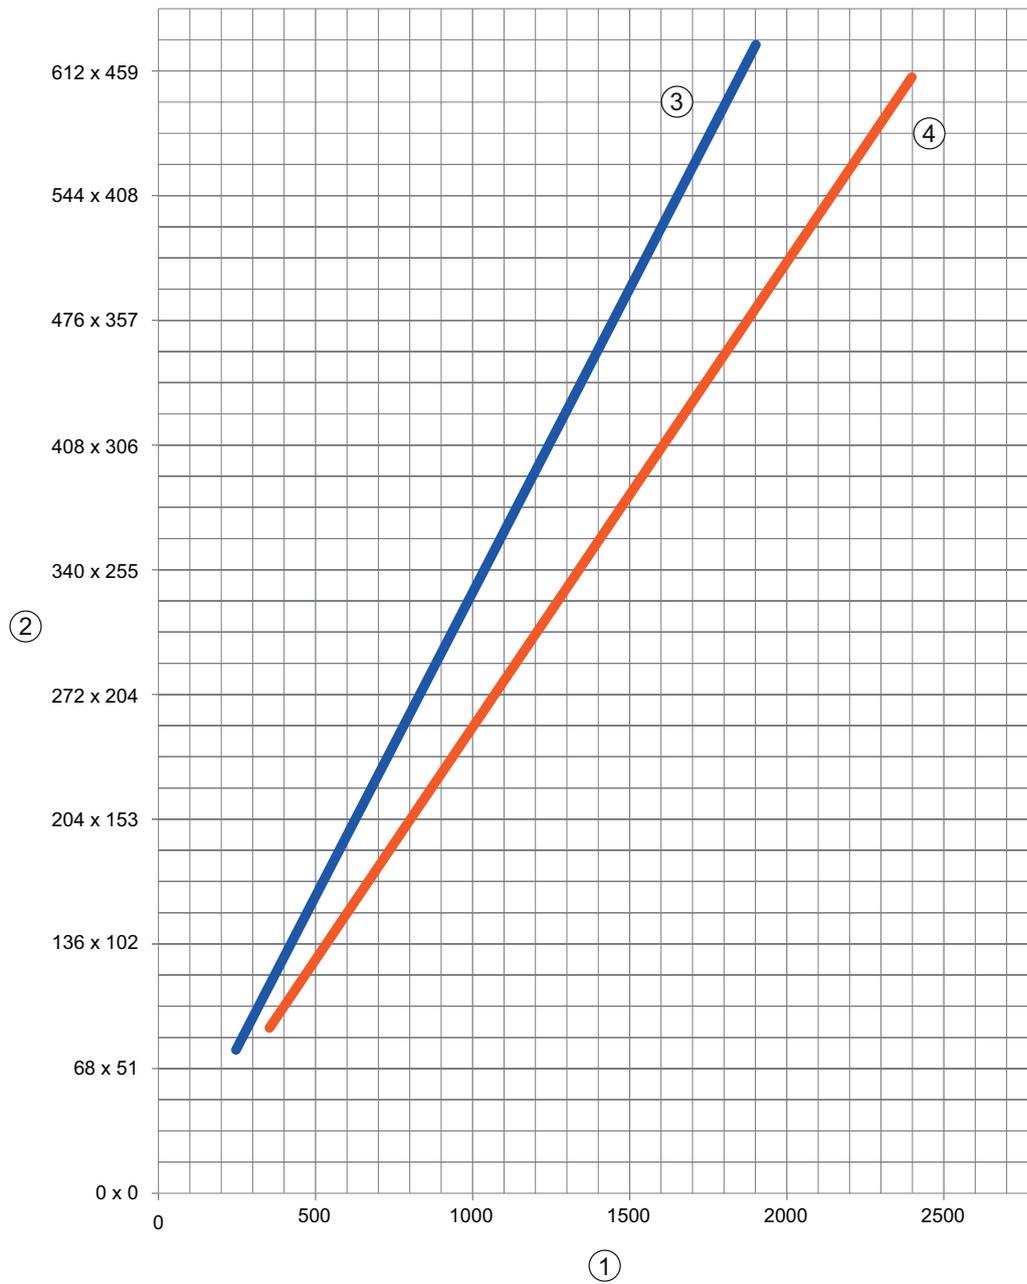

- 1 Working distance [mm]
- 2 Field of view: width x height [mm]
- 3 F2 optics
- 4 F4 optics

Fig. 6.3: Relationship between working distance and field of view size

6.2 Mounting the positioning sensor

NOTICE	
	<p>Observe during mounting!</p> <ul style="list-style-type: none"> ↪ Make certain that there is only one marker in the sensor's region of interest. ↪ All markers that are to be detected must have the same diameter. Other objects with the same diameter (e.g., screw heads) must not be located in the sensor's region of interest. ↪ Make certain that the surface that surrounds a marker reflects diffusely. ↪ The steel beams/crossbeams must be of uniform quality (surface, color, corrosion). ↪ The area behind the marker (in the case of holes) should remain unbuilt within an area of 500 mm. ↪ For closed profiles, use only reflectors as markers. ↪ Avoid glossy, reflective surfaces and light sources behind the markers (in the case of holes). ↪ Avoid kinks or folded edges that pass through the center of the hole or that touch the hole. ↪ Make certain that the surface of the steel beam/crossbeam is not soiled (e.g., sludge), especially near the marker (hole) or the working range of the sensor. ↪ Align the sensor as parallel to the marker as possible. ↪ Make certain that the markers are located as close as possible to the center of the sensor's region of interest. ↪ The working distance set in the device must correspond to the actual working distance.
NOTICE	
	<p>Observe when mounting reflectors!</p> <ul style="list-style-type: none"> ↪ Make certain that the reflectors are kept clean before and during mounting. ↪ Make certain that the black edge and the reflective surface are not damaged. ↪ Avoid oil and grease on the reflector (e.g., from fingerprints). The reflective properties are thereby significantly reduced. ↪ To clean the reflectors, do not use any solvent-based cleaners or cleaning agents with abrasive effect.

6.2.1 Mounting with M4 fastening screws

- ↪ Mount the device on the system with M4 fastening screws (not included in delivery contents).
 - ⇒ Max. tightening torque of the fastening screws: 1.4 Nm
 - ⇒ Location and thread depth of the mounting thread: see chapter 15.5 "Dimensioned drawings"

6.2.2 Mounting with the BTU 320M-D12 mounting system

Mounting with a BTU 320M-D12 mounting system is intended for 12-mm rod mounting. For ordering information, see chapter 16.4 "Other accessories".

- ↪ Mount the mounting system on the rod with the clamp profile (system-side).
- ↪ Mount the device to the mounting system with M4 fastening screws.
 - ⇒ Max. tightening torque of the fastening screws: 1.4 Nm
 - ⇒ Location and thread depth of the mounting thread: see chapter 15.5 "Dimensioned drawings"

6.2.3 Mounting with the BT 320M mounting bracket

Mounting with a BT 320M mounting bracket is intended for wall mounting. For ordering information, see chapter 16.4 "Other accessories".


- ↪ Mount the mounting bracket on the system side with M4 fastening screws (included in delivery contents).
- ↪ Mount the device to the mounting bracket with M4 fastening screws.
 - ⇒ Max. tightening torque of the fastening screws: 1.4 Nm
 - ⇒ Location and thread depth of the mounting thread: see chapter 15.5 "Dimensioned drawings"

6.3 Replace housing hood

In individual cases, you can exchange the housing hood of the sensor, e.g., if the protective screen is scratched.

NOTICE	
	<p>Only replace the housing hood while the device is in a de-energized state!</p> <p>Only replace the housing hood if no voltage is being applied to the device.</p> <ul style="list-style-type: none"> ↪ Disconnect the device from the voltage supply before replacing the device hood.
NOTICE	
	<p>Check the seal before mounting!</p> <ul style="list-style-type: none"> ↪ Check the seal on the base of the device housing for cleanliness before mounting the new housing hood.
NOTICE	
	<p>Clean the new housing hood before mounting!</p> <ul style="list-style-type: none"> ↪ Clean the new housing hood with a soft cloth before mounting.

- ↪ Loosen the four fastening screws of the housing hood.
- ↪ First tip the housing hood downward and away from the housing base.
- ↪ Then lift the housing hood up and off of the housing base.
- ↪ Then mount the new housing hood in the reverse order. The tightening torque of the fastening screws is 0.25 Nm.

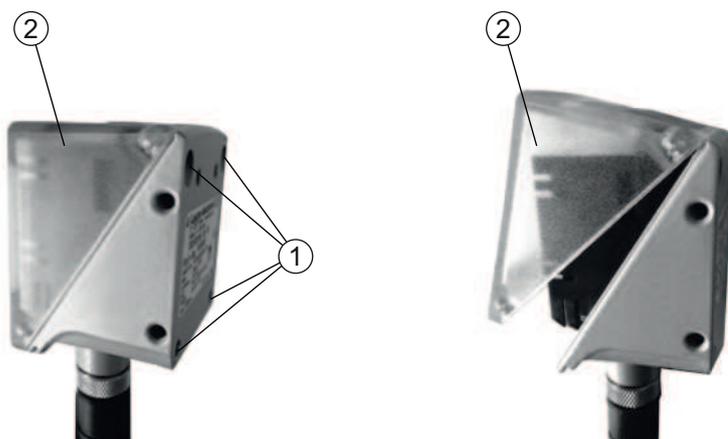

- 1 Fastening screws
- 2 Housing hood

Fig. 6.4: Replace housing hood


7 Electrical connection

 CAUTION	
	<p>Safety notices!</p> <ul style="list-style-type: none"> ↪ Before connecting the device, please ensure that the operating voltage matches the value printed on the nameplate. ↪ Only allow competent persons to perform the electrical connection. ↪ Ensure that the functional earth (FE) is connected correctly. Fault-free operation is only guaranteed if the functional earth is connected properly. ↪ If faults cannot be rectified, take the device out of operation. Protect the device from accidentally being started.
 CAUTION	
	<p>UL applications!</p> <p>For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).</p>
NOTICE	
	<p>Shielding connection!</p> <p>The shielding is connected via the M12 connector housing.</p>
NOTICE	
	<p>Protective Extra Low Voltage (PELV)!</p> <p>The device is designed in accordance with protection class III for supply with PELV (Protective Extra-Low Voltage).</p>

7.1 Overview

The sensor is provided with the following connections:

- PWR / SWIO: A-coded, 12-pin, M12 connection for operating voltage, switching inputs/outputs
- HOST: D-coded, 4-pin, M12 connection for the Ethernet/PROFINET connection

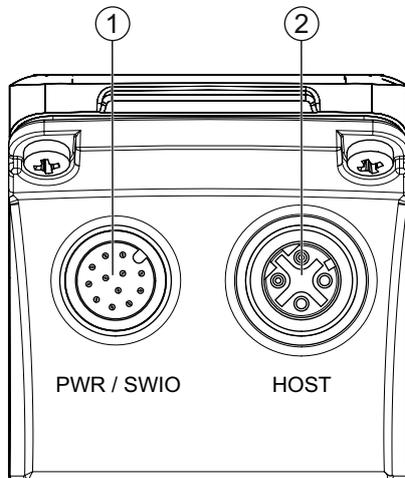

- 1 PWR / SWIO, M12 plug, 12-pin, A-coded
 2 HOST, M12 socket, 4-pin, D-coded

Fig. 7.1: Electrical connections

NOTICE



Ready-made cables are available for all connections (see chapter 16.3 "Cables accessories").

Voltage supply and switching inputs/outputs

The voltage supply (18 V ... 30 V DC) is connected at the PWR / SWIO M12 plug.

Eight freely programmable switching inputs/outputs for individual adaptation to the respective application are also available on the PWR / SWIO M12 plug.

Standalone operation in Ethernet network

The sensor is operated as a "stand-alone" single device in an Ethernet star topology with individual IP address. The host interface of the superior system is connected to the HOST M12 socket.

7.2 PWR/SWI/SWO – voltage supply and switching inputs/outputs

12-pin M12 connector (A-coded)

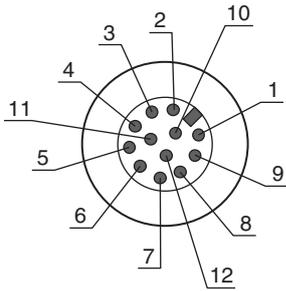


Fig. 7.2: PWR/SWI/SWO connection

Tab. 7.1: PWR/SWI/SWO pin assignment

Pin	Designation	Core color	Assignment
1	VIN	Brown	+18 ... +30 V DC operating voltage
2	GND	Blue	Negative operating voltage (0 V DC)
3	SWI1	White	Digital switching input 1 (trigger)
4	SWO2	Green	Digital switching output 2 (READY)
5	FE	Pink	Functional earth
6	n.c.	Yellow	Not assigned
7	SWO5	Black	Digital switching output (-X)
8	SWO6	Gray	Digital switching output (+X)
9	SWO7	Red	Digital switching output (-Y)
10	SWO8	Violet	Digital switching output (+Y)
11	SWI3	Gray/pink	Digital switching input 3 (Program Selection 0)
12	SWI4	Red/blue	Digital switching input 4 (Program Selection 1)
Thread (M12 connector)	FE (functional earth)		Connection cable shield. The shield of the connection cable is on the thread of the M12 connector.

NOTICE



The core colors only apply if Leuze's original connection cables are used (see chapter 16.3 "Cables accessories").



CAUTION



UL applications!

For UL applications, use is only permitted in Class 2 circuits in accordance with the NEC (National Electric Code).

Switching input/output


The sensor is provided with eight freely programmable switching inputs/outputs (SWI1, SWI3, SWI4, SWO2, SWO5 ... SWO8).

NOTICE	
	The function as switching input or switching output is set via the webConfig configuration tool (CONFIGURATION > DEVICE > Switching inputs/outputs , see chapter 9 "Starting up the device – Leuze webConfig tool").

The eight switching inputs/outputs are configured by default as follows:

- SWI1
Switching input: Trigger (default)
- SWO2
Switching output: device ready (default)
- SWI3
Switching input: Program selection 0
- SWI4
Switching input: Program selection 1
- SWO5
Switching output –X position (default)
- SWO6
Switching output +X position (default)
- SWO7
Switching output –Y position (default)
- SWO8
Switching output +Y position (default)

Function as switching input

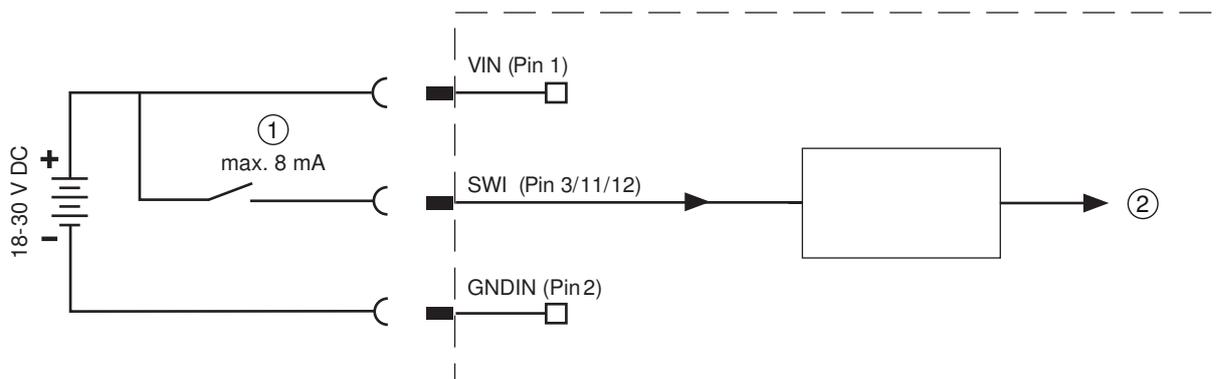


- 1 Switching input
- 2 Switching input to controller

Fig. 7.3: Switching input SWI1, SWI3 and SWI4 connection

NOTICE	
	Maximum input current! ↪ The input current of the respective switching input is maximum 8 mA.

Function as switching output

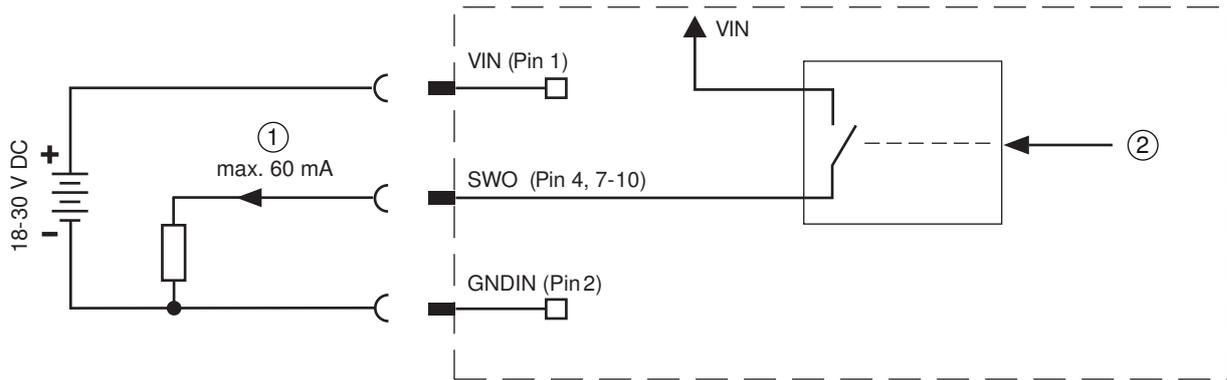

- 1 Switching output
- 2 Switching output from controller

Fig. 7.4: Switching output SWO2, SWO5 ... SWO8 connection

NOTICE

Maximum loading of the switching outputs!

- Do not load the respective switching output of the sensor with more than 60 mA at +18 V ... +30 V DC in normal operation.
- Each configured switching output is short-circuit proof.

7.3 HOST - Host input / Ethernet / PROFINET

4-pin, M12 socket (D-coded) for connecting to HOST.

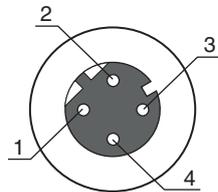


Fig. 7.5: HOST connection

Tab. 7.2: HOST pin assignment

Pin/terminal	Designation	Assignment
1	TD+	Transmit Data +
2	RD+	Receive Data +
3	TD-	Transmit Data -
4	RD-	Receive Data -
Thread (M12 socket)	FE (functional earth)	Connection cable shield. The shield of the connection cable is on the thread of the M12 socket.

NOTICE


Use ready-made cables!

- If possible, use the ready-made cables from Leuze (see chapter 16.3 "Cables accessories").

7.4 Ethernet star topology

The sensor is operated as a "stand-alone" single device in an Ethernet star topology with individual IP address.

- The sensor is designed as an Ethernet device with a standard baud rate of 10/100 Mbit.
- A fixed MAC address is assigned to each device by the manufacturer; this address cannot be changed.
- The device automatically supports the transmission rates of 10 Mbit/s (10BASE T) and 100 Mbit/s (10BASE TX), as well as auto-negotiation and auto-crossover.
- The device supports the following protocols and services:
 - TCP / IP (client/server)
 - UDP
 - DHCP
 - ARP
 - PING
- For communication with the superior host system, the corresponding TCP/IP protocol (client/server mode) or UDP must be selected.

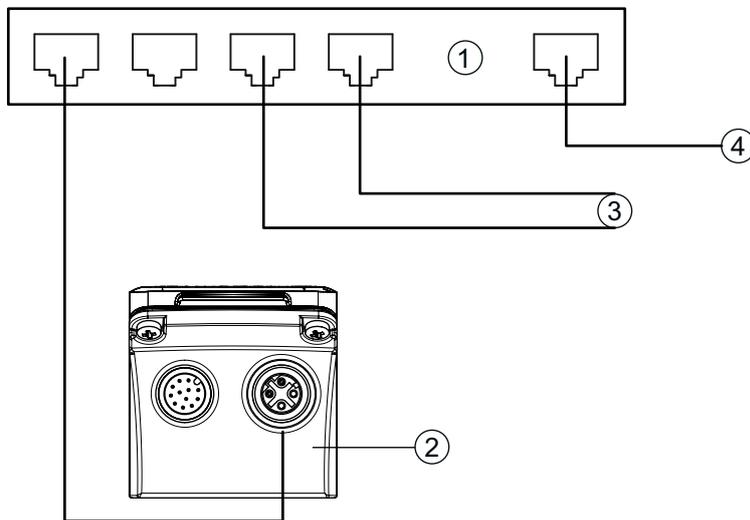

- 1 Ethernet switch
- 2 Positioning sensor of the IPS 400i series
- 3 Other network participants
- 4 Host interface - PC/control

Fig. 7.6: Ethernet star topology

Ethernet cable assignment

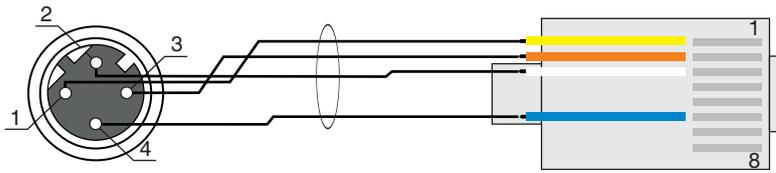


Fig. 7.7: HOST to RJ-45 cable assignments
Designed as shielded cable, max. 100 m.

Pin (M12)	Designation	Pin/core color (RJ45)
1	TD+	1/yellow
2	RD+	3/white
3	TD-	2/orange
4	RD-	6/blue

NOTICE

Self-configured cables with Ethernet interface!

- ↪ Ensure adequate shielding.
- ↪ The entire interconnection cable must be shielded and earthed.
- ↪ The RD+/RD- and TD+/TD- wires must be stranded in pairs.
- ↪ Use at least a CAT 5 cable for the connection.

7.5 Cable lengths and shielding


Observe the maximum cable lengths and the shielding types:

Connection	Interface	Max. cable length	Shielding
Network from the first IPS 400i to the last network participant	Ethernet	Max. segment length: 100 m for 100BASE-TX twisted pair (min. CAT 5)	Shielding absolutely necessary
Switching input		10 m	Not necessary
Switching output		10 m	Not necessary
IPS 400i power supply unit		30 m	Not necessary

7.6 Connecting positioning sensor to Ethernet switch

The Ethernet communication is decentrally distributed in the high-bay storage device via the Ethernet switch.

Circuit diagram example for the connection to an Ethernet switch

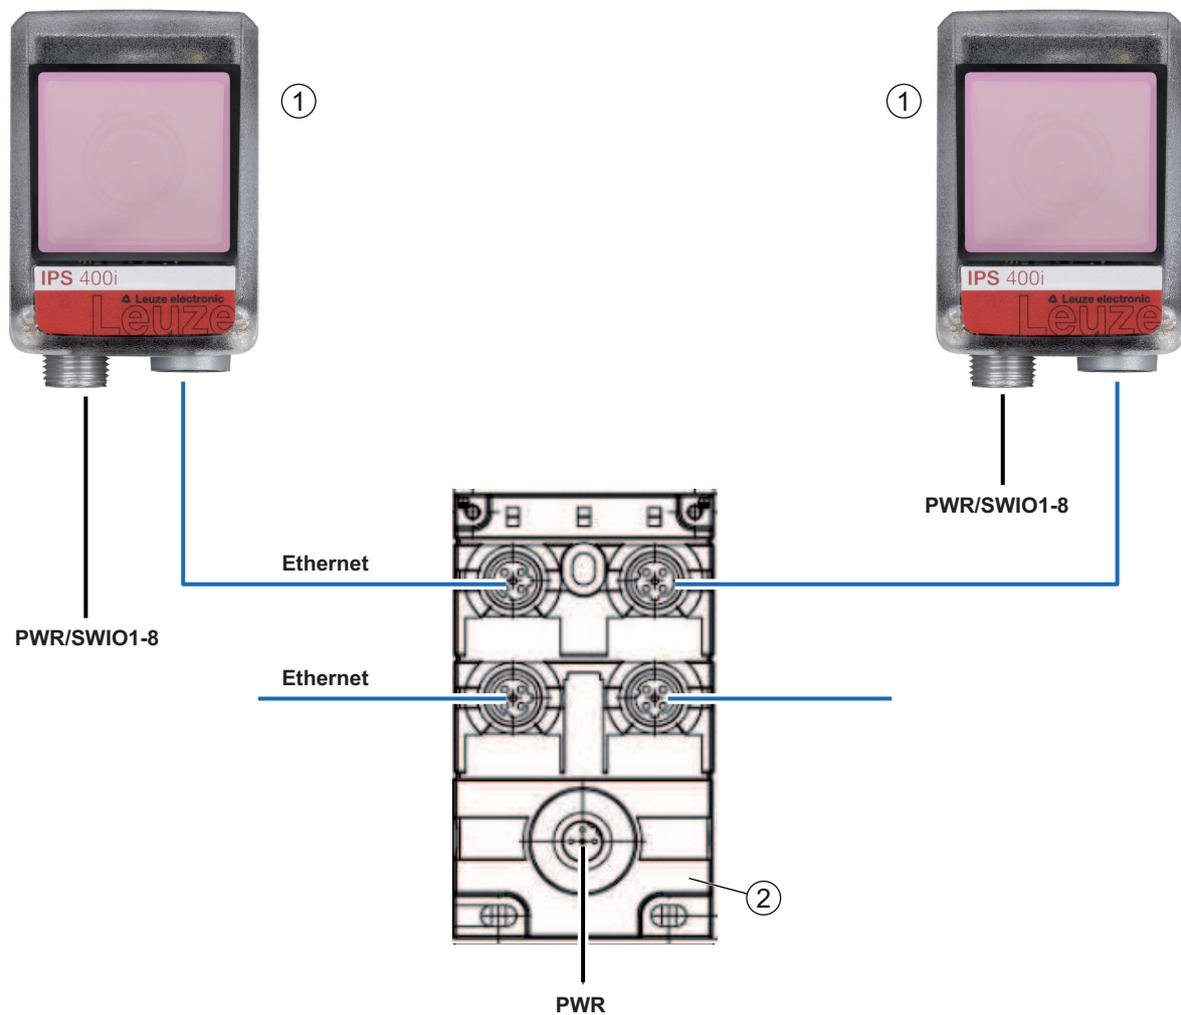

- 1 IPS 400i positioning sensor
- 2 Ethernet switch

Fig. 7.8: Circuit diagram example for connection to Ethernet switch

8 Starting up the device – Basic configuration

8.1 Measures to be performed prior to the initial commissioning

NOTICE	
	<ul style="list-style-type: none"> ↪ Observe the notices for device arrangement (see chapter 6.1 "Determining the mounting position of the positioning sensor"). ↪ If possible, always trigger the positioning sensor with the aid of commands or an external signal transmitter (e.g. photoelectric sensor/diffuse sensor). ↪ Before commissioning, familiarize yourself with the operation and configuration of the device. ↪ Before connecting the operating voltage, recheck all connections and ensure that they have been properly made.

NOTICE	
	No additional configuration software is necessary for commissioning.

8.2 Starting the device

- ↪ Connect the 18 V ... 30 V DC operating voltage.
- ⇒ After applying the operating voltage, the device operates with the factory settings.
 - Activation of the desired program (default: program 1).
 - Activation via SWI1 (default: reading gate control).
 - If a marker is detected, the following is output:
 - Switching outputs: Position value via SWO5 ... SWO8 (default)
 - Ethernet communication: Position value X/Y, status, quality score
 - Feedback LEDs: Status of the switching outputs SWO5 ... SWO8

NOTICE	
	Deviations from these settings must be set via the webConfig tool (see chapter 9 "Starting up the device – Leuze webConfig tool").

- ↪ Using the online commands, important device functions can be checked, e.g. reading activation (see chapter 11.1 "Online commands").

NOTICE	
	<p>For information on how to proceed in the event of problems during commissioning of the devices see chapter 13 "Diagnostics and troubleshooting".</p> <p>If a problem occurs that cannot be rectified even after checking all electrical connections and settings on the devices and on the host, contact your responsible Leuze subsidiary or Leuze customer service (see chapter 14 "Service and support").</p>

8.3 Configuring and aligning the device via control buttons

Prerequisites:

- The positioning sensor is correctly mounted; in particular, at the correct working distance (see chapter 6 "Mounting").
- The positioning sensor is correctly connected (see chapter 7 "Electrical connection").
- The application data is set via the webConfig tool (see chapter 9 "Starting up the device – Leuze web-Config tool").
- The housing hood of the positioning sensor is aligned parallel to the marker.
- The marker is as close as possible to the center of the positioning sensor's region of interest.

NOTICE	
	The working distance set in the device must correspond to the actual working distance.

NOTICE	
	<ul style="list-style-type: none"> ↪ Use the navigation button ► to move through the menu. ↪ Activate or deactivate the desired selection with the enter button ↵. ↪ First, the program is selected and confirmed. The <i>AUTO</i> or <i>ADJ</i> function is then activated or deactivated.

- ↪ Press the navigation button ► once.
 - ⇒ The PROGRAM 1 LED flashes; program 1 is preselected.
 - ⇒ Press the navigation button several times to preselect the desired program.
- ↪ Press the enter button ↵ to activate the desired program.
- ↪ Press the navigation button ► repeatedly until the AUTO LED flashes.
- ↪ Press the enter button ↵ to activate the *AUTO* function.
- ↪ Align the positioning sensor so that all four feedback LEDs permanently illuminate green.

NOTICE	
	<p>The feedback LEDs signal the X/Y distance to the marker by means of the flashing frequency:</p> <ul style="list-style-type: none"> ↪ Slow flashing: Large distance ↪ Fast flashing: Short distance ↪ Continuous illumination: Positioning sensor is optimally aligned

- ↪ If all four feedback LEDs illuminate green continuously, press the enter button ↵ for three second to apply the parameters.
 - The positioning sensor is optimally aligned.
 - The exposure time and the marker diameter are taught.

Upon exiting a function mode, the four feedback LEDs signal whether teaching was successful:

- Single, brief flash: Teaching successful
- Flashing fast (3 seconds): Teaching not successful

8.4 Setting the communication parameters

With the communication parameters, you determine how data is exchanged between device and host system, monitor PCs etc.

NOTICE	
	For devices with integrated PROFINET interface: see chapter 10 "PROFINET"

8.4.1 Manually setting the IP address

Set the IP manually if your system does not include a DHCP server or if the IP addresses of the devices are to be set permanently.

Setting the IP address via PC/laptop

Set the network address on the PC (example for Windows7).

- ☞ Log in as administrator.
- ☞ Select *Start > System control > Network and Internet > Network and Sharing Center*.
 - ⇒ Select *LAN connection* and double-click to open the *Properties* dialog.
- ☞ Select *Internet Protocol Version 4 (TCP/IPv4)* and click on the [Properties] button.
- ☞ Set the *IP address* of the PC.
 - ⇒ The IP address of the PC must not be identical to the IP address of the sensor.
 - ⇒ Example: IP address of the sensor: 192.168.060.101
IP address of the PC: 192.168.060.110
- ☞ Set the subnet mask of the PC to the same value as on the sensor.
 - ⇒ Example: 255.255.255.0
- ☞ Confirm all of the settings dialogs with [OK] or [Close].
- ☞ Connect the Ethernet interface of the device directly to the LAN port of the PC.
- ☞ Start the webConfig tool using your PC's Internet browser with IP address **192.168.060.101**.

NOTICE



The device cannot be accessed if the IP address is incorrect!

- ☞ Make certain that the correct IP address is entered. The device can otherwise no longer be accessed.

Setting the IP address with Device-Finder

- ☞ Download the program *Device-Finder* from the Internet to the PC.
 - ⇒ Call up the Leuze home page: **www.leuze.com**.
 - ⇒ Enter the type designation or part number of the device as the search term.
 - ⇒ The program *Device-Finder* can be found on the product page for the device under the *Downloads* tab.
- ☞ Connect the Ethernet interface of the device directly to the LAN port of the PC.
- ☞ Start the program *Device-Finder*.
 - ⇒ The program displays all sensors of the IPS 400i series that are available in the network.
- ☞ Select the IPS 4xxi sensor from the list.
 - ⇒ You can now change the IP address of the sensor to the desired IP address.

8.4.2 Automatically setting the IP address

Set the IP address automatically if a DHCP server assigns the IP addresses in the system.

- ☞ Select the option to obtain the IP address automatically in the webConfig tool:
Configuration > Control > Ethernet DCR > DHCP
- ☞ Use the configuration code to obtain the IP address automatically (Configuration via configuration codes).

8.4.3 Address Link Label

The "Address Link Label" is an additional stick-on label that is affixed to the device.

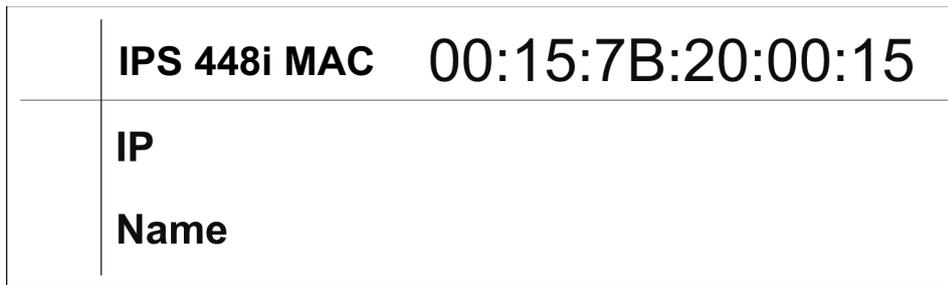


Fig. 8.1: Example of an "Address Link Label"; the device type varies depending on the series

- The "Address Link Label" contains the MAC address (Media Access Control address) of the device and makes it possible to enter the IP address and the device name manually.

The area of the "Address Link Label" on which the MAC address is printed can be separated from the remainder of the stick-on label if necessary using the perforation.

- The "Address Link Label" can be removed from the device and affixed in the installation and layout diagrams to designate the device.
 - Once it is affixed in the documents, the "Address Link Label" establishes a unique reference between the mounting location, the MAC address or the device, and the associated control program.
- There is no need for time-consuming searching, reading, and manually writing down of the MAC addresses of every device that is installed in the system.

NOTICE



Each device with Ethernet interface is uniquely identified via the MAC address assigned during production. The MAC address is also listed on the name plate of the device.

If multiple devices are commissioned in a system, the MAC address of each installed device must be correctly assigned, e.g., during programming of the control.

8.4.4 Ethernet host communication

You can configure the connections to an external host system via the Ethernet host communication.

You can use both the UDP protocol as well as the TCP/IP protocol – in either client or in server mode. Both protocols can be activated simultaneously and used in parallel.

- The connection-free UDP protocol is used primarily to transfer process data to the host (monitor operation).
- The connection-oriented TCP/IP protocol can also be used to transfer commands from the host to the device. With this connection, the data is backed up by the TCP/IP protocol itself.
- If you would like to use the TCP/IP protocol, you must also define whether the device is to operate as a TCP client or as a TCP server.

UDP

The device requires from the user the IP address and the port number of the communication partner. In the same way, the host system (PC/control) also requires the set IP address of the device and the selected port number. By assigning these parameters, a socket is formed via which the data can be sent and received.

↪ Activate the UDP protocol.

↪ Set the following values:

- ⇒ IP address of the communication partner
- ⇒ Port number of the communication partner

The corresponding adjustment options can be found in the webConfig tool:

Configuration > Control > Host > Ethernet > UDP

TCP/IP

- ↪ Activate the TCP/IP protocol.
- ↪ Set the TCP/IP mode of the device.
 - ⇒ In TCP client mode, the device actively establishes the connection to the superior host system, e.g., PC/control as server. The device requires from the user the IP address of the server (host system) and the port number on which the server (host system) accepts a connection. In this case, the device determines when and with whom a connection is established.
 - ⇒ In TCP server mode, the superior host system (PC/control) actively establishes the connection and the connected device waits for the connection to be set up. The TCP/IP stack must be informed by the user as to the local port of the device (port number) on which connection requests from a client application (host system) are to be received. If there is a connection request and a connection is established by the superior host system (PC/control as client), the device – in server mode – accepts the connection. Data can then be sent and received.
- ↪ With a device as TCP client, set the following values:
 - ⇒ IP address of the TCP server, normally the IP address of the control or the host computer
 - ⇒ Port number of the TCP server
 - ⇒ Timeout for the wait time for an answer from the server
 - ⇒ Repetition time for renewed communication attempt following a timeout
- ↪ With a device as TCP server, set the following values:
 - ⇒ Port number for the communication of the device with the TCP clients

The corresponding adjustment options can be found in the webConfig tool:

Configuration > Control > Host > Ethernet > TCP/IP

8.4.5 FTP client

To transfer images and log files, you can configure process data output via an FTP server.

- ↪ You can set the IP address and the port number of the FTP server with which communication is to occur.
- ↪ Assign user names and password settings or define the direction of communication using the *Passive mode* option.
 - ⇒ When the *Passive mode* option is activated, the FTP client sets up an outgoing connection to the server.
- ↪ Activate the FTP client.
- ↪ Select which images (OK/NOK) are transferred. You can assign each one a name.

The corresponding adjustment options can be found in the webConfig tool:

Configuration > Control > Host > FTP client

NOTICE

- ↪ You can set the time stamp via **Maintenance > System clock**.
 - ⇒ The system clock is reset if the operating voltage is interrupted.

8.5 Configuration via configuration codes

You can make configuration changes with the help of printed configuration codes (see chapter 18.2 "Configuration via configuration codes").

8.6 Activating device functions

You can activate the following device functions via the control buttons on the control panel:

- *AUTO*
- *ADJ*

↵ Connect the sensor to the voltage supply.

↵ Select the desired function via the control buttons on the control panel (see chapter 3.4.2 "Function selection and program selection").

AUTO

By activating the *AUTO* function, the following sequence is started:

1. Optimum image setting: The sensor determines the optimum illumination setting for the given scenario.
2. Determine marker: Automatic determination of the marker.
3. Feedback LEDs: Optical feedback for aligning the sensor.
4. Configuration code: Read in a printed configuration code.

This process then begins from the start.

As soon as a valid configuration code is read in, the sensor exits the *AUTO* function.

NOTICE



Only activate the *AUTO* function while at a standstill!

↵ Only activate the *AUTO* function if the marker is not moving relative to the device.

NOTICE



Deactivate the *AUTO* function!

↵ You must deactivate the *AUTO* function with the enter button ↵.

ADJ

Adjustment function for aligning the sensor.

- With activation of the alignment function, the four feedback LEDs signal the alignment of the sensor to the marker.
- By pressing the enter button ↵, the position is taught-in provided the entire region of interest fits in the sensor's field of view after shifting.

NOTICE



Deactivate the *ADJ* function!

↵ You must deactivate the *ADJ* function with the enter button ↵.

9 Starting up the device – Leuze webConfig tool

The positioning sensors of the IPS 400i series can be operated and configured via the Ethernet service interface with the integrated Leuze webConfig tool.

With the webConfig tool, an operating-system independent, web-technology based, graphical user interface is available for configuring sensors.

Through the use of HTTP as communication protocol and the client-side restriction to standard technologies (HTML, JavaScript and AJAX), which are supported by all of today's popular, modern browsers, it is possible to operate the webConfig tool on any Internet-enabled PC.

NOTICE	
	The webConfig tool is offered in the following languages: German, English, French, Italian, Spanish Chinese and Korean

9.1 System requirements

To use the webConfig tool, you need a PC or laptop with the following specifications:

Tab. 9.1: System requirements for the webConfig tool

Monitor	Min. resolution: 1280 x 800 pixels or higher
Internet browser	Internet Explorer version 11.0 or higher Firefox version 30 or higher Chrome

NOTICE	
	<ul style="list-style-type: none"> ↪ Regularly update the operating system and the Internet browser. ↪ Install the current Windows Service Packs.


9.2 Start webConfig tool

- ✓ Prerequisite: IP address and subnet mask for the LAN connection with the device are set correctly.
- ↪ Connect the operating voltage to the device.
- ↪ Connect the HOST interface of the device to the PC. The connection to the HOST interface of the device is made via the LAN port of the PC.
- ↪ Start the webConfig tool via your PC's Internet browser with IP address **192.168.60.101** or with the IP address set by you.
 - ⇒ **192.168.60.101** is the standard Leuze IP address for communication with positioning sensors of the IPS 400i series.

The PC displays the webConfig start page with the current process information in the *Process* operating mode:

- Current image of the sensor
- Current results: X-value, Y-value, status, quality score
- Brief history of the last results
- States of the switching inputs/outputs

NOTICE	
	The process information may be displayed with a time delay depending on the current processing speed.

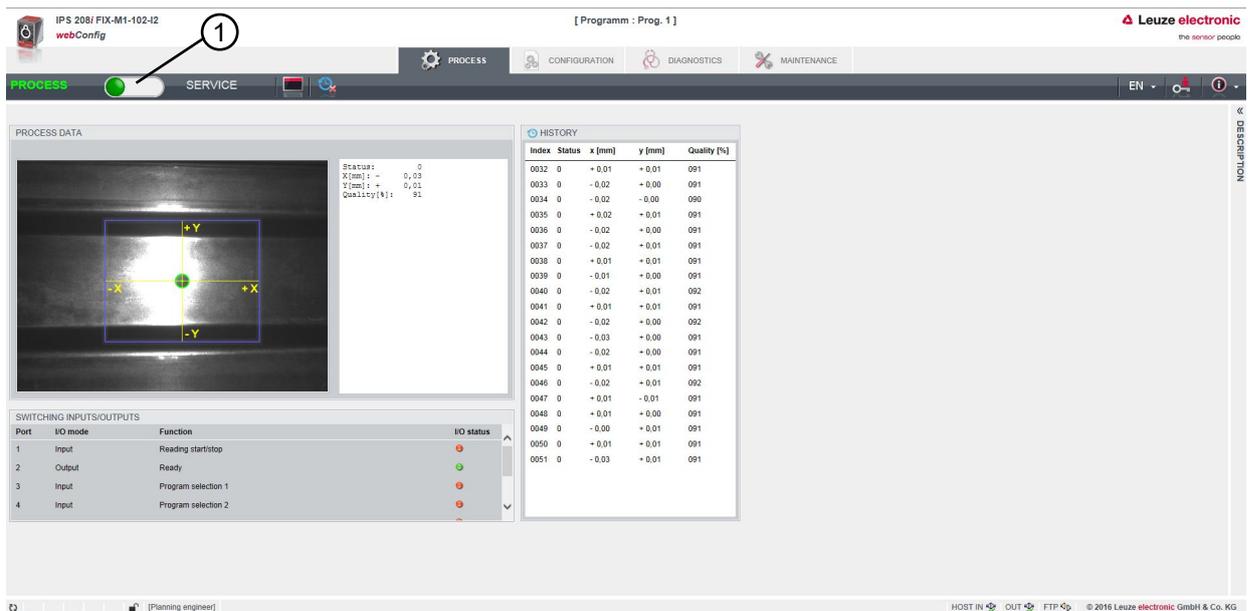

1 Changing the operating mode (*Process - Service*)

Fig. 9.1: The start page of the webConfig tool

The user interface of the webConfig tool is largely self-explanatory.

NOTICE



The webConfig tool is completely contained in the firmware of the device. The pages and functions of the webConfig tool may appear and be displayed differently depending on the firmware version.

Clear browser history

The cache of the Internet browser is to be cleared if different device types or devices with different firmware were connected to the webConfig tool.

- ↪ Delete cookies and temporary Internet and website data from browser history before starting the web-Config tool.
- ⇒ Example for Internet Explorer 10:
Settings > Security > Browser History > [Delete]

Note limit of Firefox sessions for version 17.0 and higher

If the limited number of Firefox sessions is exceeded, it may no longer be possible to address the device via the webConfig tool.

- ↪ Do **not** use the Internet browser's refresh function:
[Shift] [F5] or [Shift] + mouse click

9.3 Short description of the webConfig tool

The menus and dialog boxes of the webConfig tool are intuitive to operate and provide texts and tool tips. The start page of the webConfig tool displays the current process information.

9.3.1 Change operating mode

For configurations with the webConfig tool, you can switch between the following operating modes:

- *Process*

The device is connected to the control or to the PC.

- The process communication to the control is activated.
- The switching inputs/outputs are activated.
- The image currently recorded by the sensor is displayed if the function was not deactivated in the webConfig tool.
- The configuration cannot be changed.

- *Service*

- Process communication to the control or to the PC has been interrupted.
- The switching inputs/outputs are deactivated.
- The configuration can be changed.


NOTICE

Configuration changes only in the *Service* operating mode!

Changes made using the *CONFIGURATION* function can only be performed in the *Service* operating mode.

Located in the upper left of all pages of the webConfig tool is a software switch for changing the operating mode (*Process - Service*).

After changing to the *Service* operating mode, the **CONFIGURATION** menu is displayed.

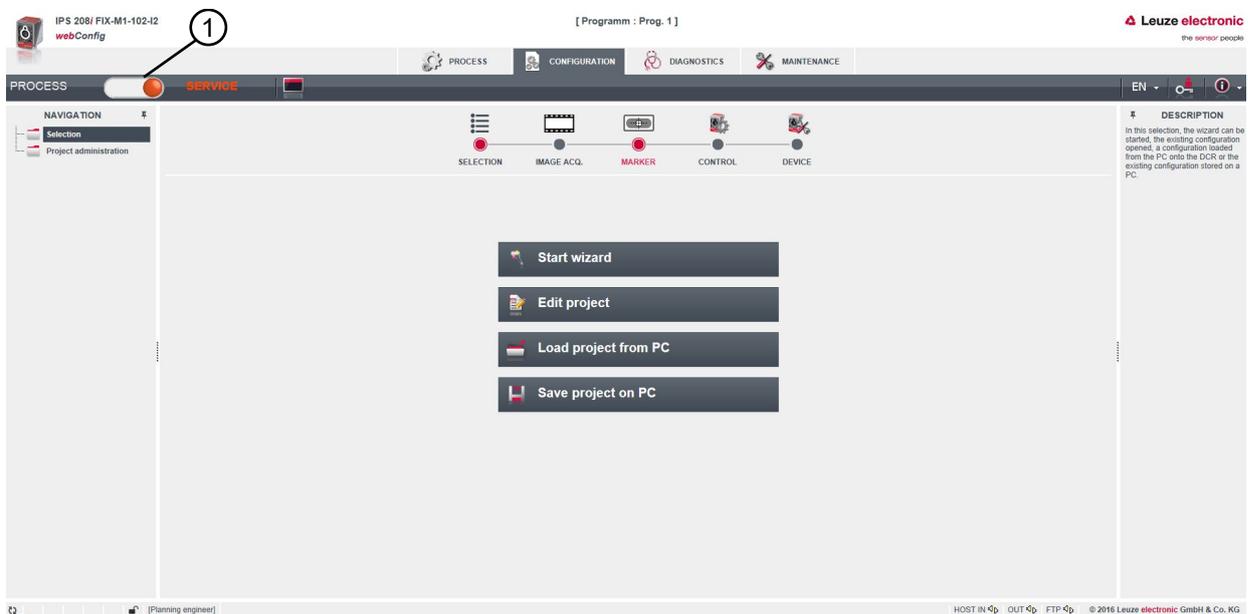

1 Changing the operating mode (*Process - Service*)

Fig. 9.2: **CONFIGURATION** menu of the webConfig tool

9.3.2 Menu options of the webConfig tool

The webConfig tool offers the following menu functions:

- **PROCESS**
 - Information on the current result
 - Current camera image
 - Status of the switching inputs/outputs
 - Reading statistics
- **CONFIGURATION**
 - Setting the application
 - Configuring data formatting and data output
 - Configuring the switching inputs/outputs
 - Configuring communication parameters and interfaces
 - General device settings, e.g. device names
 - Configuring operation with external illumination (see chapter 5.2.3 "Commissioning")
- **DIAGNOSIS**
 - Event logging of warnings and errors
- **MAINTENANCE**
 - Assigning user roles (user management)
 - Backup/restore the configuration file
 - Update firmware
 - Setting system time (system clock)
 - Managing user guidance

9.3.3 CONFIGURATION menu

NOTICE

!

Configuration changes only in the Service operating mode!

Changes made using the **CONFIGURATION** menu can only be performed in the *Service* operating mode.

The screenshot shows the webConfig tool interface for the device 'IPS 208/ FIX-M1-102-12'. The 'CONFIGURATION' menu is selected, and the 'SERVICE' mode is active. The main content area displays four buttons: 'Start wizard', 'Edit project', 'Load project from PC', and 'Save project on PC'. A 'DESCRIPTION' panel on the right provides additional context: 'In this selection, the wizard can be started, the existing configuration opened, a configuration loaded from the PC onto the DCR or the existing configuration stored on a PC.'

Fig. 9.3: CONFIGURATION menu

- ↪ Select the application that you would like to configure.
 - [Start wizard]: Quick configuration in just a few steps
 - [Edit project]: Configuration via the full view of the webConfig tool
 - [Load project from PC]: Configuration via an existing configuration project
 - [Save project on PC]: Save configuration project

9.3.4 Configuring applications with the wizard

With the configuration wizard, you can set up your application in just a few steps.

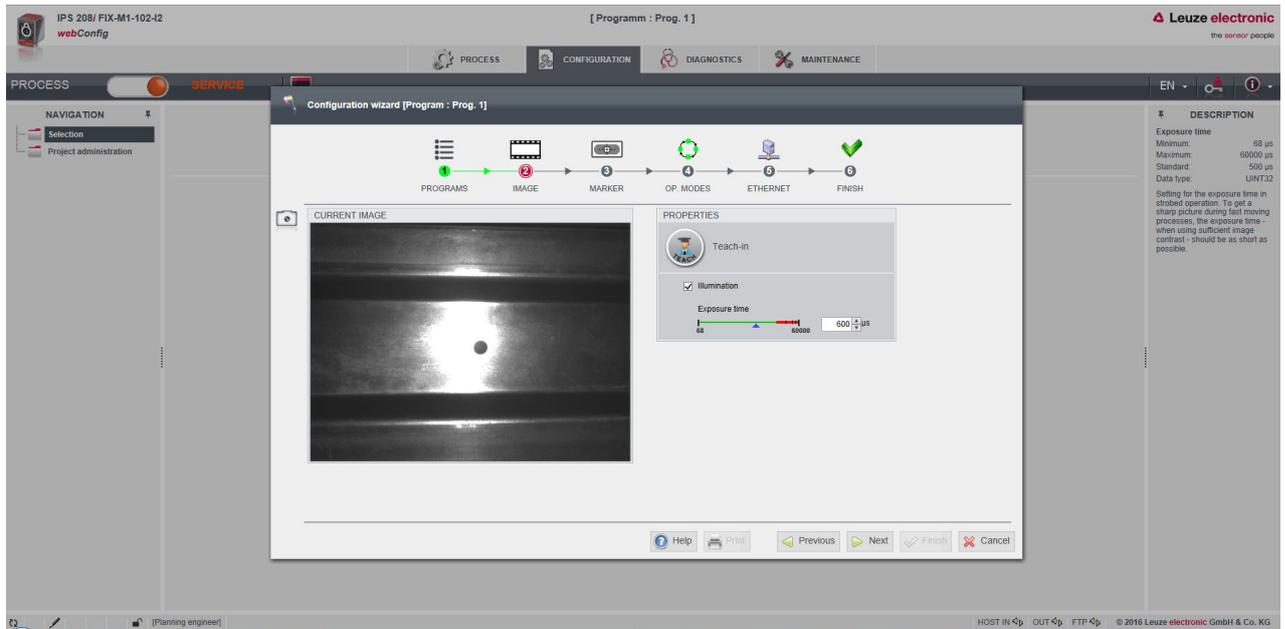


Fig. 9.4: Configuration wizard

- ↪ Select **CONFIGURATION** > [Start Wizard].
- ↪ Make the settings using the configuration steps presented by the wizard.

NOTICE



The settings are not saved until the final configuration step (FINISH) is performed.

9.4 Configuring compartment fine positioning

For faster commissioning, you can set the most important parameters for the programs (PROGRAM 1 ... 8) using the configuration wizard. Alternatively, you can perform the configuration settings for compartment fine positioning manually or via configuration codes.

9.4.1 Selecting the program

A total of eight programs are available; these can be configured individually.

➤ Select **CONFIGURATION > PROGRAM ADMINISTRATION**.

⇒ The *Program overview* dialog is displayed.

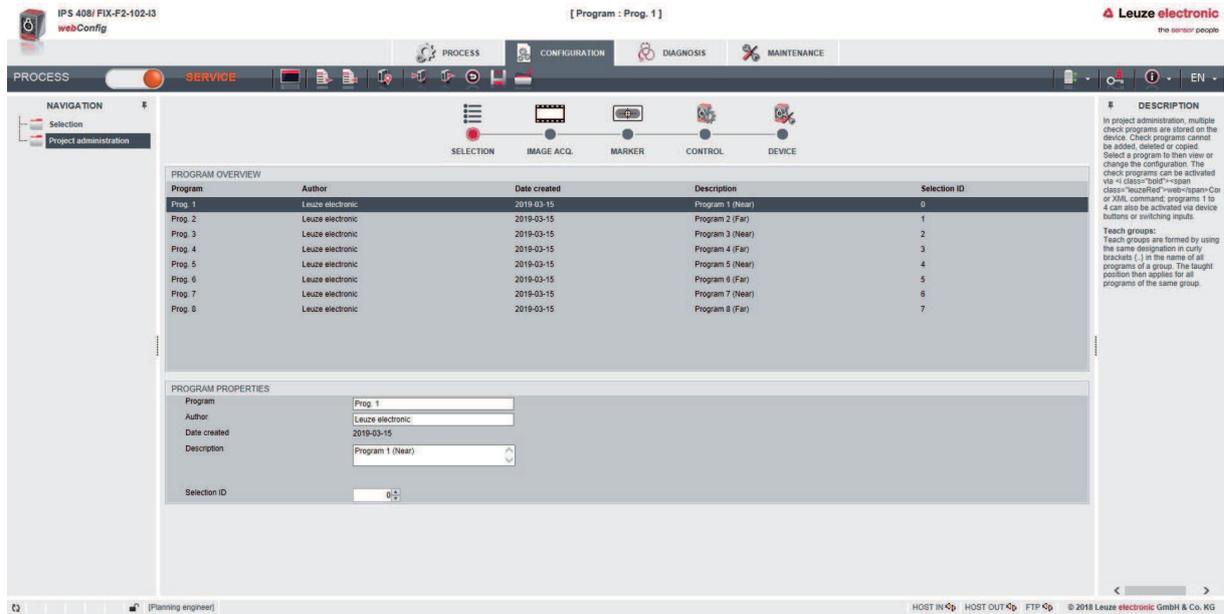


Fig. 9.5: Program overview dialog

➤ Select the program that you want to activate.

Tab. 9.2: Overview of the digital inputs for programs

Digital input SWI4	Digital input SWI3	Selection ID	Program name
0	0	0	PROGRAM 1
0	1	1	PROGRAM 2
1	0	2	PROGRAM 3
1	1	3	PROGRAM 4

NOTICE

Only four programs or the first four selection IDs can be selected via the digital inputs.

9.4.2 Configuring image acquisition

- ↪ Select **CONFIGURATION > PROGRAM ADMINISTRATION**.
- ↪ Select the active program.
- ↪ Select **CONFIGURATION > Image acquisition**.
 - ⇒ The *Image acquisition* dialog is displayed.

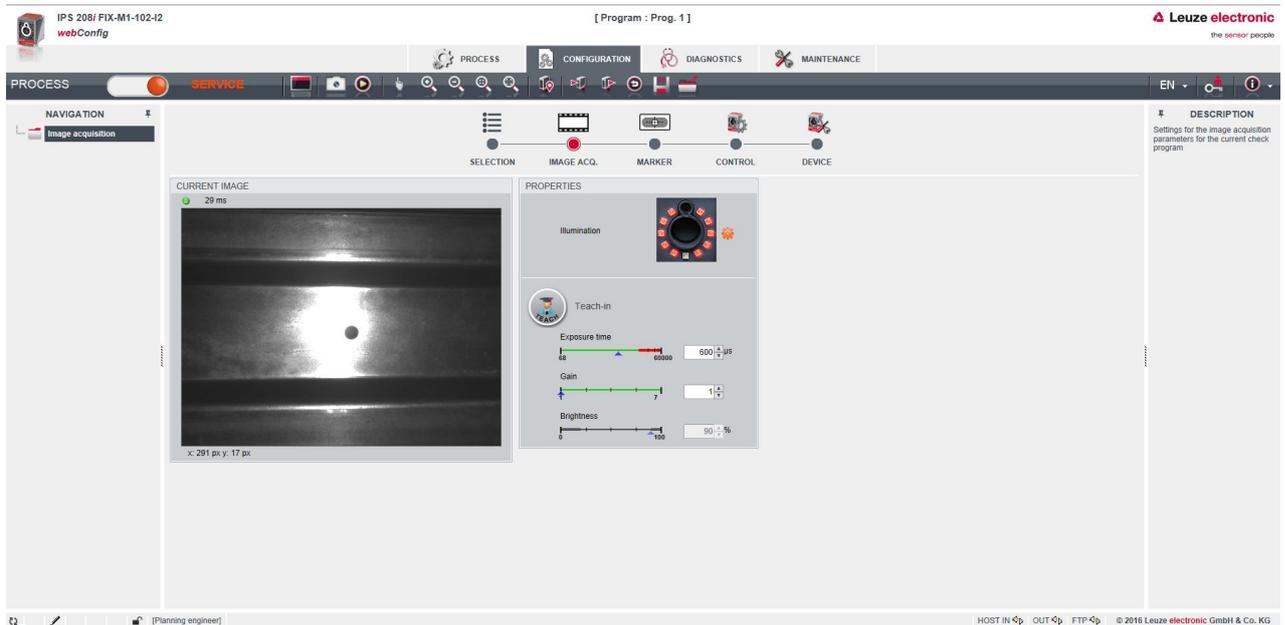


Fig. 9.6: Image acquisition

9.4.3 Configuring markers

Configuration of the current marker in the application.

- ↪ Select **CONFIGURATION > PROGRAM ADMINISTRATION**.
- ↪ Select the active program.
- ↪ Select **CONFIGURATION > Marker**.
 - ⇒ The *Marker* dialog is displayed.

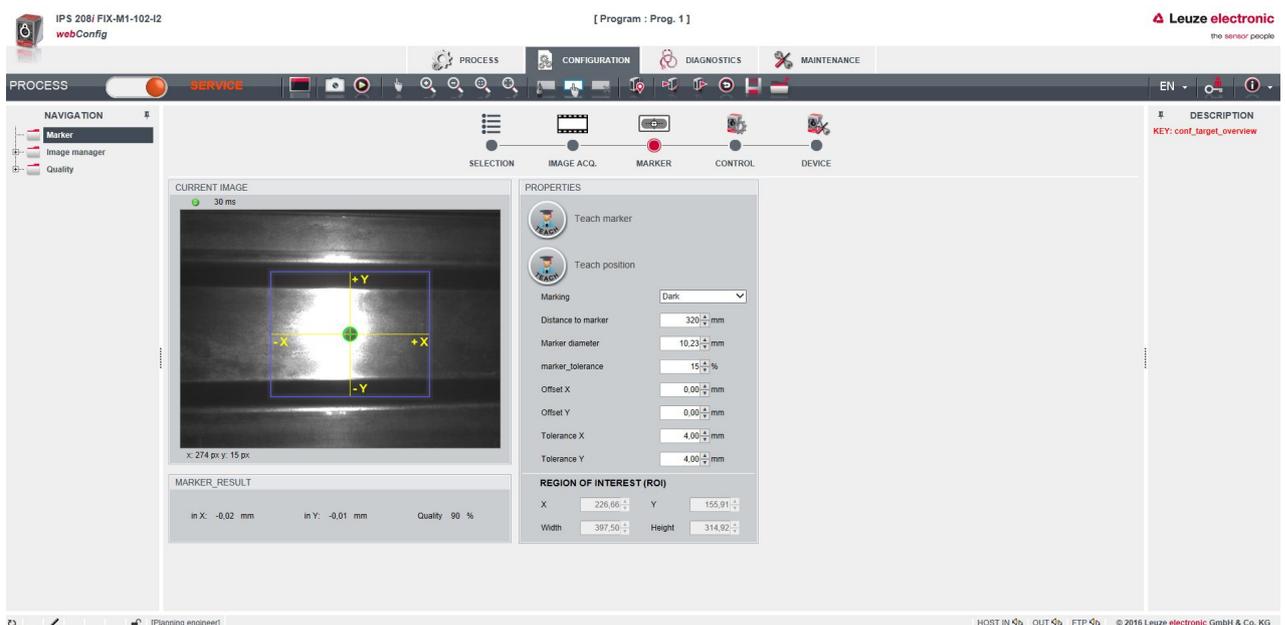


Fig. 9.7: Configuring markers

NOTICE




Set the working distance!

- ↪ Set the actual working distance of the sensor before you press the [Teach marker] button.
- ↪ The marker (center point) must be located within the sensor's region of interest (blue frame).

9.4.4 Assigning measurement values to digital switching outputs

Program-specific assignment of measurement values to the programmable digital switching outputs.


- ↪ Select the active program.
- ↪ Select **CONFIGURATION > CONTROL > Digital IOs**.
- ⇒ The *Digital IOs* dialog is displayed.

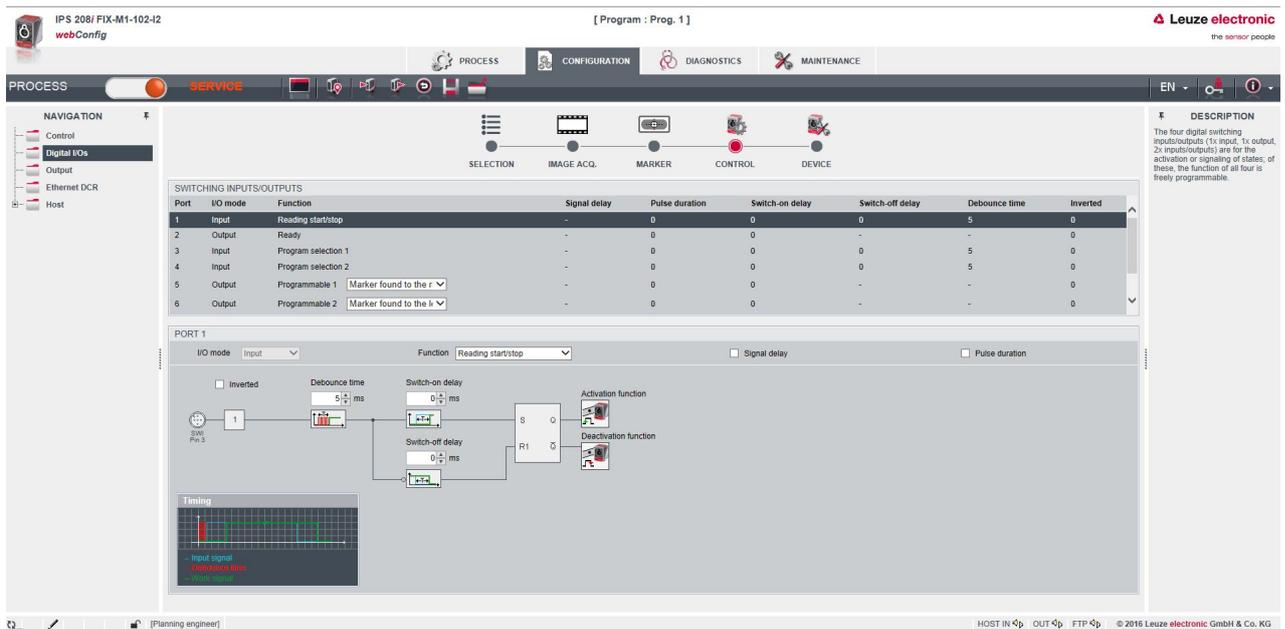

Port	IO mode	Function	Signal delay	Pulse duration	Switch-on delay	Switch-off delay	Debounce time	Inverted
1	Input	Reading start/stop	-	0	0	0	5	0
2	Output	Ready	-	0	0	-	-	0
3	Input	Program selection 1	-	0	0	0	5	0
4	Input	Program selection 2	-	0	0	0	5	0
5	Output	Programmable 1 Marker found to the r	-	0	0	-	-	0
6	Output	Programmable 2 Marker found to the l	-	0	0	-	-	0

Fig. 9.8: Digital IOs

- The sensor makes the -X, +X, -Y, +Y digital switching outputs available.
- The nominal position is located within a rectangular tolerance range.
- Depending on the X deviations and Y deviations, the switching outputs are switched as follows.
 - IO5=-X
 - IO6=+X
 - IO7=+Y
 - IO8=-Y

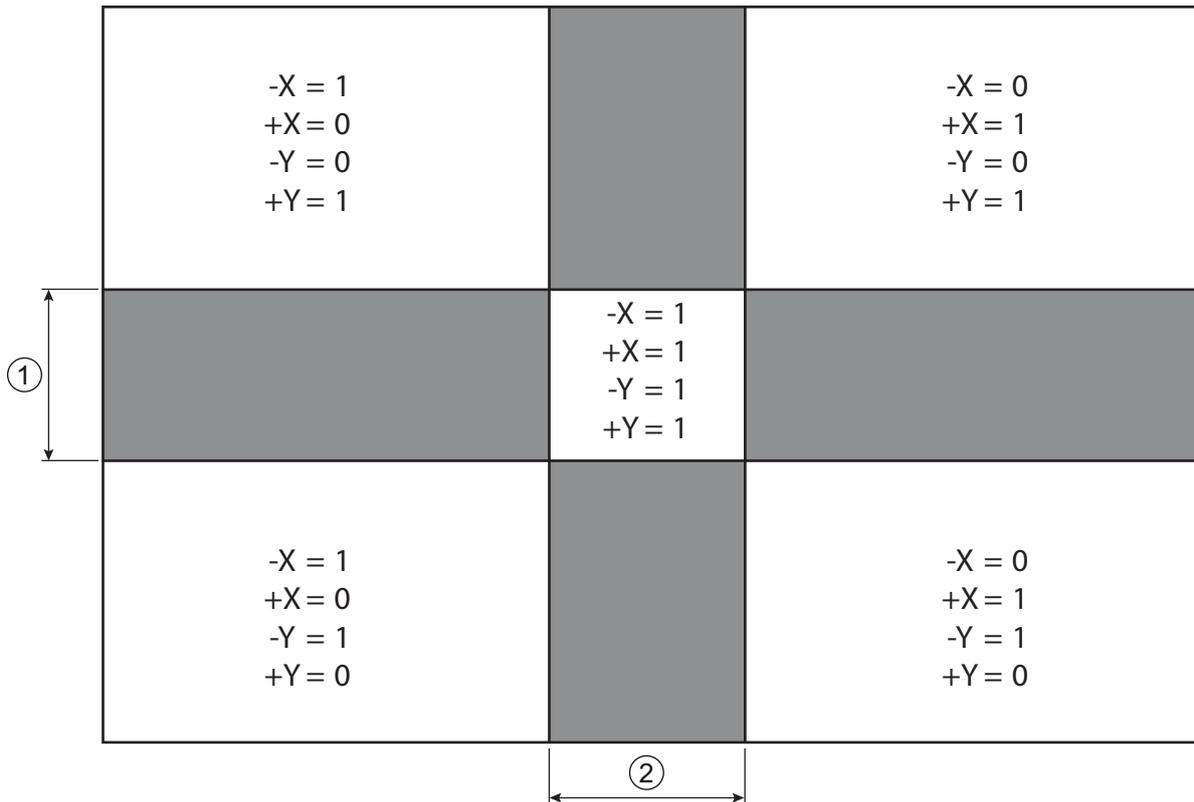

- 1 Tolerance range Y
- 2 Tolerance range X

Fig. 9.9: Viewing direction: Towards the marker

9.4.5 Outputting measurement values via Ethernet

Configuration of the measurement value output via the Ethernet interface.

The output of measurement values can be individually configured.

- ↩ Select the active program.
- ↩ Select **CONFIGURATION > CONTROL > Output**.
- ⇒ The *Output* dialog is displayed.

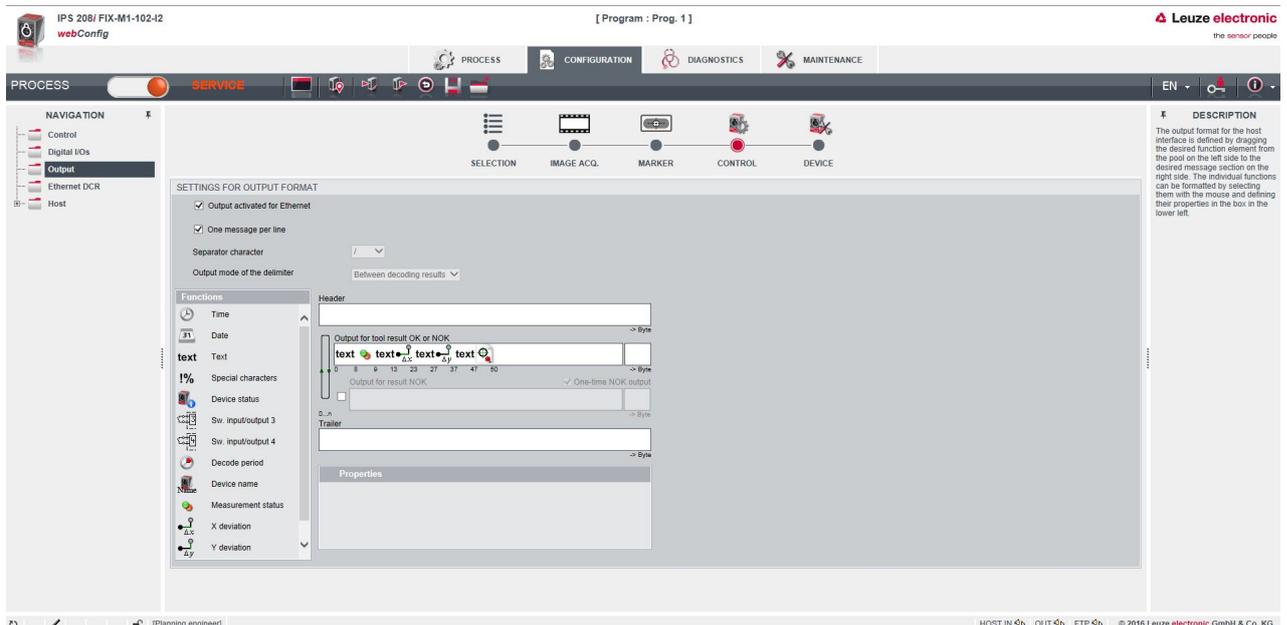


Fig. 9.10: Measurement value output

10 PROFINET

10.1 Overview

The IPS 448i positioning sensor is designed as a modular field device and is a PROFINET-IO device that communicates cyclically with the assigned PROFINET-IO controller during operation.

The device can be operated as a single device (standalone) with individual device name in a PROFINET-IO star or tree topology. The control must communicate this device name to the participant during the device naming (see chapter 10.3 "Configuring for the Siemens SIMATIC-S7 control").

Performance characteristics

The device has the following performance characteristics:

- A GSDML file is available for the device description
- The device family is certified as a PROFINET-IO device according to V2.34
- PROFINET-IO with real-time (RT) communication
- Standard Fast Ethernet (100 Mbit/s) connection (M12 technology)
- Auto-crossover and auto-negotiation
- Cyclical data exchange
- 4-pin, M12 connectors with D-coding are used for the electrical connection
- Identification & maintenance functions (I&M) IM0 – IM4
- The IP address – or name assignment – is set using, e.g., the Siemens STEP7 or TIA development environment or comparable tools
- Cycle time: maximum 4 ms (*MinDeviceInterval=128*)
- Function range acc. to Conformance Class B
- Network load class I

Communication

Basic communication and integration takes place via the GSDML file (see chapter 10.2 "GSDML file"). The modules of the GSDML file do not support any configuration of the device functionality. Configuration is performed via other mechanisms, e.g., the webConfig tool or online/XML commands (see chapter 9 "Starting up the device – Leuze webConfig tool"; see chapter 11 "Interfaces – Communication").

Each device has a unique MAC address (Media Access Control) that is specified on the name plate. The MAC address (MAC-ID) is linked to an IP address during the course of configuration. The MAC address can be found on the name plate and on an easily removable "Address Link Label" (MAC address) that is also attached to the device.

On delivery, the device is assigned the following network address:

- IP address: 192.168.60.101
- Subnet mask: 255.255.255.0

Electrical connection

The device features multiple M 12 connectors / sockets for the electrical connection of the supply voltage, the interface and the switching inputs and outputs (see chapter 7 "Electrical connection").

10.2 GSDML file

The functionality of the IPS 448i via the PROFINET interface is defined with input/output data that is defined in the modules of the GSDML file (see chapter 10.4 "PROFINET project modules").

A user-specific configuration tool is used during PLC program creation to integrate the required modules and configure them appropriately for their respective use.

When operating the device on the PROFINET, all input/output data is occupied with default values. If this input/output data is not changed by the user, the device operates with the default settings set by Leuze on delivery. The default settings of the device can be found in the module descriptions.

NOTICE	
	<p>Observe when configuring PROFINET devices!</p> <ul style="list-style-type: none"> ↪ Always perform the basic configuration using the GSDML file (GSDML=Generic Station Description Markup Language). ↪ Download the appropriate GSDML file from the Internet: www.leuze.com. ↪ In process operation, the input/output data of the respective, activated GSDML modules are exchanged with the control. ↪ If you switch the device to the <i>Service</i> operating mode via the webConfig tool, the device is disconnected from the PROFINET.

General information on the GSDML file

The term GSD (Generic Station Description) stands for the textual description of a PROFINET device model. For the description of the complex PROFINET device model, the XML-based GSDML (Generic Station Description Markup Language) was introduced.

In the GSDML file, all data necessary for operating the device is described in modules: Input and output data, definition of the control and status bits.

The GSDML file can support an arbitrary number of languages in one file. Every GSDML file contains a version of the IPS 448i device model. This is also reflected in the file name.

The GSDML file is a certified and integral part of the device and must not be changed. The file is not changed by the system either. If parameters are changed in the project tool, for example, these changes are stored by the control in the project, not in the GSDML file.

NOTICE	
	<p>GSDML file name structure</p> <p>The file name of the GSDML file is constructed according to the following rule:</p> <p>GSDML-[GSDML-schema version]-Leuze-IPS448i-[Date].xml</p> <p>[GSDML schema version] = Version identifier of the GSDML schema version used, e.g., V2.34</p> <p>[Date] = Release date of the GSDML file in the format <code>yyyymmdd</code></p> <p>This date also stands for the release date of the file.</p> <p>Example: GSDML-V2.34-LEUZE-IPS448i-20190628.xml</p>

10.3 Configuring for the Siemens SIMATIC-S7 control

The functionality of the device is defined via input/output data, which is organized in modules (see chapter 10.4 "PROFINET project modules"). The modules are part of the GSDML file (see chapter 10.2 "GSDML file").

By using a user-specific configuration tool, such as SIMATIC Manager or TIA Portal for the Siemens SIMATIC S7 control (S7 PLC), the required modules are integrated in a project during PLC programming. These modules are provided by the GSDML file.

NOTICE	
	<p>Observe SIMATIC Manager version!</p> <p>↪ For the Siemens SIMATIC-S7 control, you need at least SIMATIC Manager version 5.4 + service pack 5 (V5.4+SP5).</p>

The following steps are necessary for commissioning:

- Start positioning sensor
- Preparation of the control
- Installation of the GSDML file
- Hardware configuration of the control (S7 PLC)
- Transmission of the PROFINET-IO configuration to the IO Controller (S7 PLC)
- Device naming
 - Configuration of the device name
 - Device naming
 - Assigning the device names to the configured IO devices
 - Assignment of MAC address – IP address – individual device name
- Checking device names

Start positioning sensor

- ↪ Connect the +18 ... +30 V DC supply voltage (typ. +24 V DC).
 - ⇒ The positioning sensor starts up.

Prepare the control

- ↪ Assign the IO controller (PLC-S7) an IP address.
- ↪ Prepare the control for consistent data transmission.

Install the GSDML file

- ↪ Download the corresponding GSDML file from the Leuze homepage: www.leuze.com.


NOTICE	
	<p>Alternatively, the GSDML file can be loaded from the device with the webConfig tool (see chapter 9 "Starting up the device – Leuze webConfig tool"):</p> <p>HOME > INSTALLATION > GSDML file</p> <p>The GSDML file stored in the device is always compatible with the firmware version of the IPS 448i.</p>

NOTICE	
	<p>Do not change the GSDML file!</p> <p>The GSDML file is a certified and integral part of the device and must not be changed. The file is not changed by the system either.</p> <p>If parameters are changed in the project tool, for example, these changes are stored by the control in the project, not in the GSDML file.</p>

- ↪ Install the GSDML file for the subsequent configuration of the positioning sensor.

Configure the control hardware (S7 PLC)

↳ Assign an IP address a unique device name.

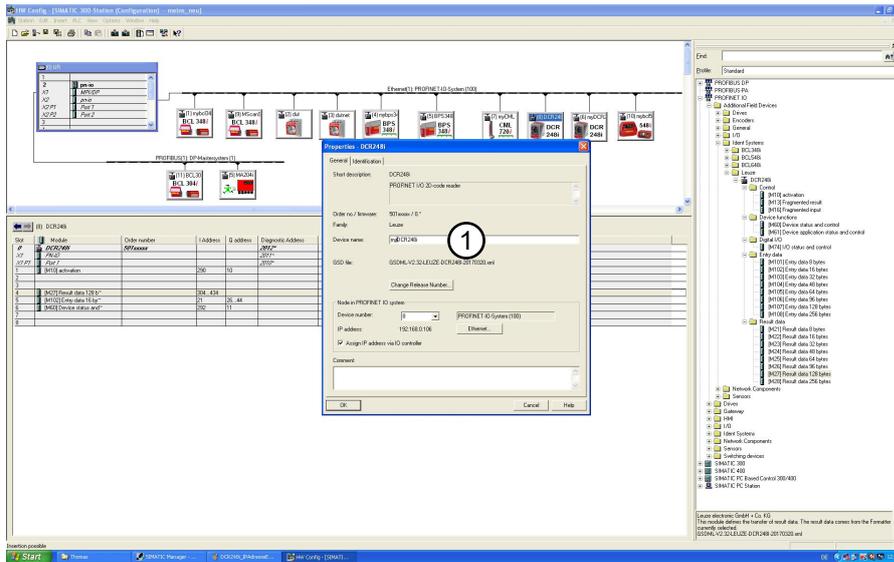

1 Device name

Fig. 10.1: Assignment of the device names to IP addresses

Transfer the PROFINET configuration to the IO Controller (S7 PLC)

↳ Transfer the PROFINET configuration to the IO Controller (S7 PLC).

Following successful transfer, the following activities take place automatically:

- Check of device names
- Assignment of the IP addresses that were configured in the HW Config to the IO devices
- Establishment of a connection between the IO Controller and configured IO devices
- Cyclical data exchange

NOTICE

 Participants that have not been "named" cannot be contacted yet at this point in time!


Name the device

PROFINET defines the "naming of the device" as the creation of a name-based relationship for a PROFINET device.

↳ Set the device name.


- The PROFINET device has a unique MAC address that is part of the factory settings. The MAC address may be found on the name plate of the device. Multiple devices can be distinguished by the MAC addresses displayed.
- This information is used to assign a unique, plant-specific device name ("NameOfStation") to the device via the "Discovery and Configuration Protocol (DCP)".
- Every time the system is started up, PROFINET uses the DCP protocol for the IP address assignment, provided the IO-device is located in the same subnet.

- ✎ Assign the device names to the configured IO devices.
 - Select the positioning sensor on the basis of the MAC address.
 - The positioning sensor is then assigned the unique device name. The device name must match the device name configured in the HW Config.

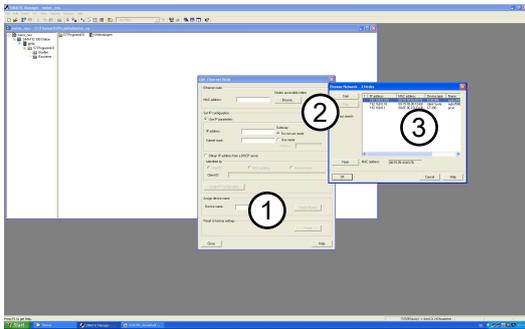

- 1 Device name
- 2 [Search] button
- 3 MAC address selection dialog

Fig. 10.2: Assigning the device names to the configured IO devices

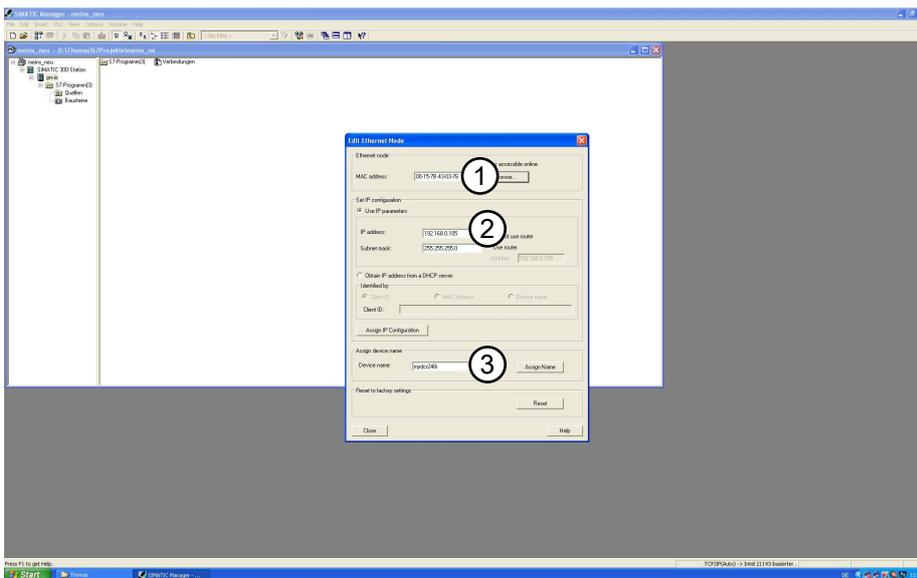

- 1 Ethernet participant
- 2 Set IP configuration
- 3 Device name

Fig. 10.3: MAC address – IP address – individual device name

- From now on, and when programming, only the unique device name (max. 240 characters) is used.

Check device name

↪ After completing the configuration phase, check the device names that have been assigned.

NOTICE	
	<p>Assign unique device names!</p> <p>↪ Ensure that the device names are unique and that all participants are located in the same subnet.</p> <p>↪ Only the following characters are allowed for device names: lowercase letters [a ... z] numbers [0 ... 9]</p>

10.4 PROFINET project modules**10.4.1 Overview of the modules**

Module	Description	Parameter	Input data	Output data
M10 see chapter 10.4.2 "Activation"	Activation Control bits for the activation and transfer of the input data.	1	1	1
M13 see chapter 10.4.3 "Module 13 – Fragmented result"	Fragmented result Transmission of the results in the fragmented mode	1	3	0
M16 see chapter 10.4.4 "Module 16 – Fragmented entry"	Fragmented entry Transmission of the entry data in the fragmented mode	1	0	3
M21 see chapter 10.4.5 "Result data 1"	Result data 1 Entry information 8 bytes max.	0	11	0
M22 see chapter 10.4.6 "Result data 2"	Result data 2 Entry information 16 bytes max.	0	19	0
M23 see chapter 10.4.7 "Result data 3"	Result data 3 Entry information 32 bytes max.	0	35	0
M24 see chapter 10.4.8 "Result data 4"	Result data 4 Entry information 48 bytes max.	0	51	0
M25 see chapter 10.4.9 "Result data 5"	Result data 5 Entry information 64 bytes max.	0	67	0
M26 see chapter 10.4.10 "Result data 6"	Result data 6 Entry information 96 bytes max.	0	99	0
M27 see chapter 10.4.11 "Result data 7"	Result data 7 Entry information 128 bytes max.	0	131	0

Module	Description	Parameter	Input data	Output data
M28 see chapter 10.4.12 "Result data 8"	Result data 8 Entry information 256 bytes max.	0	259	0
M101 – see chapter 10.4.13 "Module 101 – Entry data 1"	Entry data 1 Entry information 8 bytes max.	0	1	11
M102 see chapter 10.4.14 "Module 102 – Entry data 2"	Entry data 2 Entry information 16 bytes max.	0	1	19
M103 see chapter 10.4.15 "Module 103 – Entry data 3"	Entry data 3 Entry information 32 bytes max.	0	1	35
M104 see chapter 10.4.16 "Module 104 – Entry data 4"	Entry data 4 Entry information 48 bytes max.	0	1	51
M105 see chapter 10.4.17 "Module 105 – Entry data 5"	Entry data 5 Entry information 64 bytes max.	0	1	67
M106 see chapter 10.4.18 "Module 106 – Entry data 6"	Entry data 6 Entry information 96 bytes max.	0	1	99
M107 see chapter 10.4.19 "Module 107 – Entry data 7"	Entry data 7 Entry information 128 bytes max.	0	1	131
M108 see chapter 10.4.20 "Module 108 – Entry data 8"	Entry data 8 Entry information 256 bytes max.	0	1	259
M 30 see chapter 10.4.21 "Module 30 - Position deviation"	Position deviation Binary-coded output of the position deviations in the X and Y direction	0	8	0
M60 see chapter 10.4.22 "Device status and control"	Device status and control Display of the device status as well as control bits for reset and standby	0	1	1
M61 see chapter 10.4.23 "Module 61 - Device application status and control"	Device application status and control Transfer of application-specific control and status information.	0	2	2

Module	Description	Parameter	Input data	Output data
M74 see chapter 10.4.24 "Module 74 – I/O status and control"	I/O status and control Handling of switching input and switching output signals	0	2	1
M 75 see chapter 10.4.25 "Module 75 – I/O status and control"	I/O status and control Handling of switching input and switching output signals	0	2	1

10.4.2 Module 10 – Activation

PROFINET-IO module identifier

- Module ID: 1010
- Submodule ID: 1

Description

The module defines the control signals for activating the device as well as the signals for the control of the result output. A handshake mode must be selected for this function.

In handshake operation, the control must acknowledge the data reception via the ACK bit before the new data is written into the input area. After acknowledging the last result, the input data is reset (filled with zeros).

Tab. 10.1: Input data structure module 10

Input data	Address	Data type	Value range	Default	Unit	Explanation
Number of results	0	UNSIGNED8	0-255	0	---	Number of not yet retrieved, complete results. During a possible fragment transmission, this value remains constant until the first fragment of the next result.
Input data length: 1 byte						

Tab. 10.2: Output data structure module 10

Output data	Address	Data type	Value range	Default	Unit	Explanation
Activation signal	0.0	Bit	1 -> 0: Deactivation 0 -> 1: Activation	0	---	Signal for activating the device.
	0.1	Bit	0 ... 1	0	---	Free
	0.2	Bit	0 ... 1	0	---	Free
	0.3	Bit		0	---	Free
Data acknowledgment	0.4	Bit	0 -> 1: Data has been processed by the master 1 -> 0: Data has been processed by the master	0	---	This control bit signals that the transmitted data have been processed by the master.
Data reset	0.5	Bit	0 -> 1: Data reset	0	---	Deletes any stored results. For details, see note.
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Output data length: 1 byte consistently						

NOTICE**Data reset behavior**

If the data reset control bit is activated, the following actions are carried out:

- ↪ Deletion of results that may still be stored.
- ↪ Reset of module 13, i.e., even a partially transmitted result is deleted (see chapter 10.4.3 "Module 13 – Fragmented result").
- ↪ Deletion of the input data areas of all modules.
Exception: The input data of modules 60/61 is not deleted (see chapter 10.4.22 "Module 60 - Device status and control", see chapter 10.4.23 "Module 61 - Device application status and control").
With the status byte of result modules 21 ... 27 and entry data modules 101 ... 107, the two toggle bits are not changed.

10.4.3 Module 13 – Fragmented result

PROFINET-IO module identifier

- Module ID: 1013
- Submodule ID: 1

Description

The module defines the output of fragmented results (direction: from device to control). To occupy few i/o-data, the results may be split into several fragments with this module. The fragments can then be transmitted one after another with a handshake.

These settings act on result modules 21 ... 28. The presence of this module switches on fragmentation of the result data.

Tab. 10.3: Parameter overview module 13

Parameter	Address	Data type	Value range	Default	Unit	Explanation
Fragment length	0	UNSIGNED8	1-255	1	---	The parameter defines the maximum length of the result information per fragment.
Parameter length: 1 byte						

Tab. 10.4: Input data structure module 13

Input data	Address	Data type	Value range	Default	Unit	Explanation
Fragment number	0	Byte	0-255	0	---	Current fragment number
Remaining fragments	1	Byte	0-255	0	---	Number of fragments which still have to be read for a complete result.
Fragment size	2	UNSIGNED8	0-255	0	---	Fragment length, always corresponds to the configured fragment length, except for the last fragment.
Input data length: 3 bytes, consistently						

10.4.4 Module 16 – Fragmented entry

PROFINET-IO module identifier

- Module ID: 1016
- Submodule ID: 1

Description

The module defines the transfer of fragmented entry data (direction: from control to device). To occupy few I/O data, the entry data may be split into several fragments with this module. The fragments can then be transmitted one after another with a handshake.

These settings act on entry modules 101 ... 108. The presence of this module switches on fragmentation of the entry data.

Tab. 10.5: Parameter overview module 16

Parameter	Address	Data type	Value range	Default	Unit	Explanation
Fragment length	0	UNSIGNED8	1-255	1	---	The parameter defines the maximum length of the entry information per fragment.
Parameter length: 1 byte						

Tab. 10.6: Output data structure module 16

Output data	Address	Data type	Value range	Default	Unit	Explanation
Fragment number	0	Byte	0-255	0	---	Current fragment number
Remaining fragments	1	Byte	0-255	0	---	Number of fragments which still have to be transmitted for a complete entry.
Fragment size	2	UNSIGNED8	0-255	0	---	Fragment length, should always be identical, except for the last fragment to be transferred.
Output data length: 3 bytes, consistently						

10.4.5 Module 21 – Result data 1

PROFINET-IO module identifier

- Module ID: 1021
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.7: Input data structure module 21

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffers are occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..10	8x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 8 bytes.
Input data length: 3 bytes consistently + 8 bytes of result information						

10.4.6 Module 22 – Result data 2

PROFINET-IO module identifier

- Module ID: 1022
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.8: Input data structure module 22

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..18	16x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 16 bytes.
Input data length: 3 bytes consistently + 16 bytes of result information						

10.4.7 Module 23 – Result data 3

PROFINET-IO module identifier

- Module ID: 1023
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.9: Input data structure module 23

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..34	32x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 32 bytes.
Input data length: 3 bytes consistently + 32 bytes of result information						

10.4.8 Module 24 – Result data 4

PROFINET-IO module identifier

- Module ID: 1024
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.10: Input data structure module 24

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..50	48x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 48 bytes.
Input data length: 3 bytes consistently + 48 bytes of result information						

10.4.9 Module 25 – Result data 5

PROFINET-IO module identifier

- Module ID: 1025
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.11: Input data structure module 25

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..66	64x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 64 bytes.
Input data length: 3 bytes consistently + 64 bytes of result information						

10.4.10 Module 26 – Result data 6

PROFINET-IO module identifier

- Module ID: 1026
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.12: Input data structure module 26

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..98	96x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 96 bytes.
Input data length: 3 bytes consistently + 96 bytes of result information						

10.4.11 Module 27 – Result data 7

PROFINET-IO module identifier

- Module ID: 1027
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.13: Input data structure module 27

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..130	128x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 128 bytes.
Input data length: 3 bytes consistently + 128 bytes of result information						

10.4.12 Module 28 – Result data 8

PROFINET-IO module identifier

- Module ID: 1028
- Submodule ID: 1

NOTICE	
	<p>↪ Modules 21 ... 28 can only be used one at a time, not simultaneously.</p> <p>↪ If the result information does not fit in the selected module width, the information is shortened. The transmitted result data length is an indication of shortening of the result information.</p>

Description

The module defines the transfer of the result data. The result data comes from the Formatter currently selected. The Formatter can be selected and configured in the webConfig tool (webConfig tool).

Tab. 10.14: Input data structure module 28

Input data	Address	Data type	Value range	Default	Unit	Explanation
Activation status	0.0	Bit	0: Deactivated 1: Activated	0	---	Displays the current activation status.
Reserved	0.1	Bit		0	---	Free
User data result or Cmd interpreter response	0.2	Bit	0: User data 1: Cmd interpreter response	0	---	Distinction between result from the Formatter and answer from the Cmd interpreter. Makes the distinction easy for the user.
Further results in the buffer	0.3	Bit	0: No 1: Yes	0	---	Signal indicates whether further results are in the buffer.
Buffer overflow	0.4	Bit	0: No 1: Yes	0	---	Signal indicates that result buffer is occupied and the device rejects data.
New result	0.5	Bit	0->1: New result 1->0: New result	0	---	The toggle bit indicates whether a new result is present.
Reserved	0.6	Bit		0	---	Free
Waiting for acknowledgment	0.7	Bit	0: Base state 1: Control waiting for acknowledgement from the master	0	---	This signal represents the internal state of the control.
Result data length	1	UNSIGNED 16	0-65535	0	---	Data length of the actual result information.
Data	3..258	256x UNSIGNED8	0-FFh	0	---	Result information with a length of consistently 256 bytes.
Input data length: 3 bytes consistently + 256 bytes of result information						

10.4.13 Module 101 – Entry data 1

PROFINET-IO module identifier

- Module ID: 1101
- Submodule ID: 1

NOTICE	
	<p>↪ Data reset does not affect the output data toggle bits</p> <p>↪ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").</p>

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.15: Input data structure module 101

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.16: Output data structure module 101

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..10	8x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 8 bytes.
Output data length: 3 bytes consistently + 8 bytes of result information						

10.4.14 Module 102 – Entry data 2

PROFINET-IO module identifier

- Module ID: 1102
- Submodule ID: 1

NOTICE	
	<ul style="list-style-type: none"> ↳ Data reset does not affect the output data toggle bits ↳ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.17: Input data structure module 102

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.18: Output data structure module 102

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..18	16x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 16 bytes.
Output data length: 3 bytes consistently + 16 bytes of result information						

10.4.15 Module 103 – Entry data 3

PROFINET-IO module identifier

- Module ID: 1103
- Submodule ID: 1

NOTICE	
	<p>↪ Data reset does not affect the output data toggle bits</p> <p>↪ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").</p>

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.19: Input data structure module 103

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.20: Output data structure module 103

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..34	32x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 32 bytes.
Output data length: 3 bytes consistently + 32 bytes of result information						

10.4.16 Module 104 – Entry data 4

PROFINET-IO module identifier

- Module ID: 1104
- Submodule ID: 1

NOTICE



- ↳ Data reset does **not** affect the output data toggle bits
- ↳ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.21: Input data structure module 104

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.22: Output data structure module 104

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..50	48x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 48 bytes.
Output data length: 3 bytes consistently + 48 bytes of result information						

10.4.17 Module 105 – Entry data 5

PROFINET-IO module identifier

- Module ID: 1105
- Submodule ID: 1

NOTICE	
	<p>↪ Data reset does not affect the output data toggle bits</p> <p>↪ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").</p>

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.23: Input data structure module 105

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.24: Output data structure module 105

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..66	64x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 64 bytes.
Output data length: 3 bytes consistently + 64 bytes of result information						

10.4.18 Module 106 – Entry data 6

PROFINET-IO module identifier

- Module ID: 1106
- Submodule ID: 1

NOTICE	
	<ul style="list-style-type: none"> ↪ Data reset does not affect the output data toggle bits ↪ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.25: Input data structure module 106

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.26: Output data structure module 106

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..98	96x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 96 bytes.
Output data length: 3 bytes consistently + 96 bytes of result information						

10.4.19 Module 107 – Entry data 7

PROFINET-IO module identifier

- Module ID: 1107
- Submodule ID: 1

NOTICE	
	<p>↪ Data reset does not affect the output data toggle bits</p> <p>↪ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").</p>

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.27: Input data structure module 107

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.28: Output data structure module 107

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..130	128x UNSIGNED8	0-FFh	0	---	Information with a length of consistently 128 bytes.
Output data length: 3 bytes consistently + 128 bytes of result information						

10.4.20 Module 108 – Entry data 8

PROFINET-IO module identifier

- Module ID: 1108
- Submodule ID: 1

NOTICE	
	<ul style="list-style-type: none"> ↪ Data reset does not affect the output data toggle bits ↪ If fragmentation is used, the application must set the output data of the entry data fragmentation module for each fragment that is to be transmitted before the toggle bit is toggled in the entry data module (see chapter 10.4.4 "Module 16 – Fragmented entry").

Description

The module defines the transfer of entry data to a command interpreter (Cmd interpreter) in the device.

Tab. 10.29: Input data structure module 108

Input data	Address	Data type	Value range	Default	Unit	Explanation
Data acceptance toggle bit	0.0	Bit	0->1: Data have been accepted 1->0: Data have been accepted	0	---	The signal shows that the device has accepted the data or the data fragment.
Data rejection toggle bit	0.1	Bit	0->1: Data have NOT been accepted 1->0: Data have NOT been accepted	0	---	The device has rejected the acceptance of the data or the data fragment.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.2	Bit		0	---	Free
	0.3	Bit		0	---	Free
Error code	0.4-0.7	Bit	0: No error 1: Receive buffer overflow 2: Sequence error 3: Invalid length entry 4: Invalid fragment length entry 5: Length change in a sequence	0	---	Cause of error for rejection of the fragment.
Input data length: 1 byte						

Tab. 10.30: Output data structure module 108

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0			0		Free
	0.1			0		Free
	0.2			0		Free
	0.3			0	---	Free
	0.4			0	---	Free
New entry	0.5	Bit	0 -> 1: New entry 1 -> 0: New entry	0	---	The toggle bit shows whether new entry data is present
Reserved	0.6	Bit		0	---	Free
	0.7	Bit		0	---	Free
Entry data length	1	UNSIGNED16	0-65535	0	---	Data length of the actual information.
Data	3..258	256x UNSIGNED 8	0-FFh	0	---	Information with a length of consistently 256 bytes.
Output data length: 3 bytes consistently + 256 bytes of result information						

10.4.21 Module 30 - Position deviation

PROFINET-IO module identifier

- Module ID: 1030
- Submodule ID: 1

Description

The module contains the binary-coded output of the position deviations in the X and Y direction.

Note:

- Format: 4 bytes for X-position deviation and 4 bytes for Y-position deviation
- Measurement value as signed integer value
- Byte sequence is big endian

Tab. 10.31: Input data structure module 30

Input data	Address	Data type	Value range	Default	Unit	Explanation
Position deviation in X direction	0 ... 3	SIGNED 32 Bit	-999999 ... +999999	0	mm/100	Position deviation in X direction relative to nominal position.
Position deviation in Y direction	4 ... 7	SIGNED 32 Bit	-999999 ... +999999	0	mm/100	Position deviation in Y direction relative to nominal position.
Input data length: 8 byte						

Tab. 10.32: Output data structure module 30

Output data	Address	Data type	Value range	Default	Unit	Explanation
None						
Output data length: 0 byte						

10.4.22 Module 60 - Device status and control

PROFINET-IO module identifier

- Module ID: 1060
- Submodule ID: 1

Description

The module contains the display of the device status as well as control bits for triggering a reset or putting the device into standby mode.

Tab. 10.33: Input data structure module 60

Input data	Address	Data type	Value range	Default	Unit	Explanation
Device status	0	UNSIGNED 8	10: Standby 11: Service 15: Device is ready 0x80: Error 0x81: Warning	0	---	This byte represents the device status.
Input data length: 1 byte						

Tab. 10.34: Output data structure module 60

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0	Bit		0	---	Free
Error acknowledge	0.1	Bit	0->1: Error Acknowledge 1->0: Error Acknowledge	0	---	This control bit confirms and deletes errors or warnings that may be present in the system. It acts like a toggle bit.
Reserved	0.2 ... 0.5	Bit		0	---	Free
System reset	0.6	Bit	0: Run 0->1: Reset	0	---	The control bit triggers a system reset if the level changes from 0 to 1.
Standby	0.7	Bit	0: Standby off 1: Standby on	0	---	Activates the standby function
Output data length: 1 byte						

10.4.23 Module 61 - Device application status and control

PROFINET-IO module identifier

- Module ID: 1061
- Submodule ID: 1

Description

From the viewpoint of the communication, the module contains generic status and control information which can be interpreted for each device in the GSDML file and in the device application.

Tab. 10.35: Input data structure module 61

Input data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0	Byte	---	0	---	Reserved
Pos. marker	1.0	Bit	0: Measurement not successful 1: Measurement successful	0	---	The signal indicates that the device successfully detected a marker.
Multiple markers	1.1	Bit	0: One or no marker detected 1: Multiple markers detected	0	---	The signal indicates that the device detected multiple markers.
Quality threshold	1.2	Bit	0: Marker is at or above the quality threshold 1: Marker has fallen below the quality threshold	0	---	The signal indicates that the detected marker is below the threshold value.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	1.3 ... 1.7	Bits	---	0	---	Free
Input data length: 2 bytes						

Tab. 10.36: Output data structure module 61

Output data	Address	Data type	Value range	Default	Unit	Explanation
Program selection	0.0 ... 0.7	Bits	0: Check program 1 1: Check program 2 2: Check program 3 3: Check program 4 4: Check program 5 5: Check program 6 6: Check program 7 7: Check program 8	0	---	Selection of various check programs
Auto Setup	1.0	Bit	0->1: Start auto setup 1->0: Stop auto setup	0	---	Starts and stops the <i>Auto setup</i> function.
Adjustment	1.1	Bit	0->1: Start adjustment 1->0: Stop adjustment	0	---	Starts the <i>Adjustment</i> function.
Change program selection	1.2	Bit	0->1: Trigger program changeover			Trigger for the program changeover
Reserved	1.3 ... 1.7	Bits	---	0	---	Free
Output data length: 2 bytes						

10.4.24 Module 74 – I/O status and control

PROFINET-IO module identifier

- Module ID: 1074
- Submodule ID: 1

Description

The module defines the handling of switching input and switching output signals.

Tab. 10.37: Input data structure module 74

Input data	Address	Data type	Value range	Default	Unit	Explanation
State 1	0.0	Bit	0.1	0	---	Signal state of the switching input 1.
State 2	0.1	Bit	0.1	0	---	Signal state of the switching output 2.
State 3	0.2	Bit	0.1	0	---	Signal state of the switching input 3.
State 4	0.3	Bit	0.1	0	---	Signal state of the switching input 4.
Reserved	1.0	Bit		0	---	Free
Reserved	1.1	Bit		0	---	Free
Comparison state switching output 2 (Event Counter)	1.2	Bit	0: Not exceeded 1: Exceeded	0	---	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.
Switching output 2 Comparison state toggle bit (Event Counter)	1.3	Bit	0->1: Event counter exceeded 1->0: Event counter exceeded again	0	---	If SWOUT switches several times was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the initial value by resetting the event counter.
Reserved	1.4	Bit		0	---	Free
Reserved	1.5	Bit		0	---	Free
Reserved	1.6	Bit		0	---	Free
Reserved	1.7	Bit		0	---	Free
Input data length: 2 bytes						

Tab. 10.38: Output data structure module 74

Output data	Address	Data type	Value range	Default	Unit	Explanation
Reserved	0.0	Bit		0	---	Free
Switching output 2	0.1	Bit	0: Switching output 0 1: Switching output 1	0	---	Sets the state of switching output 2
Reserved	0.2	Bit		0	---	Free
Reserved	0.3	Bit		0	---	Free
Reserved	0.4	Bit		0	---	Free
Reset Event Counter Switching output 2	0.5	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	---	Sets the event counter of the activation function [AF] for switching output 2 back to zero.
Reserved	0.6	Bit		0	---	Free
Reserved	0.7	Bit		0	---	Free
Output data length: 1 byte						

10.4.25 Module 75 – I/O status and control

PROFINET-IO module identifier

- Module ID: 1075
- Submodule ID: 1

Description

The module defines the handling of switching output signals.

Tab. 10.39: Input data structure module 75

Input data	Address	Data type	Value range	Default	Unit	Explanation
State 5	0.0	Bit	0.1	0	---	Signal state of the switching output 5.
State 6	0.1	Bit	0.1	0	---	Signal state of the switching output 6.
State 7	0.2	Bit	0.1	0	---	Signal state of the switching output 7.
State 8	0.3	Bit	0.1	0	---	Signal state of the switching output 8.
Comparison state switching output 5 (Event Counter)	1.0	Bit	0: Not exceeded 1: Exceeded	0	---	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the initial value by resetting the event counter.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Switching output 5 Comparison state toggle bit (Event Counter)	1.1	Bit	0->1: Event counter exceeded 1->0: Event counter exceeded again	0	---	If SWOUT switches several times was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the initial value by resetting the event counter.
Comparison state switching output 6 (Event Counter)	1.2	Bit	0: Not exceeded 1: Exceeded	0	---	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the init. value by resetting the event counter.
Switching output 6 Comparison state toggle bit (Event Counter)	1.3	Bit	0->1: Event counter exceeded 1->0: Event counter exceeded again	0	---	If SWOUT switches several times was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the initial value by resetting the event counter.
Comparison state switching output 7 (Event Counter)	1.4	Bit	0: Not exceeded 1: Exceeded	0	---	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the initial value by resetting the event counter.
Switching output 7 Comparison state toggle bit (Event Counter)	1.5	Bit	0->1: Event counter exceeded 1->0: Event counter exceeded again	0	---	If SWOUT switches several times was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the initial value by resetting the event counter.
Comparison state switching output 8 (Event Counter)	1.6	Bit	0: Not exceeded 1: Exceeded	0	---	Indicates whether the event counter has exceeded the set comparative value. The bit is reset to the initial value by resetting the event counter.

Input data	Address	Data type	Value range	Default	Unit	Explanation
Switching output 8 Comparison state toggle bit (Event Counter)	1.7	Bit	0->1: Event counter exceeded 1->0: Event counter exceeded again	0	---	If SWOUT switches several times was configured as comparison mode, this bit is toggled each time the event counter is exceeded. The bit is reset to the initial value by resetting the event counter.
Input data length: 2 bytes						

Tab. 10.40: Output data structure module 75

Output data	Address	Data type	Value range	Default	Unit	Explanation
Switching output 5	0.0	Bit	0: Switching output 0 1: Switching output 1	0	---	Sets the state of switching output 5
Switching output 6	0.1	Bit	0: Switching output 0 1: Switching output 1	0	---	Sets the state of switching output 6
Switching output 7	0.2	Bit	0: Switching output 0 1: Switching output 1	0	---	Sets the state of switching output 7
Switching output 8	0.3	Bit	0: Switching output 0 1: Switching output 1	0	---	Sets the state of switching output 8
Reset Event Counter Switching output 5	0.4	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	---	Sets the event counter of the activation function [AF] for switching output 5 back to zero.
Reset Event Counter Switching output 6	0.5	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	---	Sets the event counter of the activation function [AF] for switching output 6 back to zero.
Reset Event Counter Switching output 7	0.6	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	---	Sets the event counter of the activation function [AF] for switching output 7 back to zero.
Reset Event Counter Switching output 8	0.7	Bit	0 -> 1: Perform reset 1 -> 0: No function	0	---	Sets the event counter of the activation function [AF] for switching output 8 back to zero.
Output data length: 1 byte						

10.5 PROFINET diagnosis alarms

The positioning sensor can make alarms available for diagnostic purposes.

- If the positioning sensor detects an error, it passes this on to the I/O controller as an alarm.
- The signaling of an alarm takes place as acyclic communication.
- Alarm-specific texts can be read out and/or displayed on the I/O controller.

Tab. 10.41: PROFINET diagnosis alarms

Error type	Extended error type	Severity	Alarm text	Measure
5	1	Maintenance required	Temperature too high	Check whether the positioning sensor is operated according to the permissible environmental conditions. The device is still in operation.
5	1	Fatal	Temperature too high	Check whether the positioning sensor is operated according to the permissible environmental conditions. The device is no longer in operation.
256	-	Maintenance required	Temperature too low	Check whether the positioning sensor is operated according to the permissible environmental conditions. The device is still in operation.
256	-	Fatal	Temperature too low	Check whether the positioning sensor is operated according to the permissible environmental conditions. The device is no longer in operation.

11 Interfaces – Communication

Commands can be used to send commands directly to the positioning sensor for control and configuration. The following transmission options are available for the commands:

- Online commands via the Ethernet interface (see chapter 11.1 "Online commands")
- XML-based communication via the Ethernet interface (see chapter 11.2 "XML-based communication")

11.1 Online commands

11.1.1 Overview of commands and parameters

Online commands can be used to send commands directly to the sensor for control and configuration. For this, the sensor must be connected to a computer (host) via the Ethernet interface (see chapter 8.4.4 "Ethernet host communication").

Online commands offer the following options for controlling and configuring the sensor:

- Control/activate sensor
- Read/write/copy parameters
- Carry out an automatic configuration
- Call up error messages
- Query statistical device information
- Perform a software RESET and re-initialize the sensor

Syntax

Online commands consist of one or two ASCII characters followed by command parameters.

No separation characters may be entered between the command and the command parameter(s). Both small and capitalized letters can be used.

Example:

Command 'CA':	Auto setup function
Parameter '+':	Activation
Transmitted is:	'CA+'

Notation

Commands, parameters and returned data are enclosed between single quotation marks ' ' in the text of this manual.

Most online commands are acknowledged by the device and any requested data returned. For commands that are not acknowledged, command execution can be observed or monitored directly on the device.

11.1.2 General online commands

Software version number

Command	'V'
Description	Requests device version information
Parameter	None
Acknowledgment	Example: 'IPS 448i FIX-F2-102-I3-G V2.3.2 2019-06-28' The first line contains the device type of the sensor, followed by the device version number and version date. The data which is actually displayed may vary from the values given here.

NOTICE



You can use this command to check whether the communication between PC and sensor is functional.

↳ If you do not receive an acknowledgment, please check the interface connections or the protocol.

Software reset

Command	'H'
Description	Carries out a software reset. The device is restarted and reinitialized, leaving it in the same state as when the operating voltage is switched on.
Parameter	None
Acknowledgment	'S' (start signal)

Auto setup

Command	'CA'		
Description	Activates the <i>Auto setup</i> function: <ul style="list-style-type: none"> • Determine optimum illumination settings. • Determine marker. • Teach position, if possible. This function must again be deactivated!		
Parameter	'+'	Activates <i>Auto setup</i>	
	'-'	Deactivates <i>Auto setup</i>	
Acknowledgment	'CS=x'		
	x	Status	
		'00'	Valid ' CA ' command
		'01'	Invalid command
		'02'	'Auto setup' could not be activated
Answer	'x yyyy zzz'		
	x	Status of the current detection	
		'0'	Detection successful; marker detected
		'1'	Detection not successful; multiple markers detected
		'2'	Detection not successful; no marker detected
	yyyy	Position values for X and Y deviation	
	zzz	Quality score in [%]	

Alignment mode

Command	'JP'		
Description	<p>Activates or deactivates the alignment mode for simple mounting alignment of the device.</p> <p>After activating the function with JP+, the sensor constantly outputs status information on the Ethernet interface.</p> <p>Using online commands, the sensor is set so that it constantly outputs the position values, the status and the quality score. Upon deactivation of this mode, the position is re-taught, provided this is possible.</p> <p>This function must again be deactivated!</p>		
Parameter	'+'	activates the alignment mode	
	'-'	deactivates the alignment mode	
Answer	'x yyyy zzz'		
	x	Status of the current detection	
		'0'	Detection successful; marker detected
		'1'	Detection not successful; multiple markers detected
		'2'	Detection not successful; no marker detected
	yyyy	Position values for X and Y deviation	
	zzz	Quality score in [%]	

Device status

Command	'SST?'		
Description	The command queries the device status. If the command is sent via the host interface (Ethernet), acknowledgment is only given in the <i>Process</i> operating mode. The host interface is blocked in the <i>Service</i> operating mode.		
Parameter	None		
Acknowledgment	'SST=xxxxxxx'		
	x stands for a single bit (value '1' or '0')		
	Bit 7 is at the far left, bit 0 is at the far right		
	0	Ready	
		'1'	The sensor is ready to receive a trigger and start a program.
		'0'	The sensor does not respond to an incoming trigger signal.
	1	Operating mode	
		'1'	<i>Process</i> operating mode
	2	Device error	
		'1'	Device error, no inspection possible
		'0'	No device error, ready
	3 ... 7	No function, value is always '0'	
	Alternatively, the following acknowledgment is output: 'DS=xx'		
x	Error acknowledgment		
	'00'	Syntax error	
	'01'	Other error	

Program query

Command	'GAI?'
Description	The command queries the currently active program.
Acknowledgment	'GAI=<bbb>' The selection ID of the currently active program is sent as the answer, e.g., 'GAI=0'.

Program changeover

Command	'GAI=<xxx>'	
Description	The command activates changeover to the desired program.	
Parameter	'xxx' The program number (selection ID) must be entered as a 3-digit number, e.g., '001'.	
Acknowledgment	'GS=<bb>'	
	bb	The following values are defined
	'00'	Positive answer
	'01'	Syntax Error
	'02'	Wrong parameter
	'03'	Wrong operating mode
	'04'	Other error

11.1.3 Online commands for system control

Activate positioning

Command	'+'
Description	The command activates configured positioning.
Parameter	None
Acknowledgment	None

Deactivate positioning

Command	'-'
Description	The command deactivates configured positioning.
Parameter	None
Acknowledgment	None

11.2 XML-based communication

You can send commands for control and configuration directly to the device via XML-based communication.

- The device must be connected to a computer (host) via the Ethernet interface (see chapter 8.4.4 "Ethernet host communication").
- The device is designed as an XML server and communicates on port 10004.

You can find detailed information on XML-based communication on the Leuze home page:

www.leuze.com

- Enter the type designation or part number of the device as the search term.
- You can find the information on the *Downloads* tab.

12 Care, maintenance and disposal

Usually, the device does not require any maintenance by the operator.

Cleaning

Clean the lens cover of the device with a soft cloth before mounting.

NOTICE



Do not use aggressive cleaning agents!

↪ Do not use aggressive cleaning agents such as thinner or acetone for cleaning the device.

Maintenance

Repairs to the device must only be carried out by the manufacturer.

↪ For repairs, contact your responsible Leuze subsidiary or Leuze customer service (see chapter 14 "Service and support").

Disposing

↪ For disposal observe the applicable national regulations regarding electronic components.

13 Diagnostics and troubleshooting

Error signaling via LED

Tab. 13.1: Meaning of the LED indicators

Error	Possible error cause	Measures
PWR LED		
Off	<ul style="list-style-type: none"> No operating voltage connected to the device Hardware error 	<ul style="list-style-type: none"> Check operating voltage Contact Leuze customer service (see chapter 14 "Service and support")
Red, continuous light	Device error/parameter enable	Contact Leuze customer service (see chapter 14 "Service and support")
Red, flashing	Warning set Temporary operating fault	Query diagnostic data and carry out the resulting measures
NET LED		
Off	No operating voltage connected to the device	<ul style="list-style-type: none"> Check operating voltage Contact Leuze customer service (see chapter 14 "Service and support")
Red, continuous light	Network error No communication established to the IO controller	Check interface
Red, flashing	No communication Parameterization or configuration failed	Check interface

14 Service and support

24-hour on-call service at:

+49 7021 573-0

Service hotline:

+49 7021 573-123

Monday to Friday 8.00 a.m. to 5.00 p.m. (UTC+1)

E-mail:

service.identify@leuze.de

Repair service and returns:

Procedure and Internet form can be found at

www.leuze.com/repair

Return address for repairs:

Service center

Leuze electronic GmbH + Co. KG

In der Braike 1

D-73277 Owen / Germany

What to do should servicing be required?

NOTICE



Please use this chapter as a master copy should servicing be required!

↪ Enter the contact information and fax this form together with your service order to the fax number given below.

Customer data (please complete)

Device type:	
Serial number:	
Firmware:	
Status of LEDs:	
Error description:	
Company:	
Contact person/department:	
Phone (direct dial):	
Fax:	
Street/No:	
ZIP code/City:	
Country:	

Leuze Service fax number:

+49 7021 573 - 199

15 Technical data

15.1 General specifications

Tab. 15.1: Electrical equipment

Operating voltage U_B	18 V ... 30 V DC PELV, Class 2 / SELV
Average power consumption	8 W without load on the switching output During strobed operation, a higher power can briefly be consumed.
Switching input Switching output	<ul style="list-style-type: none"> • SWI1: Digital switching input 1 (default: "Trigger") • SWO2: Digital switching output 2 (default: "Ready") • SWI3: Digital switching input 3 (default: "Program selection 0") • SWI4: Digital switching input 4 (default: "Program selection 1") • SWO5 ... SWO8: digital switching outputs 5 ... 8 (default: Position output) 18 V ... 30 V DC, depending on operating voltage I_{max} : 60 mA per switching output; 100 mA total current Short-circuit proof, protected against polarity reversal
Process interface	Ethernet 10/100 Mbit/s PROFINET-IO

Tab. 15.2: Operating and display elements

Keyboard	2 control buttons
LEDs	1 dual LED (green/red) for power (PWR) 1 dual LED (green/red) for bus state (NET) 1 dual LED (green/yellow) for link state (LINK) Display with 6 LEDs (green) for function selection and program selection 4 feedback LEDs (green) for alignment indication

Tab. 15.3: Mechanical data

Degree of protection	IP65 acc. to EN 60529 With screwed-on M 12 connectors or mounted caps
VDE protection class	III (EN 61140)
Connection technology	M12 connectors
Weight	124 g (housing hood with glass pane)
Dimensions (H x W x D)	65.6 x 43 x 44 mm
Fastening	2 M4 threaded inserts on each of the side walls, 5 mm deep 4 M4 threaded inserts on the rear, 3.5 mm / 5 mm deep
Housing	Housing: polycarbonate Housing base: diecast aluminum
Optics cover	Glass

Tab. 15.4: Environmental data

Ambient temp. (operation/storage)	0 °C ... +45 °C/-20 °C ... +70 °C
Air humidity	max. 90% rel. humidity, non-condensing
Ambient light	Max. 2000 Lux
Electromagnetic compatibility	EN 61000-6-2, EN 61000-6-4
Vibration	IEC 60068-2-6, test Fc
Continuous shock	IEC 60068-2-29, test Eb
Certifications	UL 60950-1 CAN/CSA C22.2 No. 60950-1-07 CSA C22.2 No. 60950-1-07
Conformity	CE, FCC, UL

15.2 Optical data

Tab. 15.5: Optical data

Integrated LED illumination	Infrared (not visible, 850 nm) Exempt group in acc. with IEC 60825-1, EN 62471:2008
Integrated feedback LEDs	Green (525 nm)
Beam exit	Front
Image sensor	Global shutter CMOS Imager
Number of pixels	1280 x 960 pixels
Electronic shutter speeds	68 µs ... 5 ms (flash)

15.3 Reading performance

Tab. 15.6: Reading performance

Working distances	F2 optics: <ul style="list-style-type: none"> • 250 mm ... 1900 mm with a marker diameter of 13 mm / 15 mm F4 optics: <ul style="list-style-type: none"> • 350 mm ... 2400 mm for marker diameter 13 mm / 15 mm Reflector necessary at working distance from 1.9 m
Reading distance	Determining the working distance

15.4 Device with heating


Tab. 15.7: Electrical equipment

Operating voltage U_B	18 V ... 30 V DC PELV, Class 2 / SELV
Average power consumption	12 W without load on the switching output During strobed operation, a higher power can briefly be consumed.
Warmup time	Minimum 30 minutes at +24 V DC and an ambient temperature of -30 °C

Tab. 15.8: Environmental data

Ambient temperature (operation)	-30 °C ... +45 °C
Ambient temperature (storage)	-20 °C ... +70 °C

15.5 Dimensioned drawings

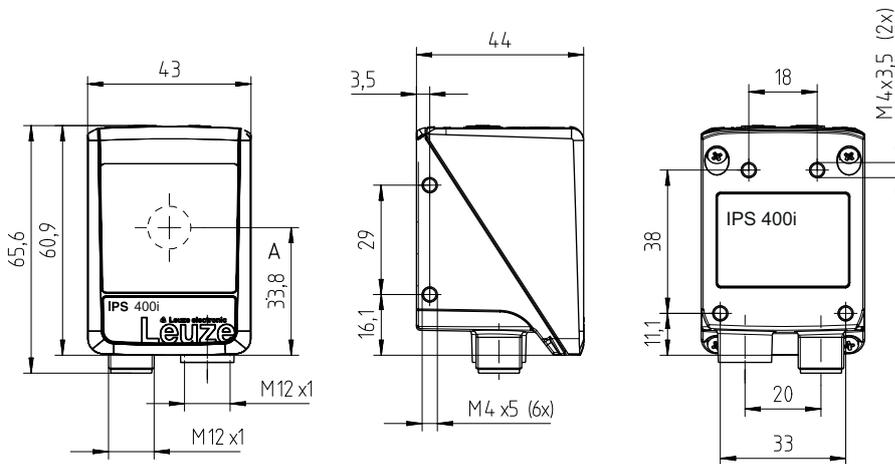


all dimensions in mm

A Optical axis


Fig. 15.1: IPS 400i dimensioned drawing

15.6 Dimensioned drawings - Accessories

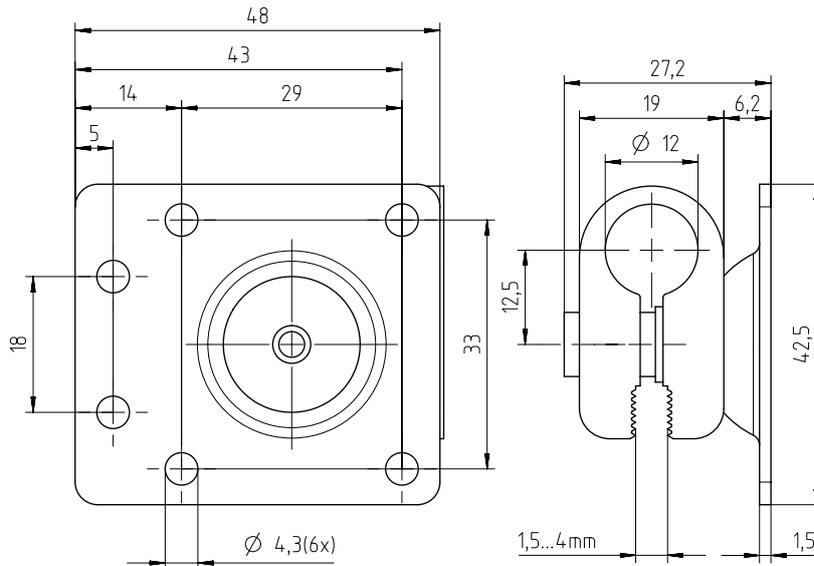

all dimensions in mm

Fig. 15.2: Dimensioned drawing of the BTU 320M-D12 mounting system

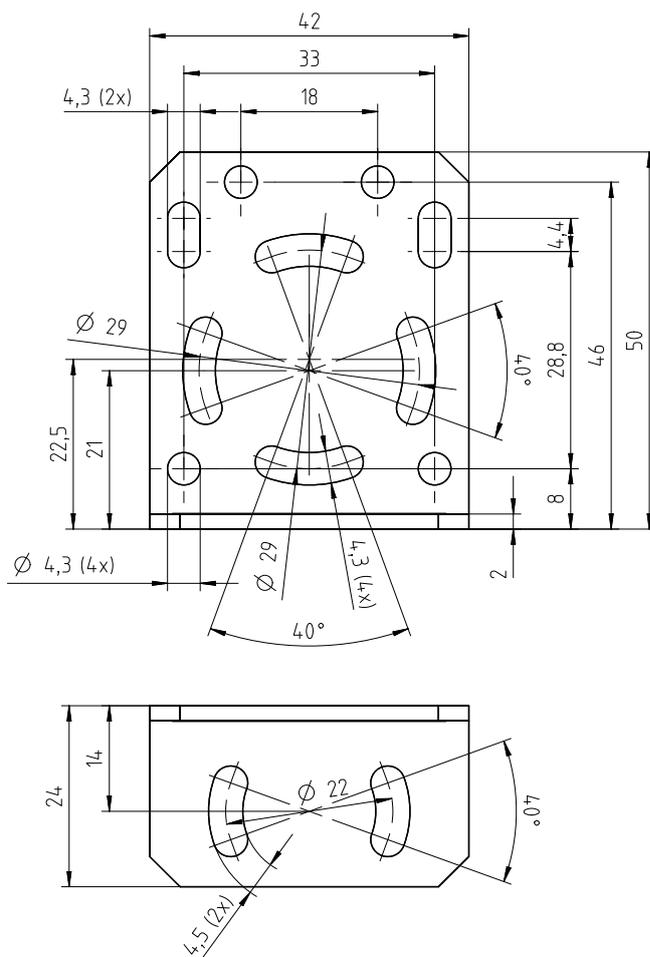

all dimensions in mm

Fig. 15.3: Dimensioned drawing of the BT 320M mounting bracket

16 Order guide and accessories

16.1 Nomenclature

Part designation:

IPS 4xxi FIX-Of-102-Ir-Z-A

Tab. 16.1: Part number code

IPS	Operating principle: Imaging Positioning Sensor (camera-based)
4	Series: IPS 400i
xx	Host interface 48: PROFINET-IO, Ethernet TCP/IP, UDP
i	Integrated fieldbus technology
FIXED	Fixed focal length
O	Focus position: F: Far Density
f	Lens: 2: 12 mm 4: 16 mm
102	Device with connector/socket Beam exit at front
I	Illumination: infrared
r	Resolution range: 3: 1280 x 960 pixels
Z	Type of protective screen: G: Glass
A	Heating variant: -: without heating H: with heating

NOTICE



A list with all available device types can be found on the Leuze website at www.leuze.com.

16.2 Type overview

Tab. 16.2: Type overview

Type designation	Description	Part no.
IPS 448i FIX-F2-102-I3-G	Camera-based positioning sensor, F2 optics	50142218
IPS 448i FIX-F2-102-I3-G-H	Camera-based positioning sensor, F2 optics, heating	50142219
IPS 448i FIX-F4-102-I3-G	Camera-based positioning sensor, F4 optics	50143672
IPS 448i FIX-F4-102-I3-G-H	Camera-based positioning sensor, F4 optics, heating	50143673

16.3 Cables accessories

Tab. 16.3: Accessories – PWR connection cable (open cable end)

Part no.	Part designation	Description
M12 socket (12-pin, A-coded), axial connector, open cable end, shielded, UL		
50130281	KD S-M12-CA-P1-020	PWR connection cable, length 2 m
50130282	KD S-M12-CA-P1-050	PWR connection cable, length 5 m
50130283	KD S-M12-CA-P1-100	PWR connection cable, length 10 m
M12 socket (12-pin, A-coded), angled connector, open cable end, shielded, UL		
50134943	KD S-M12-CW-P1-050	PWR connection cable, length 5 m

Tab. 16.4: Accessories – PWR connection cable (extension, to M12 plug)

Part no.	Part designation	Description
M12 socket (12-pin, A-coded), axial connector		
M12 plug (12-pin, A-coded), shielded, UL		
50143811	KDS S-M12-CA-M12-CA-P1-003	Connection cable, length 0.3 m
50130284	KDS S-M12-CA-M12-CA-P1-020	Connection cable, length 2 m
50130285	KDS S-M12-CA-M12-CA-P1-050	Connection cable, length 5 m
50130286	KDS S-M12-CA-M12-CA-P1-100	Connection cable, length 10 m

Tab. 16.5: Accessories – Ethernet connection cable (to RJ-45)

Part no.	Part designation	Description
M12 plug (4-pin, D-coded), axial connector to RJ-45 connector, shielded, UL		
50135080	KSS ET-M12-4A-RJ45-A-P7-020	Ethernet connection cable (on RJ-45), length 2 m
50135081	KSS ET-M12-4A-RJ45-A-P7-050	Ethernet connection cable (on RJ-45), length 5 m
50135082	KSS ET-M12-4A-RJ45-A-P7-100	Ethernet connection cable (on RJ-45), length 10 m
50135083	KSS ET-M12-4A-RJ45-A-P7-150	Ethernet connection cable (on RJ-45), length 15 m
50135084	KSS ET-M12-4A-RJ45-A-P7-300	Ethernet connection cable (on RJ-45), length 30 m

Tab. 16.6: Accessories – Ethernet connection cable (open cable end)

Part no.	Part designation	Description
M12 plug (4-pin, D-coded), axial connector, open cable end, shielded, UL		
50135073	KS ET-M12-4A-P7-020	Ethernet connection cable, length 2 m
50135074	KS ET-M12-4A-P7-050	Ethernet connection cable, length 5 m
50135075	KS ET-M12-4A-P7-100	Ethernet connection cable, length 10 m
50135076	KS ET-M12-4A-P7-150	Ethernet connection cable, length 15 m
50135077	KS ET-M12-4A-P7-300	Ethernet connection cable, length 30 m
M12 plug (4-pin, D-coded), angled connector, open cable end, shielded, UL		
50134942	KS ET-M12-4W-P7-050	Ethernet connection cable, length 5 m

Tab. 16.7: Accessories – BUS IN/BUS OUT connection cable (to M12)

Part no.	Part designation	Description
M12 plug (4-pin, D-coded), BUS IN/BUS OUT to M12 socket, shielded, UL		
50106899	KB ET-2000-SSA	BUS OUT connection cable, length 2 m
50106900	KB ET-5000-SSA	BUS OUT connection cable, length 5 m
50106901	KB ET-10000-SSA	BUS OUT connection cable, length 10 m
50106902	KB ET-15000-SSA	BUS OUT connection cable, length 15 m
50106905	KB ET-30000-SSA	BUS OUT connection cable, length 30 m

16.4 Other accessories

Tab. 16.8: Accessories – reflectors

Part no.	Part designation	Description
50140183	MTKZ 7-30 SET	Reflector SET for 7 mm bore hole, set contains 100 pieces
50130343	MTKZ 13-30 SET	Reflector SET for 13 mm bore hole, set contains 100 pieces
50129092	MTKZ 15-30 SET	Reflector SET for 15 mm bore hole, set contains 100 pieces
50132911	REF 7-A-15-30 SET	Reflective tape SET for affixing, set contains 500 pieces

Tab. 16.9: Accessories – Mounting aids

Part no.	Part designation	Description
50132150	BTU 320M-D12	Mounting system for 12 mm rod
50132151	BT 320M	Mounting bracket
50144298	BT 330M	Mounting bracket for IPS 400i and external illumination
50144299	BTU 330M-1	Mounting system for IPS 400i and external illumination on rod

Tab. 16.10: Accessories – Ethernet switch

Part no.	Part designation	Description
50135196	MD 708-21-42/D4-12	Ethernet switch with 5 connections
50135197	MD 708-21-82/D4-12	Ethernet switch with 9 connections

Tab. 16.11: Accessories – External illumination

Part no.	Part designation	Description
50144030	IL AL 034/031 IR 110 H	LED surface illumination, infrared LED, heating

17 EC Declaration of Conformity

The positioning sensors of the IPS 400i series have been developed and manufactured in accordance with the applicable European standards and directives.



18 Appendix

18.1 ASCII character set

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
NUL	0	00	0	ZERO	Zero
SOH	1	01	1	START OF HEADING	Start of heading
STX	2	02	2	START OF TEXT	Start of text characters
ETX	3	03	3	END OF TEXT	Last character of text
EOT	4	04	4	END OF TRANSMISS.	End of transmission
ENQ	5	05	5	ENQUIRY	Request for data trans.
ACK	6	06	6	ACKNOWLEDGE	Positive acknowledgment
BEL	7	07	7	BELL	Bell signal
BS	8	08	10	BACKSPACE	Backspace
HT	9	09	11	HORIZ. TABULATOR	Horizontal tabulator
LF	10	0A	12	LINE FEED	Line feed
VT	11	0B	13	VERT. TABULATOR	Vertical tabulator
FF	12	0C	14	FORM FEED	Form feed
CR	13	0D	15	CARRIAGE RETURN	Carriage return
SO	14	0E	16	SHIFT OUT	Shift out
SI	15	0F	17	SHIFT IN	Shift in
DLE	16	10	20	DATA LINK ESCAPE	Data link escape
DC1	17	11	21	DEVICE CONTROL 1	Device control character 1
DC2	18	12	22	DEVICE CONTROL 2	Device control character 2
DC3	19	13	23	DEVICE CONTROL 3	Device control character 3
DC4	20	14	24	DEVICE CONTROL 4	Device control character 4
NAK	21	15	25	NEG. ACKNOWLEDGE	Negative acknowledge
SYN	22	16	26	SYNCHRONOUS IDLE	Synchronization
ETB	23	17	27	EOF TRANSM. BLOCK	End of data transmission block
CAN	24	18	30	CANCEL	Invalid
EM	25	19	31	END OF MEDIUM	End of medium
SUB	26	1A	32	SUBSTITUTE	Substitution
ESC	27	1B	33	ESCAPE	Escape
FS	28	1C	34	FILE SEPARATOR	File separator
GS	29	1D	35	GROUP SEPARATOR	Group separator
RS	30	1E	36	RECORD SEPARATOR	Record separator
US	31	1F	37	UNIT SEPARATOR	Unit separator
SP	32	20	40	SPACE	Space
!	33	21	41	EXCLAMATION POINT	Exclamation point
"	34	22	42	QUOTATION MARK	Quotation mark
#	35	23	43	NUMBER SIGN	Number sign
\$	36	24	44	DOLLAR SIGN	Dollar sign
%	37	25	45	PERCENT SIGN	Percent sign

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
&	38	26	46	AMPERSAND	Ampersand
'	39	27	47	APOSTROPHE	Apostrophe
(40	28	50	OPEN. PARENTHESIS	Open parenthesis
)	41	29	51	CLOS. PARENTHESIS	Closed parenthesis
*	42	2A	52	ASTERISK	Asterisk
+	43	2B	53	PLUS	Plus sign
,	44	2C	54	COMMA	Comma
-	45	2D	55	HYPHEN (MINUS)	Hyphen
.	46	2E	56	PERIOD (DECIMAL)	Period (decimal)
/	47	2F	57	SLANT	Slant
0	48	30	60	0	Number
1	49	31	61	1	Number
2	50	32	62	2	Number
3	51	33	63	3	Number
4	52	34	64	4	Number
5	53	35	65	5	Number
6	54	36	66	6	Number
7	55	37	67	7	Number
8	56	38	70	8	Number
9	57	39	71	9	Number
:	58	3A	72	COLON	Colon
;	59	3B	73	SEMICOLON	Semicolon
<	60	3C	74	LESS THAN	Less than
=	61	3D	75	EQUALS	Equals
>	62	3E	76	GREATER THAN	Greater than
?	63	3F	77	QUESTION MARK	Question mark
@	64	40	100	COMMERCIAL AT	Commercial AT
A	65	41	101	A	Capital letter
B	66	42	102	B	Capital letter
C	67	43	103	C	Capital letter
D	68	44	104	D	Capital letter
E	69	45	105	E	Capital letter
F	70	46	106	F	Capital letter
G	71	47	107	G	Capital letter
H	72	48	110	H	Capital letter
I	73	49	111	I	Capital letter
J	74	4A	112	J	Capital letter
K	75	4B	113	K	Capital letter
L	76	4C	114	L	Capital letter
M	77	4D	115	M	Capital letter

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
N	78	4E	116	N	Capital letter
O	79	4F	117	O	Capital letter
P	80	50	120	P	Capital letter
Q	81	51	121	Q	Capital letter
R	82	52	122	R	Capital letter
S	83	53	123	S	Capital letter
T	84	54	124	T	Capital letter
U	85	55	125	U	Capital letter
V	86	56	126	V	Capital letter
W	87	57	127	W	Capital letter
X	88	58	130	X	Capital letter
Y	89	59	131	Y	Capital letter
Z	90	5A	132	Z	Capital letter
[91	5B	133	OPENING BRACKET	Opening bracket
\	92	5C	134	REVERSE SLANT	Reverse slant
]	93	5D	135	CLOSING BRACKET	Closing bracket
^	94	5E	136	CIRCUMFLEX	Circumflex
_	95	5F	137	UNDERSCORE	Underscore
`	96	60	140	GRAVE ACCENT	Grave accent
a	97	61	141	a	Lower case letter
b	98	62	142	b	Lower case letter
c	99	63	143	c	Lower case letter
d	100	64	144	d	Lower case letter
e	101	65	145	e	Lower case letter
f	102	66	146	f	Lower case letter
g	103	67	147	g	Lower case letter
h	104	68	150	h	Lower case letter
i	105	69	151	i	Lower case letter
j	106	6A	152	j	Lower case letter
k	107	6B	153	k	Lower case letter
l	108	6C	154	l	Lower case letter
m	109	6D	155	m	Lower case letter
n	110	6E	156	n	Lower case letter
o	111	6F	157	o	Lower case letter
p	112	70	160	p	Lower case letter
q	113	71	161	q	Lower case letter
r	114	72	162	r	Lower case letter
s	115	73	163	s	Lower case letter
t	116	74	164	t	Lower case letter
u	117	75	165	u	Lower case letter

ASCII	Dec.	Hex.	Oct.	Designation	Meaning
v	118	76	166	v	Lower case letter
w	119	77	167	w	Lower case letter
x	120	78	170	x	Lower case letter
y	121	79	171	y	Lower case letter
z	122	7A	172	z	Lower case letter
{	123	7B	173	OPENING BRACE	Opening brace
	124	7C	174	VERTICAL LINE	Vertical line
}	125	7D	175	CLOSING BRACE	Closing brace
~	126	7E	176	TILDE	Tilde
DEL	127	7F	177	DELETE (RUBOUT)	Delete

18.2 Configuration via configuration codes

The positioning sensor can also be configured using configuration codes. The device/application parameters in the device are set and permanently saved after reading this code.

Configuration codes are created with the *Code Generator* tool. You can find the *Code Generator* on the Internet at www.leuze.com/code-generator.

Configuration changes via the configuration codes are only possible via button activation on the control panel of the sensor (*AUTO* function).

Proceed as follows to read in a configuration code:

- ↪ Connect the sensor to the operating voltage and activate the *AUTO* function on the control panel.
- ↪ Hold the printed configuration code at the correct distance in front of the optics of the sensor.
- ↪ As soon as a configuration code is read in, the sensor exits the *AUTO* function mode.
- ↪ Upon exiting the function mode, the four feedback LEDs signal whether reading was successful:
single, brief flash: reading successful

NOTICE



Read in configuration codes individually!

The printed configuration codes can only be read in individually.

18.3 License terms

This product contains software components that are licensed by the copyright holders as "free software" or as "open source software" under the GNU General Public License, Version 2. We can provide you with the source code of these software components on a data carrier/download (CD-ROM or DVD) if you submit a request to our customer support within three years of distribution of the product at the following address:

Service center

Leuze electronic GmbH + Co. KG

In der Braike 1

D-73277 Owen / Germany

Source code DCR 200i