

Technical data sheet Safety laser scanner

Part no.: 53800333

RSL450P-S/CU400P-4M12



Contents

- Technical data
- Dimensioned drawings
- Electrical connection
- Operation and display
- Notes
- Accessories











Technical data



Basic data

Series	RSL 400
Application	Mobile danger zone guarding
	Mobile side guarding
	Stationary access guarding
	Stationary danger zone guarding

Functions

Functions	Data output, configurable
	Four-field mode
	PROFIsafe
	Resolution, selectable

Characteristic parameters

Туре	3, IEC/EN 61496
SIL	2, IEC 61508
SILCL	2, IEC/EN 62061
Performance Level (PL)	d, EN ISO 13849-1
PFH _D	9E-08 per hour
Mission time T _M	20 years, EN ISO 13849-1
Category	3, EN ISO 13849

Protective field data

Scanning angle	270 °
Minimum adjustable range	50 mm
Number of field pairs, reversible	Up to 100
Number of quads, reversible	50
Number of protective functions	2 Piece(s)
Number of independent sensor configurations	Up to 10
Diffuse reflection, min.	1.8 %
Operating range	0 3 m

Warning field data

Number of field pairs	Up to 100
Operating range	0 20 m
Object size	150 mm x 150 mm
Diffuse reflection, min.	10 %

Optical data

Light source	Laser, Infrared
Laser light wavelength	905 nm
Laser class	1, IEC/EN 60825-1:2007
Transmitted-signal shape	Pulsed
Repetition frequency	90 kHz

Measurement data

Distance resolution	1 mm
Detection range	0 50 m
Diffuse reflection	20 %
Angular resolution	0.1 °

Electrical data

Protective circuit Overvoltage protection

Per	forn	nance	data
-----	------	-------	------

Supply voltage U _B	24 V, DC, -30 20 %
Current consumption (without load),	900 mA, (use power supply unit with 3 A)
max.	

Power consumption, max. 22 W, For 24 V, plus output load

Interface

Туре	PROFINET
Profinet	
Function	Process
PROFINET device	Device acc. to Spec V2.3.4
GSDML	GSDML acc. to Spec V2.3.2
Profile	PROFINET/PROFIsafe
Conformance class	С
Network load class	III
Security level	1
Switch functionality	IRT-ready 2-port switch acc. to IEEE 802, integrated in connection unit
Port properties	Auto-Crossover
	Auto-Negotiation
	Auto-Polarity
I&M	0 - 4
Supported topologies	MRP client
	SNMP
Safety-related switching signals	4 Piece(s)

Service interface

туре	Bluetooth, USB
Bluetooth	
Function	Configuration/parametering
Frequency band	2,400 2,483.5 MHz
Radiated transmitting power	Max. 4.5 dBm (2.82 mW), class 2
USB	
Function	Configuration/parametering

002	
Function	Configuration/parametering
Connection	USB 2.0 mini-B, socket
Transmission speed, max.	12 Mbit/s
Cable length	≤ 5m Longer cable lengths are possible using

Connection

Νι	umber of connections	4 Piece(s)
	Connection 1	
	Function	Voltage supply
	Type of connection	Connector
	Thread size	M12
	Туре	Male
	Material	Metal
	No. of pins	5 -pin
	Encoding	L-coded

Technical data



Connection 2		
Function	PROFINET/PROFIsafe communication, input	
Type of connection	Connector	
Thread size	M12	
Туре	Female	
Material	Metal	
No. of pins	4 -pin	
Encoding	D-coded	
Connection 3		
Function	PROFINET/PROFIsafe communication, output	
Type of connection	Connector	
Thread size	M12	
Туре	Female	
Material	Metal	
No. of pins	4 -pin	
Encoding	D-coded	
Connection 4		
Function 4	Voltage supply	
Type of connection	Connector	
Thread size	M12	
Type	Female	
Material	Metal	
No. of pins	5 -pin	
Encoding	L-coded	
Mechanical data		
Dimension (W x H x L)	140.2 mm x 170 mm x 142 mm	
Housing material	Metal	

Operation and display

LED indicator Number of LEDs 11 Piece(s) Type of configuration Software Sensor Studio	Type of display	Alphanumerical display
		LED indicator
Type of configuration Software Sensor Studio	Number of LEDs	11 Piece(s)
	Type of configuration	Software Sensor Studio
Operational controls Software Sensor Studio	Operational controls	Software Sensor Studio

Environmental data

Ambient temperature, operation	0 50 °C
Ambient temperature, storage	-20 60 °C
Relative humidity (non-condensing)	15 95 %

Certifications

Degree of protection	IP 65
Protection class	III, EN 61140
Certifications	TÜV Süd
Test procedure for EMC in accordance with standard	DIN 40839-1/3
	EN 61496-1
Test procedure for oscillation in accordance with standard	EN 60068-2-6
Test procedure for continuous shock in accordance with standard	IEC 60068-2-29
JS patents	US 10,304,307B
	US 7,656,917 B
	US 7,696,468 B
	US 8,520,221 B

Classification

Customs tariff number	85365019	
eCl@ss 5.1.4	27272705	
eCl@ss 8.0	27272705	
eCl@ss 9.0	27272705	
eCl@ss 10.0	27272705	
eCl@ss 11.0	27272705	
ETIM 5.0	EC002550	
ETIM 6.0	EC002550	
ETIM 7.0	EC002550	


Dimension (W x H x L)	140.2 mm x 170 mm x 142 mm
Housing material	Metal
	Plastic
Metal housing	Diecast zinc
Lens cover material	Plastic/PC
Net weight	4,300 g
Housing color	Yellow, RAL 1021
ype of fastening	Mounting plate
	Through-hole mounting
	Via optional mounting device

Dimensioned drawings



All dimensions in millimeters


Dimensions safety laser scanner with connection unit

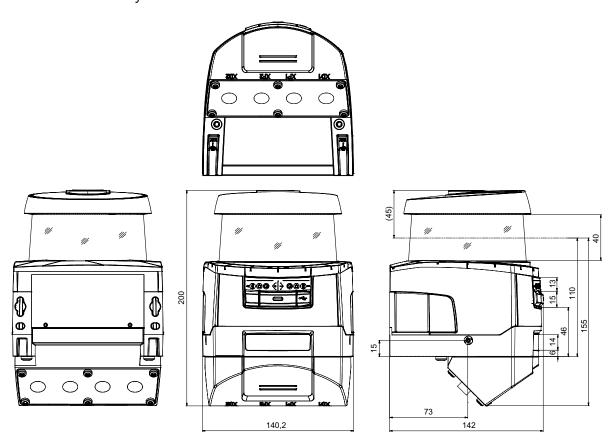

Electrical connection

Connection 1	XD1
Function	Voltage supply
Type of connection	Connector
Thread size	M12
Туре	Male
Material	Metal
No. of pins	5 -pin
Encoding	L-coded

Pin	Pin assignment
1	L1, 24V DC (US1 +)
2	N2, 0V DC (US2 -)
3	N1, 0V DC (US1 -)
4	L2, 24V DC (US2 +)
5	GND

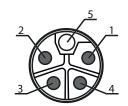


Electrical connection




Connection 2	XF1
Function	PROFINET/PROFIsafe communication, input
Type of connection	Connector
Thread size	M12
Туре	Female
Material	Metal
No. of pins	4 -pin
Encoding	D-coded D-coded
Connector housing	FE/SHIELD

Pin	Pin assignment
1	TD+
2	RD+
3	TD-
4	RD-

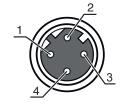


Connection 3	XF2
Function	PROFINET/PROFIsafe communication, output
Type of connection	Connector
Thread size	M12
Туре	Female
Material	Metal
No. of pins	4 -pin
Encoding	D-coded
Connector housing	FE/SHIELD

Pin	Pin assignment
1	TD+
2	RD+
3	TD-
4	RD-

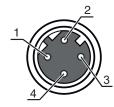

Connection 4	XD2
Function	Voltage supply
Type of connection	Connector
Thread size	M12
Туре	Female
Material	Metal
No. of pins	5 -pin
Encoding	L-coded

Pin	Pin assignment
1	L1, 24V DC (US1 +)
2	N2, 0V DC (US2 -)
3	N1, 0V DC (US1 -)
4	L2, 24V DC (US2 +)
5	GND

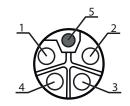





free and linked sensor is enabled if applicable Pree warning field	LED	Display	Meaning
Red., flashing Green, continuous light OSSD on	1 -	Off	Device switched off
Seen, continuous light OSSD on		Red, continuous light	OSSD off
2 Feature 1 Off Mellow, flashing Mellow, flashing Mellow, flashing Mellow, continuous light Mellow, flashing Mellow,		Red, flashing	Error
Vellow, flashing Protective field occupied		Green, continuous light	OSSD on
Personal process Personal pr	2 -	Off	RES deactivated or RES activated and released
Pacific Paci		Yellow, flashing	Protective field occupied
Blue, continuous light Warning field interrupted		Yellow, continuous light	RES activated and blocked but ready to be unlocked - protective field free and linked sensor is enabled if applicable
4 - Off Four field mode: warning field 3 free 5 - Vellow, flashing Four field mode: warning field 3 interrupted 6 - Off No function 7 PWR Off Device switched off Red, continuous light Error during self test or internal communication problems 6 - Off PROFINET wave function active Green, flashing PROFISEde communication not initialized or switched off Green, flashing Device in passive state or PROFINET wave function active Green, flashing Device in passive state or PROFINET wave function active Green, continuous light Device on PROFIsafe active Red, flashing PROFISAGE communication reror 9 NET Off PROFINET communication reror 9 NET Off PROFINET communication not initialized or inactive Green, continuous light PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, flashing Ethernet topology error Red, flashing Bus error, no communication Green, continuous light Bus error, no communication Orange, flashing Bus	3 -	Off	Free warning field
Blue, continuous light Four field mode: warning field 3 interrupted 5		Blue, continuous light	Warning field interrupted
5 - Vallow, flashing Four field mode: warning field 2 interrupted 6 - Vallow Off No function 7 PWRAPA Red, continuous light Off Device switched off 8 PROFINET wave function active Error during self test or internal communication problems 8 PS Off PROFINET wave function active 9 PROFISATE communication not initialized or switched off PROFISATE communication not initialized or switched off 9 PROFISATE communication not initialized or switched off PROFISATE configuration failed 9 PROFISATE configuration failed PROFISATE communication error 9 PROFISATE communication or PROFINET wave function active PROFISATE communication not initialized or inactive 9 PROFISATE communication or PROFINET wave function active PROFINET bus initialization or PROFINET wave function active 9 PROFINET publication or profiguration failed, no data exchange or exchange of invalidation PROFINET active, data exchange with IO controller active 10 PROFINET publication failed, no data exchange or exchange of invalidation PROFINET active, data exchange or exchange or exchange of invalidation 11 PROFINET active, data exchange with IO controller active PROFINET active, data exchange or ex	4 -	Off	Four field mode: warning field 3 free
6 - Off No function 7 PWR		Blue, continuous light	Four field mode: warning field 3 interrupted
7PWR Red, continuous light Green, flashingDevice switched off Error during self test or internal communication problems PROFINET wave function active Green, continuous lightPROFINET wave function active8PS Green, flashingOff Green, flashingPROFIsafe communication not initialized or switched off PROFIsafe communication not initialized or switched off Device in passive state or PROFINET wave function active Device on PROFIsafe active Red, flashing9NET FRAPE AND THE STANDARD AND AND AND AND AND AND AND AND AND AN	5 -	Yellow, flashing	Four field mode: warning field 2 interrupted
Red, continuous light Error during self test or internal communication problems	6 -	Off	No function
Green, flashing PROFINET wave function active Green, continuous light Device switched on, supply voltage applied, no internal error 8 PS Off PROFIsafe communication not initialized or switched off PROFIsafe communication not initialized or switched off Green, flashing Device in passive state or PROFINET wave function active Device on PROFIsafe active Red, flashing PROFIsafe configuration failed Red, continuous light PROFIsafe communication error 9 NET Off PROFINET communication or initialized or inactive PROFINET own unication not initialized or inactive PROFINET data exchange with IO controller active PROFINET active, data exchange with IO controller active Orange, flashing Ethernet configuration failed, no data exchange or exchange of involution active PROFINED Section (Section 1) Red, flashing Section (Section 2) Red, flashing Section (Section 3) Red, flashing Section (Sec	7 PWR	Off	Device switched off
Green, continuous light BYS Off Green, flashing Green, continuous light BYS Off Green, flashing Green, continuous light Device in passive state or PROFINET wave function active Device on PROFIsafe active Red, flashing Red, continuous light PROFIsafe communication not initialized or switched off PROFIsafe active Red, flashing Red, continuous light PROFIsafe configuration failed PROFINET communication error PROFINET communication not initialized or inactive Green, flashing PROFINET bus initialization or PROFINET wave function active PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, flashing Ethernet configuration failed, no data exchange or exchange of invalata Red, continuous light DI LNK/ACTI Green, continuous light Ethernet link present Green, continuous light Ethernet link present Ethernet link active, no current data transmission Ethernet link active, current data transmission		Red, continuous light	Error during self test or internal communication problems
8 PS Off PROFIsafe communication not initialized or switched off Green, flashing Device in passive state or PROFINET wave function active Green, continuous light Device on PROFIsafe active Red, flashing PROFIsafe configuration failed Red, continuous light PROFINET communication error 9 NET Off Green, flashing PROFINET bus initialization or PROFINET wave function active Green, continuous light PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, flashing Ethernet configuration failed, no data exchange or exchange of involata Red, continuous light Bus error, no communication 10 LNK/ACT1 Off Green, continuous light No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Ethernet link active, current data transmission		Green, flashing	PROFINET wave function active
Green, flashing Green, continuous light Red, flashing Red, continuous light Red, flashing Red, flashing Red, flashing Red, continuous light Red, continuou		Green, continuous light	Device switched on, supply voltage applied, no internal error
Green, continuous light Red, flashing Red, continuous light PROFIsafe communication error PROFINET communication not initialized or inactive PROFINET bus initialization or PROFINET wave function active PROFINET active, data exchange with IO controller active PROFINET active, data exchange with IO controller active PROFINET active, data exchange with IO controller active PROFINET active, data exchange or exchange of involata Red, flashing Red, continuous light Bus error, no communication 10 LNK/ACT1 Off Reen, continuous light Green, continuous light Ethernet link present Green, continuous light Ethernet link active, no current data transmission Ethernet link active, current data transmission	8 PS	Off	PROFIsafe communication not initialized or switched off
Red, flashing PROFIsafe configuration failed PROFIsafe communication error PROFIsafe communication error PROFINET communication not initialized or inactive PROFINET bus initialization or PROFINET wave function active Green, continuous light PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, flashing Ethernet configuration failed, no data exchange or exchange of involution active PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, continuous light Bus error, no communication 10 LNK/ACT1 Off No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Ethernet link active, current data transmission		Green, flashing	Device in passive state or PROFINET wave function active
Red, continuous light PROFIsafe communication error PROFINET communication not initialized or inactive PROFINET communication not initialized or inactive PROFINET bus initialization or PROFINET wave function active PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, flashing Red, continuous light PROFINET active, data exchange with IO controller active Ethernet configuration failed, no data exchange or exchange of invadat Red, continuous light Bus error, no communication No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Ethernet link active, current data transmission		Green, continuous light	Device on PROFIsafe active
9 NET Off PROFINET communication not initialized or inactive Green, flashing PROFINET bus initialization or PROFINET wave function active Green, continuous light PROFINET active, data exchange with IO controller active Orange, flashing Ethernet topology error Red, flashing Ethernet configuration failed, no data exchange or exchange of involata Red, continuous light Bus error, no communication No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Green/orange, flashing Ethernet link active, current data transmission		Red, flashing	PROFIsafe configuration failed
Green, flashing PROFINET bus initialization or PROFINET wave function active Green, continuous light Orange, flashing Ethernet topology error Red, flashing Ethernet configuration failed, no data exchange or exchange of involata Red, continuous light Bus error, no communication No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Ethernet link active, current data transmission		Red, continuous light	PROFIsafe communication error
Green, continuous light Orange, flashing Ethernet topology error Red, flashing Ethernet configuration failed, no data exchange or exchange of involata Red, continuous light Red, continuous light Bus error, no communication No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Ethernet link active, current data transmission	9 NET	Off	PROFINET communication not initialized or inactive
Orange, flashing Red, flashing Red, continuous light Bus error, no communication 10 LNK/ACT1 Green, continuous light Green/orange, flashing Ethernet topology error Ethernet configuration failed, no data exchange or exchange of involata Bus error, no communication No Ethernet link present Ethernet link active, no current data transmission Ethernet link active, current data transmission		Green, flashing	PROFINET bus initialization or PROFINET wave function active
Red, flashing Red, continuous light Bus error, no communication 10 LNK/ACT1 Green, continuous light Bus error, no communication No Ethernet link present Ethernet link active, no current data transmission Ethernet link active, current data transmission		Green, continuous light	PROFINET active, data exchange with IO controller active
data Red, continuous light Bus error, no communication No Ethernet link present Green, continuous light Green/orange, flashing data Bus error, no communication No Ethernet link present Ethernet link active, no current data transmission Ethernet link active, current data transmission		Orange, flashing	Ethernet topology error
10 LNK/ACT1 Off No Ethernet link present Green, continuous light Ethernet link active, no current data transmission Green/orange, flashing Ethernet link active, current data transmission		Red, flashing	Ethernet configuration failed, no data exchange or exchange of invalid data
Green, continuous light Green/orange, flashing Ethernet link active, no current data transmission Ethernet link active, current data transmission		Red, continuous light	Bus error, no communication
Green/orange, flashing Ethernet link active, current data transmission	10 LNK/ACT1	Off	No Ethernet link present
		Green, continuous light	Ethernet link active, no current data transmission
		Green/orange, flashing	Ethernet link active, current data transmission
11 LNK/ACT2 Off No Ethernet link present	11 LNK/ACT2	Off	No Ethernet link present
Green, continuous light Ethernet link active, no current data transmission		Green, continuous light	Ethernet link active, no current data transmission
Green/orange, flashing Ethernet link active, current data transmission		Green/orange, flashing	Ethernet link active, current data transmission

Notes



Observe intended use!



\$ Only use the product in accordance with its intended use.



WARNING! INVISIBLE LASER RADIATION - CLASS 1 LASER PRODUCT



The device satisfies the requirements of IEC 60825-1:2014 (EN 60825-1:2014) safety regulations for a product of laser class 1 as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 56" from May 8, 2019.

- The device must not be tampered with and must not be changed in any way. There are no user-serviceable parts inside the device. Repairs must only be performed by Leuze electronic GmbH + Co. KG.

Accessories



Connection technology - Interconnection cables

	Part no.	Designation	Article	Description
	50135081	KSS ET-M12-4A- RJ45-A-P7-050	Interconnection cable	Suitable for interface: Ethernet Connection 1: Connector, M12, Axial, Male, D-coded, 4 -pin Connection 2: RJ45 Shielded: Yes Cable length: 5,000 mm Sheathing material: PUR
	50135082	KSS ET-M12-4A- RJ45-A-P7-100	Interconnection cable	Suitable for interface: Ethernet Connection 1: Connector, M12, Axial, Male, D-coded, 4 -pin Connection 2: RJ45 Shielded: Yes Cable length: 10,000 mm Sheathing material: PUR
	50135083	KSS ET-M12-4A- RJ45-A-P7-150	Interconnection cable	Suitable for interface: Ethernet Connection 1: Connector, M12, Axial, Male, D-coded, 4 -pin Connection 2: RJ45 Shielded: Yes Cable length: 15,000 mm Sheathing material: PUR

Mounting technology - Mounting brackets

	Part no.	Designation	Article	Description
	53800134	BT840M	Mounting bracket	Application: Mounting on chamfered 90° corner Dimensions: 84.9 mm x 72 mm x 205.2 mm Color: Yellow, RAL 1021 Type of fastening, at system: Through-hole mounting Type of fastening, at device: Screw type Material: Metal
2	53800132	BTF815M	Mounting bracket	Application: Mounting bracket for floor mounting Dimensions: 186 mm x 120 mm x 288 mm Scan level height: 150 mm Color: Yellow, RAL 1021 Type of fastening, at system: Through-hole mounting Type of fastening, at device: Screw type Material: Metal
A	53800133	BTF830M	Mounting bracket	Application: Mounting bracket for floor mounting Dimensions: 186 mm x 275 mm x 288 mm Scan level height: 300 mm Color: Yellow, RAL 1021 Type of fastening, at system: Through-hole mounting Type of fastening, at device: Screw type Material: Metal

Mounting

	Part no.	Designation	Article	Description
P	53800131	ВТР800М	Loop guard	Dimensions: 160 mm x 169 mm Color: Black Material: Metal

Accessories



General

	Part no.	Designation	Article	Description
A	430400	RS4-clean-Set1	Cleaning set	Number of cleaning cloths: 40 Piece(s) Content of cleaning fluid: 150 ml

Services

Part no.	Designation	Article	Description
S981051	CS40-I-141	Safety inspection "Safety laser scanners"	Details: Checking of a safety laser scanner application in accordance with current standards and guidelines. Inclusion of the device and machine data in a database, production of a test log per application. Conditions: It must be possible to stop the machine, support provided by customer's employees and access to the machine for Leuze employees must be ensured. Restrictions: Travel costs and accommodation expenses charged separately and according to expenditure.
S981047	CS40-S-141	Start-up support	Details: For safety devices including stopping time measurement and initial inspection. Conditions: Devices and connection cables are already mounted, price not including travel costs and, if applicable, accommodation expenses. Restrictions: Max. 3 h., no mechanical (mounting) and electrical (wiring) work performed, no changes (attachments, wiring, programming) to third-party components in the nearby environment.

Note



🔖 A list with all available accessories can be found on the Leuze website in the Download tab of the article detailed page.